

DDC ECONOMIZER WITH SINGLE-ENTHALPY (DOWNFLOW) MICROMETL ECONOMIZER WITH HONEYWELL CONTROLLER

 
 
Factory or Field-Installed

RXRD-01MDDBM3

RXXRX-BV02—Dual Enthalpy Kit DDC (for Honeywell DDC)

RXXRX-AR02—Sensor, Carbon Dioxide (Wall Mount)

- Features **Honeywell** Controls
- Available Factory Installed or Field Accessory
- Gear Driven Direct Drive Actuator
- Fully Modulating (0-100%)
- Ultra Low Leak Dampers meet California Title 24 requirements
- Slip-In Design for Easy Installation
- Standard Barometric Relief Damper
- Single Enthalpy with Dual Enthalpy Upgrade Kit Option
- CO₂ Input Sensor Option
- Field Assembled Hood Ships with Economizer
- Economizer Ships Complete for Downflow Duct Application
- Optional Remote Minimum Position Potentiometer (270 ohm) (Honeywell #S963B1136) is Available from Prostock
- Field Installed Power Exhaust Option
- Prewired for Smoke Detector
- If connected to a Building Automation System (BAS), all economizer functions can be viewed on the (BAS), or 16 x 2 LCD screen
- If connected to thermostat, all economizer functions can be viewed on 16 x 2 LCD screen

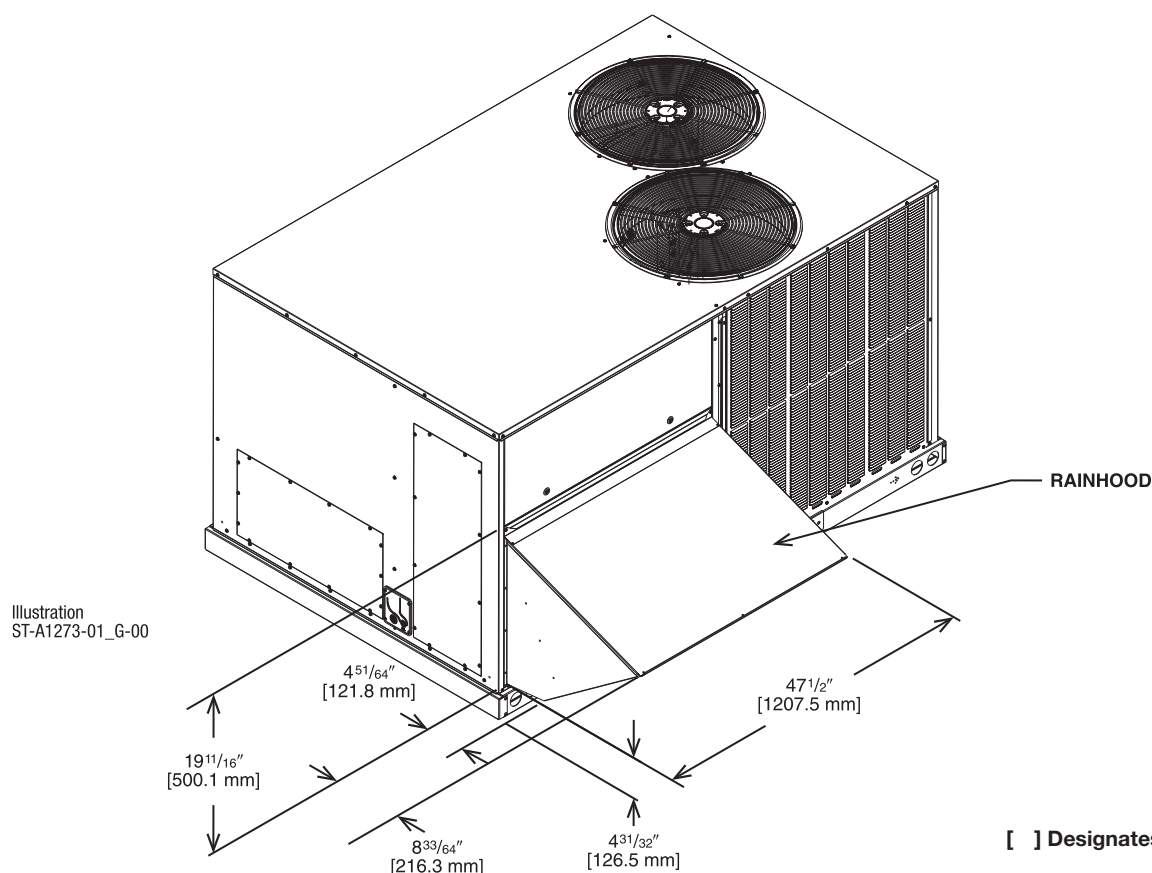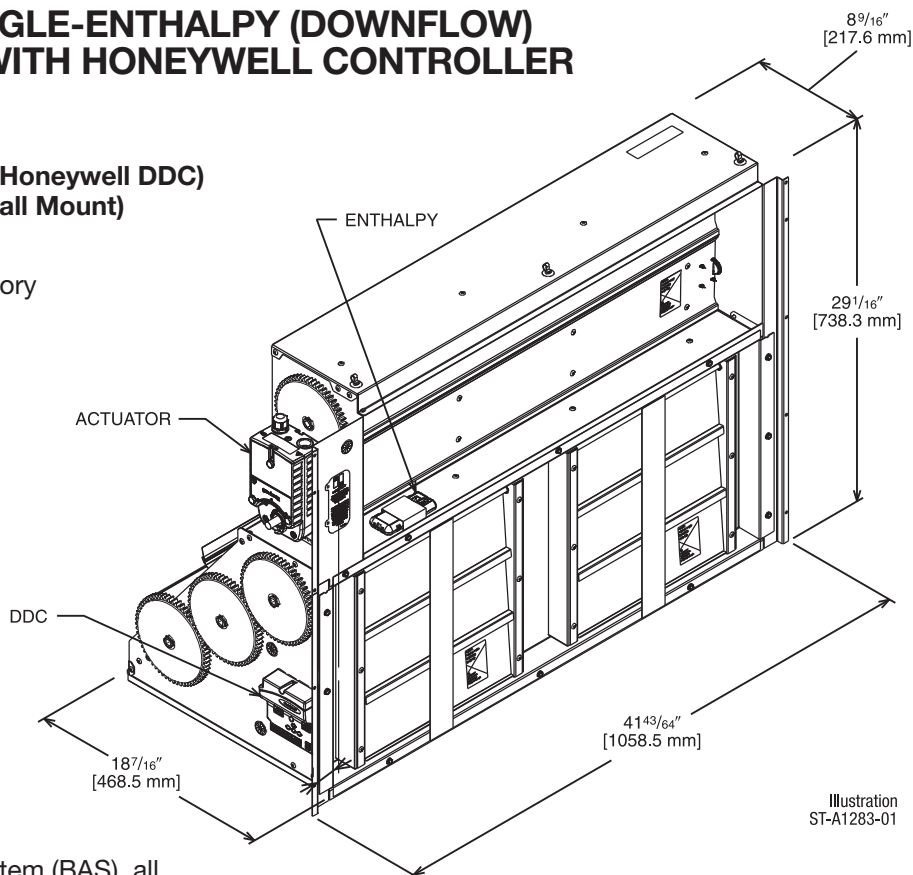

[] Designates Metric Conversions

DDC ECONOMIZER W/SINGLE ENTHALPY (HORIZONTAL) MICROMETL ECONOMIZER WITH HONEYWELL CONTROLLER

Field Installed Only

RXRD-01MDHBM3

RXRX-BV02—Dual Enthalpy Kit DDC (for Honeywell DDC)

RXRX-AR02—Sensor, Carbon Dioxide (Wall Mount)

- Features **Honeywell** Controls
- Available as a Field Installed Accessory Only
- Gear Driven Direct Drive Actuator
- Fully Modulating (0-100%)
- Ultra Low Leak Dampers meet California Title 24 requirements
- Slip-In Design for Easy Installation
- Standard Barometric Relief Damper
- Single Enthalpy with Dual Enthalpy Upgrade Kit Option
- CO₂ Input Sensor Option
- Field Assembled Hood Ships with Economizer
- Economizer Ships Complete for Horizontal Duct Application
- Optional Remote Minimum Position Potentiometer (270 ohm) (Honeywell #S963B1136) is Available from Prostock
- Field Installed Power Exhaust Option
- If connected to a Building Automation System (BAS), all economizer functions can be viewed on the (BAS), or 16 x 2 LCD screen
- If connected to thermostat, all economizer functions can be viewed on 16 x 2 LCD screen

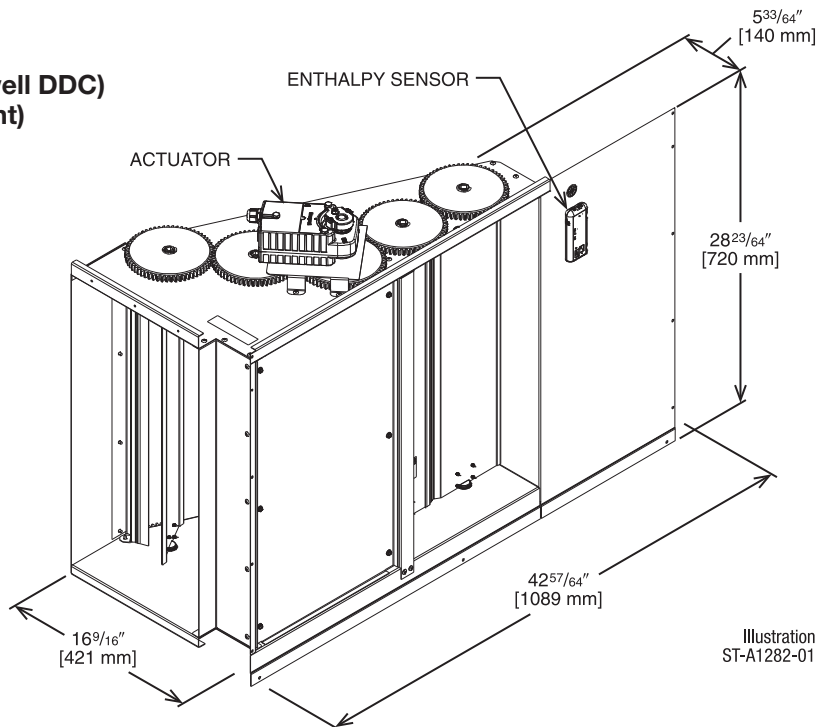 


Illustration
ST-A1282-01

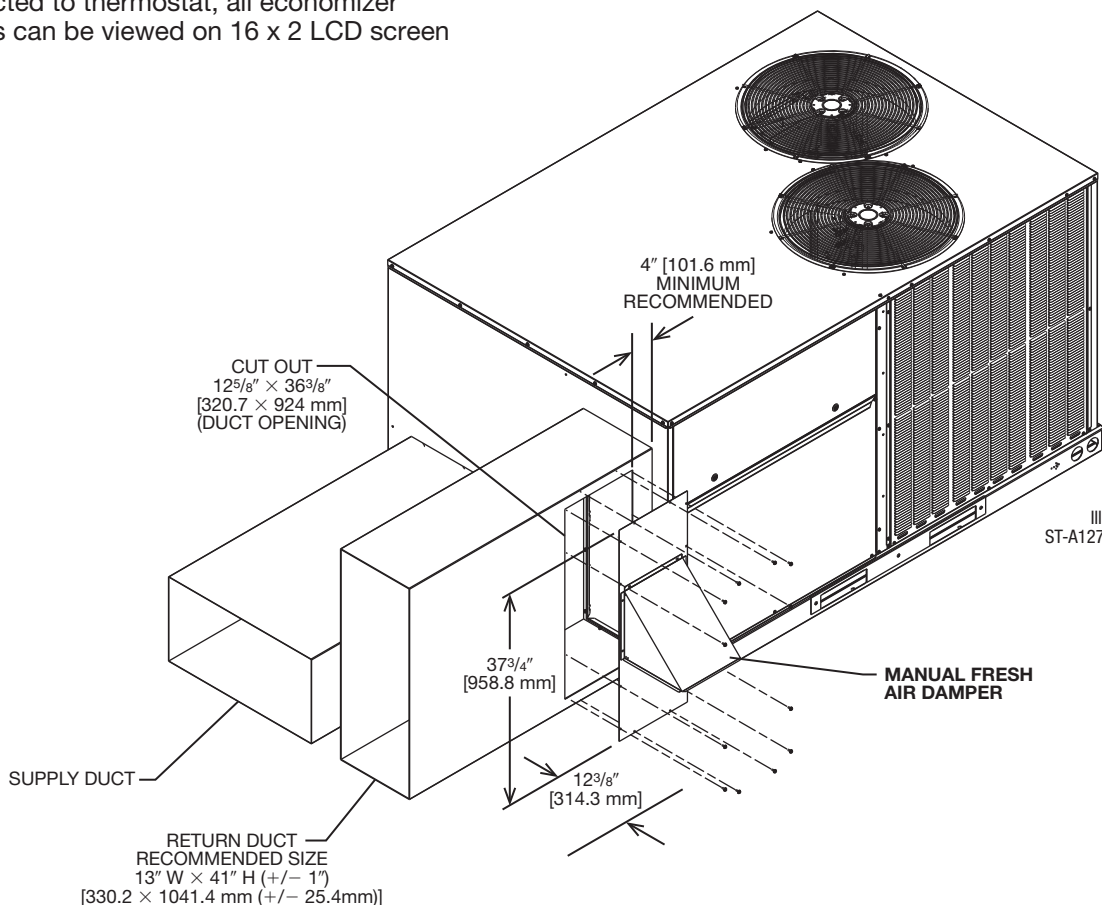 


Illustration
ST-A1273-04-01

[] Designates Metric Conversions

ECONOMIZER UNIVERSAL DDC INTERFACE KIT

Available Factory or Field Installed


RXXRX-DDC01

- Allows any Non-DDC Economizer to be used with a ClearControl DDC model
- Mounts on the Economizer
- Provides Mounting location for Economizer Controller
- Provides wire management for excess wire

NOTE: Older DDC Models, prior to A2L, may require a field update to the ClearControl Software. The minimum version required is 3.15. A2L Models will come with software version 4.0 or higher.


Drawings shown here may not be an exact representation of every economizer.

 HORIZONTAL FLOW DDC BRACKET SETUP

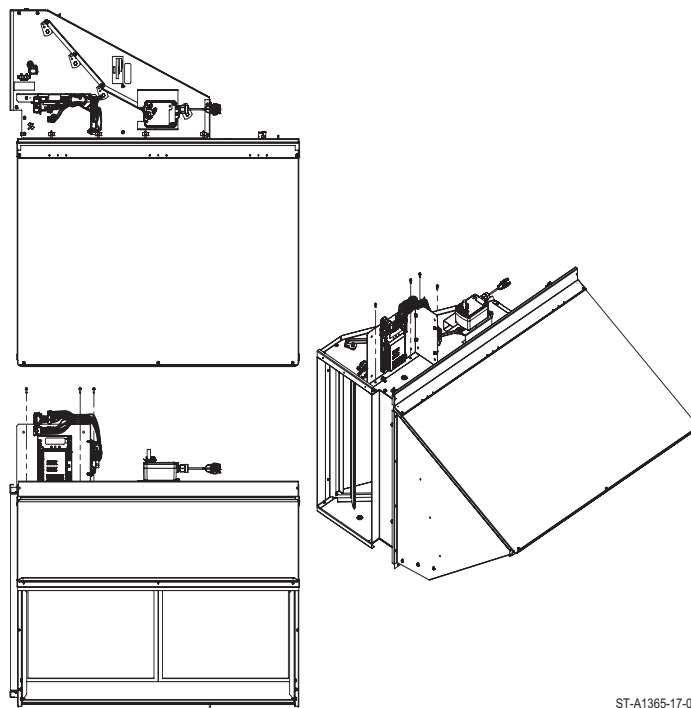

ST-A1365-17-00

 DOWNFLOW ECONOMIZER DDC BRACKET SETUP

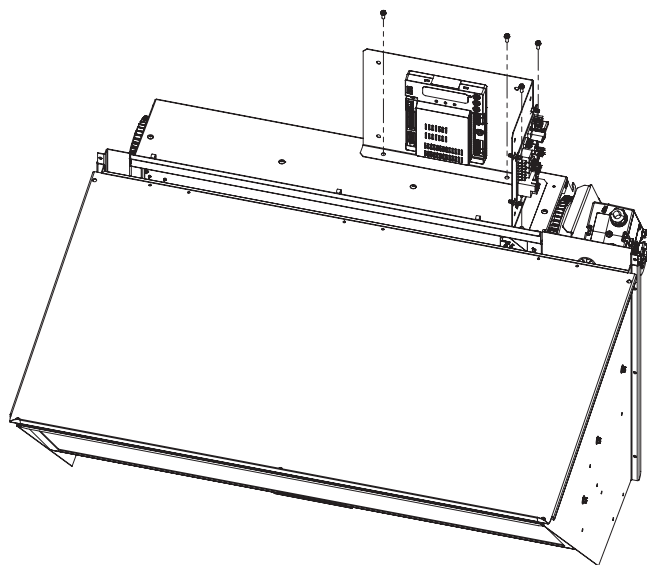

ST-A1365-13-01