

Exercise caution when removing heavy parts.

6. Heat exchanger

1. Remove the drain pan according to the procedure in section 3.
2. Remove the heat exchanger cover according to the procedure in section 4.2.
3. Removing the cover
 - (1) Remove the five fixing screws on the cover (K) to remove it.
 - Tighten screws to a torque of 2.0 ± 0.2 N·m.

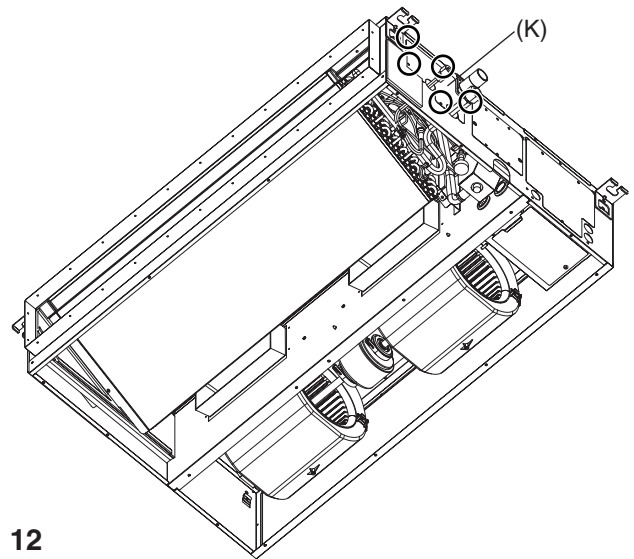


Fig. 12

4. Removing the Heat exchanger
 - (1) Remove the fixing screws on the heat exchanger (L) to remove it.
 - Tighten screws to a torque of 1.4 ± 0.2 N·m.

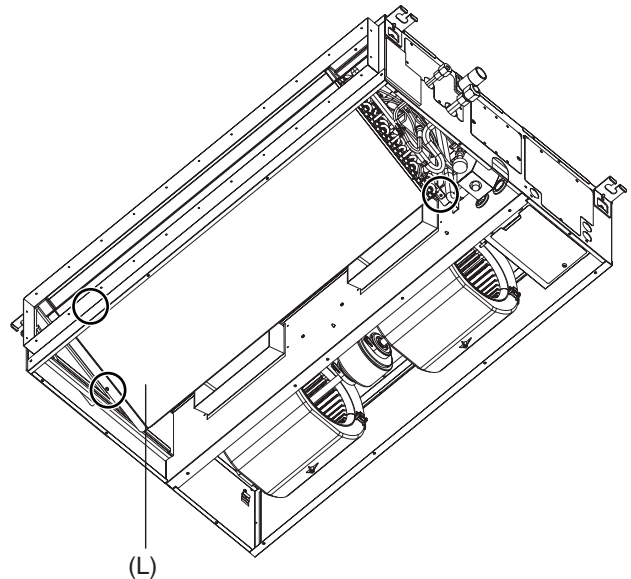


Fig. 13

mitsubishi electric corporation

<http://Global.MitsubishiElectric.com>
