

AIR FLOW ADJUSTMENTS

When the final adjustments are complete, the current draw of the motor should be checked and compared to the full load current rating of the motor. The amperage must not exceed the service factor stamped on the motor nameplate. The total airflow must not be less than that required for operation of the furnace.

If an economizer is installed, check the unit operating balance with the economizer at full outside air and at minimum outside air.

NOTE: NEVER RUN HIGH STAGE CFM BELOW 300 CFM PER TON, EVAPORATOR FREEZING OR POOR UNIT PERFORMANCE IS POSSIBLE.

EEM - STANDARD STATIC DRIVE MOTOR

Adjust the CFM for the unit by changing the position of the low voltage leads on the terminal block TB1. Refer to Appendix A for blower performance at each speed tap. The table below shows RECOMMENDED SPEED TAPS for heating and cooling. Refer to Appendix D for maximum and minimum allowed airflow for heating and cooling.

HOW TO SET FAN SPEED

SET EVAPORATOR FAN RPM

Actual RPM's must be set and verified with a tachometer or strobe light. Refer to Appendix A for basic unit fan RPM. Refer also to "Airflow" section of this manual. With disconnect switch open, disconnect thermostat wires from terminals Y and W. This will prevent heating and mechanical cooling from coming on. Place a jumper wire across terminals R and G at TB1 terminal block. Close disconnect switch; evaporator fan motor will operate so RPM can be checked.

ELECTRICAL INPUT CHECK

Make preliminary check of evaporator fan ampere draw and verify that motor nameplate amps are not exceeded. A final check of amp draw should be made upon completion of air balancing of the duct system (see Appendix B).

GAS SYSTEM CHECK

GAS SUPPLY PRESSURES & REGULATOR ADJUSTMENTS



WARNING

SHOULD OVERHEATING OCCUR OR THE GAS SUPPLY FAIL TO SHUT OFF, TURN OFF THE MANUAL GAS SHUTOFF VALVE EXTERNAL TO THE UNIT BEFORE TURNING OFF THE ELECTRICAL SUPPLY.




WARNING

TO AVOID PROPERTY DAMAGE, PERSONAL INJURY OR DEATH, DO NOT FIRE GAS UNIT WITH FLUE BOX COVER REMOVED.

NOTE: EXCEPT DURING BRIEF PERIODS WHEN GAS PRESSURES ARE BEING MEASURED BY QUALIFIED SERVICE PERSONNEL, THE FURNACE ACCESS PANEL MUST ALWAYS BE SECURED IN PLACE WHEN THE FURNACE IS IN OPERATION. AN INSPECTION PORT IN THE ACCESS PANEL IS PROVIDED TO MONITOR THE FLAME.

The first step in checking out the gas-fired furnace is to test the gas supply piping to the unit for tightness and purge the system of air using methods outlined in the latest edition of the National Fuel Gas Code ANSI Z223.1 / NFPA 54. Verify that the disconnect switch is in the "OFF" position. A soapy water solution should be used to check for gas leaks. Since the unit is subject to considerable jarring during shipment, it is extremely important that all gas connections and joints be tested for tightness. Gas piping downstream from the unit inlet should be checked for leaks during the subsequent sequence check.

The supply gas pressure should be adjusted to 7.0" w.c. on natural gas and 11.0" on LP gas with the gas burners operating. If there is more than one unit on a common gas line, the pressures should be checked with all units under full fire. A supply pressure tap is provided on the upstream side of the gas valve. A manifold pressure tap is provided on the manifold. The normal manifold pressure for full input is 3.5" w.c. on natural gas and 10.0" w.c. for propane gas. Minimum gas supply pressure is 5.5" w.c. for natural gas and 11.0" for propane gas. In order to obtain rating, gas supply pressure must be 11.0" w.c. for propane gas. The pressure regulator on LP gas models is adjusted for 10.0" w.c. manifold pressure and is intended to prevent over-firing only. Do not attempt adjustment of the built-in pressure regulator unless the supply pressure is at least 7.0" w.c. on natural gas or 14.0" w.c. on propane gas. Check the location of the ignition electrode and the flame sensor for correct gap setting.

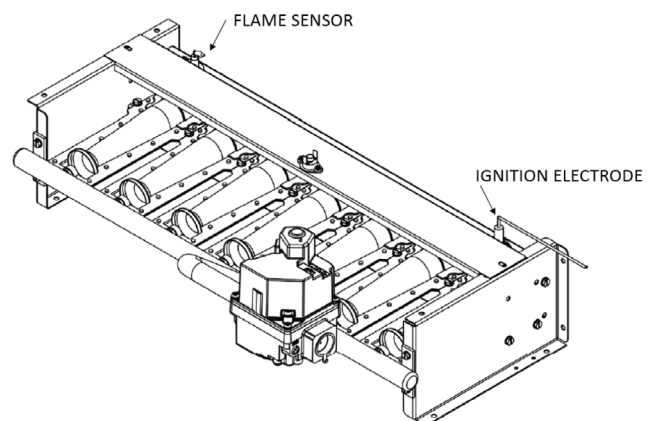

FLAME SENSOR AND IGNITION ELECTRODE LOCATION

FIGURE 13

Ton	Model	High Fire Rate Btu/Hr	No. of Burners	N.G. Orifice Drill #	L.P. Orifice Drill #
7.5	DSG090	130,000	5	41	54
		180,000	6	37	53
		225,000	7	36	52
8.5	DSG102	130,000	5	41	54
		180,000	6	37	53
		225,000	7	36	52
10	DSG120	130,000	5	41	54
		180,000	6	37	53
		240,000	7	36	52
12.5	DSG150	130,000	5	41	54
		180,000	6	37	53
		240,000	7	36	52

HEAT EXCHANGER AND BURNER ORIFICE SPECIFICATIONS

NOTE: GAS APPLIANCES LOCATED MORE THAN 2000 FEET ABOVE SEA LEVEL MUST BE DERATED 4% PER 1000 FEET OF TOTAL ELEVATION AND THAT VARIANCE IN GAS HEATING VALUE AND SPECIFIC GRAVITY REQUIRE CHANGE IN MANIFOLD PRESSURE TO OBTAIN RATING, IT IS MANDATORY THAT THE INPUT BE ADJUSTED AT THE INSTALLATION SITE. ALL INSTALLATIONS SHOULD BE MADE AS OUTLINED IN THE LATEST EDITION OF THE NATIONAL FUEL GAS CODE ANSI Z223.1, SECTION "PROCEDURES TO BE FOLLOWED TO PLACE AN APPLIANCE IN OPERATION". REFER ALSO TO THE "USER'S INFORMATION MANUAL" SUPPLIED WITH THE UNIT FOR ADDITIONAL INFORMATION ON THE GAS FURNACE.

GAS SUPPLY AND MANIFOLD CHECK

Gas supply pressure and manifold pressure with the burners operating must be as specified on the rating plate.

GAS INLET PRESSURE CHECK

Gas inlet pressure must be checked and adjusted in accordance to the type of fuel being consumed.

PRE-OPERATION CHECKS

1. Close the manual gas valve external to the unit.
2. Turn off the electrical power supply to the unit.
3. Change heating setpoint to its lowest possible setting.
4. Remove the heat exchanger door on the side of the unit by removing screws.
5. This unit is equipped with an ignition device which automatically lights the main burner. DO NOT try to light burner by any other method.
6. Move the gas control valve switch to the OFF position.
7. Wait five minutes to clear out any gas.
8. Smell for gas, including near the ground. This is important because some types of gas are heavier than air. If you have waited five minutes and you do smell gas, immediately follow the warning WHAT TO DO IF YOU SMELL GAS on page 2 of this manual. If having waited for five minutes and no gas smell is noted, move the gas control valve switch to the ON position.

9. Replace the heat exchanger door on the side of the unit.
10. Open the manual gas valve external to the unit.
11. Turn on the electrical power supply to the unit.
12. Change heating setpoint to desired setting.

WITH POWER AND GAS OFF:

1. Connect a water manometer or adequate gauge to the inlet pressure tap of the gas valve.

Inlet gas pressure can also be measured by removing the cap from the dripleg and installing a predrilled cap with a hose fitting.

NOTE: BEFORE REMOVING THE CAP ON THE DRIP LEG TURN OFF THE MAIN GAS VALVE.

WITH POWER AND GAS ON:

2. Put unit into heating cycle and turn on all other gas consuming appliances.

INLET GAS PRESSURE	
NATURAL	Min. 5.0" W.C., Max. 10.0" W.C.
PROPANE	Min. 11.0" W.C., Max. 14.0" W.C.

NOTE: INLET GAS PRESSURE MUST BE WITHIN LIMITS SHOWN ABOVE.

If operating pressures differ from above, make necessary pressure regulator adjustments, check piping size, etc., and/or consult with local utility.

MANIFOLD PRESSURE CHECK AND ADJUSTMENT

The gas valve has a pressure tap to facilitate measurement of the manifold pressure. The manifold pressure must be measured with the burners operating.

1. With disconnect switch open, remove field connected thermostat wire from terminal R, W1 and W2 on TB1. Place jumper wire between R, W1 and W2 to engage high stage heat.
2. See Figure in gas input check section for gas valve adjustment.

To adjust the pressure regulator, remove the adjustment screw cover on the gas valve. Turn the adjustment screw out (counterclockwise) to decrease pressure, turn in (clockwise) to increase pressure. Only small variations in gas flow should be made by means of the pressure regulator adjustment. Any major changes in flow should be made by changing the size of the burner orifices. The measured input rate to the furnace must not exceed the rating specified on the unit rating plate.

For natural gas, the high stage manifold pressure must be between 3.2 and 3.8 inches water column (3.5 nominal). Low stage manifold pressure must be between 1.7 to 2.3 inches water column (2.0 nominal).

3. To set low fire rate, open disconnect switch and remove jumper from R to W2. To set low fire manifold pressure, repeat steps above. Refer to Figure in gas input check section for location of high and low stage pressure adjustment.

For propane gas, the manifold pressure must be between 9.7 and 10.3 inches water column (10.0 nominal). Low stage manifold must be between 5.7 and 6.3 inches water column (6.0 nominal).

GAS INPUT (NATURAL GAS ONLY) CHECK

It is the responsibility of the contractor to adjust the gas input to the unit.

To measure the gas input use a gas meter and proceed as follows:

1. Turn off gas supply to all other appliances except the unit.
2. With the unit operating, time the smallest dial on the meter for one complete revolution. If this is a 2 cubic foot dial, divide the seconds by 2; if it is a 1 cubic foot dial, use the seconds as is. This gives the seconds per cubic foot of gas being delivered to the unit.
3. $\text{INPUT} = \text{GAS HTG VALUE} \times 3600 / \text{SEC. PER CUBIC FOOT}$


Example: Natural gas with a heating value of 1000 BTU per cubic foot and 34 seconds per cubic foot as determined by Step 2, then:

$$\text{Input} = 1000 \times 3600 / 34 = 106,000 \text{ BTU per Hour.}$$

NOTE: BTU CONTENT OF THE GAS SHOULD BE OBTAINED FROM THE GAS SUPPLIER. THIS MEASURED INPUT MUST NOT BE GREATER THAN SHOWN ON THE UNIT RATING PLATE.

Adjust input rate by varying the adjustment of the gas pressure regulator on the gas valve. All adjustments must be made with furnace operating at high fire and at normal operating temperature. A manometer should be connected to the gas valve to verify pressure is within the specified range (see following figures for manometer connections). Clockwise rotation of the pressure regulator screw increases pressure and gas flow rate. Turn screw counterclockwise to decrease pressure and gas flow rate. After adjustment the furnace temperature rise must be within the range specified on the unit data plate.

NOTE: THERMAL EFFICIENCY OF THE FURNACE IS A PRODUCT EFFICIENCY RATING DETERMINED UNDER CONTINUOUS OPERATING CONDITIONS INDEPENDENT OF ANY INSTALLED SYSTEM.

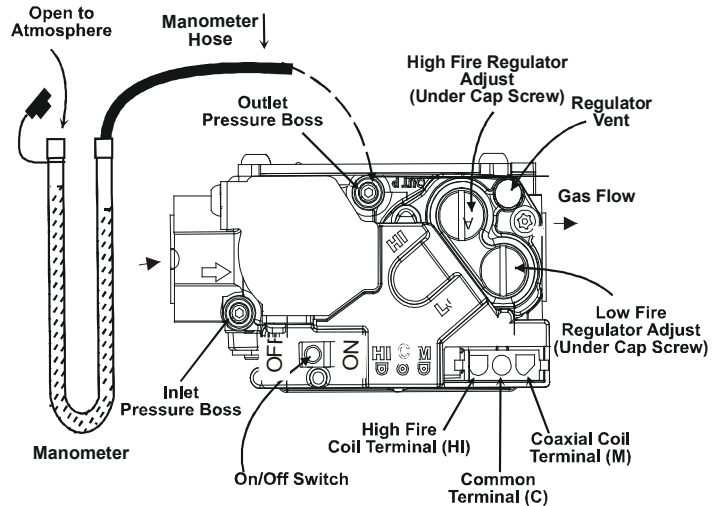

**WHITE-RODGERS (2-STAGE) GAS CONTROL VALVE
CONNECTED TO MANOMETER PRESSURE ADJUSTMENTS
FIGURE 14**

To connect manometer to gas valve:

1. Back outlet pressure tap screw (inside inlet pressure boss) out one turn (counterclockwise, not more than one turn).
2. Attach a hose and manometer to the outlet pressure boss of the valve.

To remove manometer from gas valve:

1. Remove manometer hose from outlet pressure boss.
2. Turn outlet pressure tap screw in to seal pressure port (clockwise, 7 in-lb. minimum).
3. Turn on electrical power and gas supply to the system.
4. Turn on system power and energize valve.
5. Using a leak detection solution or soap suds, check for leaks at pressure boss screw. Bubbles forming indicate a leak. SHUT OFF GAS AND FIX ALL LEAKS IMMEDIATELY.



CAUTION

TO PREVENT UNRELIABLE OPERATION OR EQUIPMENT DAMAGE, THE GAS MANIFOLD PRESSURE MUST BE AS SPECIFIED ON THE UNIT RATING PLATE. ONLY MINOR ADJUSTMENTS SHOULD BE MADE BY ADJUSTING THE GAS VALVE PRESSURE REGULATOR.

6. Relight all other appliances turned off in step 1 of gas input check. Be sure all pilot burners are operating.

MAIN BURNER FLAME CHECK

Flames should be stable, soft and blue (dust may cause orange tips but they must not be yellow) and extending directly outward from the burner without curling, floating or lifting off.

NOx SCREEN CHECK

Verify that the alignment of the NOx screens is at 6 o'clock. In jurisdictions that do not require low NOx emissions, NOx screens may be removed.

TEMPERATURE RISE CHECK

Check the temperature rise through the unit by placing thermometers in supply and return air registers as close to the unit as possible. Thermometers must not be able to sample temperature directly from the unit heat exchangers, or false readings could be obtained.

1. All registers must be open; all duct dampers must be in their final (fully or partially open) position and the unit operated for 15 minutes before taking readings
2. The temperature rise must be within the range specified on the rating plate.

NOTE: AIR TEMPERATURE RISE IS THE TEMPERATURE DIFFERENCE BETWEEN SUPPLY AND RETURN AIR.

With a properly designed system, the proper amount of temperature rise will normally be obtained when the unit is operated at rated input with the recommended blower speed.

If the correct amount of temperature rise is not obtained, it may be necessary to change the blower speed. A higher blower speed will lower the temperature rise. A slower blower speed will increase the temperature rise.

NOTE: BLOWER SPEED MUST BE SET TO GIVE THE CORRECT AIR TEMPERATURE RISE THROUGH THE UNIT AS MARKED ON THE RATING PLATE.

NORMAL SEQUENCE OF OPERATION

HEATING

NOTE: ON UNITS WITH THE DDC CONTROLS OPTION INSTALLED, REFER TO THE DDC CONTROLLER USER MANUAL FOR SEQUENCE OF OPERATION DETAILS.

This unit has one (RS) Manual Reset Limit Control Switch. Check the limit to make sure it has not tripped. The limit may arrive at the job site tripped as a result of shipping shock.

If the induced draft motor comes on, but the unit does not attempt ignition, check if the ALS (Auxiliary High Limit Control Switch) requires resetting.

1. With electricity and gas turned on, the system switch in the "HEAT" or "AUTO" position and the fan switch in the "AUTO" position, the thermostat will close the circuit between unit terminals R and W (R-W) when the temperature falls below the thermostat setting.
2. D1 on IIC energizes induced draft motor contactor.
3. Induced draft motor contactor energizes the induced draft motor.
4. Operation of the induced draft motor closes

the pressure switch PS located in the burner compartment. Unless excessive temperatures or shipping shock have opened high limit control ALS, power is fed to the integrated ignition control, which then initiates a 15-second pre-purge time delay. During this period, the venter fan will clear the combustion chamber of any residual gas.

5. After the pre-purge period, the ignition control energizes the WI-C gas valve and simultaneously initiates a "three (3)-try" spark ignition sequence.
6. When the burners are ignited, a minimum one (1) micro-amp DC current will flow through the flame between the sensor electrode and the grounded burner.
7. When the controller proves that the flame has been established, it will keep the gas valve energized and discontinue the ignition spark.
8. If the control is unable to ignite the burners after its initial attempt, it will initiate another purge and spark sequence. A third purge and spark sequence will be initiated if the second attempt is unsuccessful. If the third attempt is unsuccessful, the controller will close the gas valve and lock itself out. It may be reset by momentarily interrupting power. This may be accomplished by briefly lowering the room thermostat set-point below room temperature, or by shutting off the main power to the unit.
9. Integrated ignition control will close its normally open contacts after a delay of approximately 30 seconds. This action energizes the blower motor contactor and starts the blower motor. Operation of the blower circulates air across the heat exchanger and delivers heated air to the conditioned space.
10. When the space temperature rises, the thermostat will open R-W. Opening R-W will cause the gas valve to close, and the furnace to shut down.
11. The furnace has three high temperature limit controls, which can shut down the burner. They do not shut down the induced draft motor.

UNIT SHUTDOWN

1. Set the room heating setpoint to lowest setting.
2. Turn off the electrical power supply to the unit.
3. Remove the heat exchanger door on the side of the unit by removing screws.
4. Move the gas control valve switch to the OFF position.
5. Close manual gas shut off valve external to the unit.
6. Replace the heat exchanger door on the unit.
7. If cooling and/or air circulation are still desired, turn ON the electrical power supply to the unit.

AUTOMATIC RESET HIGH LIMIT CONTROL (LS)

Located in the burner compartment on the heat exchanger, its sensing element projects through the blower section bulkhead and senses the temperature at the rear of the furnace. It will cycle the furnace off if the temperature exceeds 100°F plus maximum rise.

AUXILIARY HIGH LIMIT CONTROL (ALS)

Located in the blower compartment on the blower housing,

it senses air temperature within the blower compartment and protects the filters from excessive temperature. It will shut down the furnace if it senses excessive temperatures.

Elevated temperatures at the control are normally caused by blower failure. The reason for the shut down should be determined and repaired prior to resetting.

MANUAL RESET FLAME ROLLOUT CONTROL (RS)

Located in the burner compartment at the top of the burner assembly, it senses high temperature that could occur if the heat exchanger tubes were plugged and the flame was rolling out instead of entering the tubes. It has a manual push-button reset that cannot be actuated until the limit control has cooled.

The reason for elevated temperatures at the control should be determined and repaired prior to resetting this manual reset control.

RDS FUNCTION

The mitigation system is a stationary device that detects the presence of R-32 refrigerant above 25% LFL using refrigerant sensors and then initiates mitigation actions. The mitigation system's primary function is to reduce the concentration of leaked R-32 refrigerant to prevent serious safety hazards. The mitigation actions are accomplished by halting HVAC operation and continuing indoor blower operation to provide airflow. Once refrigerant concentration reaches below a safe threshold, the unit will remain in mitigation mode for five minutes to evacuate any remaining R-32 refrigerant within the unit. Upon completion, the unit will resume its normal operation.

RDS OPERATION

The mitigation system is controlled by a refrigerant sensor(s), which is secured to a designated location(s) for active monitoring. If a leak is detected, HVAC operation is disabled and the indoor blower fan is activated, providing airflow at or above minimum required airflow to evacuate excess concentration. If a Zone Control system is installed in the ductwork attached to this system, the Zone controller must be powered through a Daikin Zoning/Accessory PCB to ensure that the Zoning Dampers open during mitigation mode to provide ventilation throughout all ducting. If the unit is installed with a communicating thermostat, the thermostat will display relevant alerts/information concerning mitigation mode. Once sensors read concentration levels below a safe threshold, a five-minute timer will initiate. Once the time is over, the unit will resume back to its normal operation. If the sensors detect another concentration excess, the unit will go back into mitigation mode and will repeat the same process.



WARNING

TO AVOID PROPERTY DAMAGE, PERSONAL INJURY OR DEATH DUE TO FIRE OR EXPLOSION, A QUALIFIED SERVICER MUST INVESTIGATE THE REASON FOR THE ROLLOUT PROTECTION DEVICE TO OPEN BEFORE MANUALLY RESETTING THE ROLLOUT PROTECTION DEVICE.

REFRIGERATION SYSTEM CHECKS

This unit is equipped with thermal expansion valves.

Ensure the hold-down bolts on the compressor are secure and have not vibrated loose during shipment. Check that the vibration grommets have been installed and visually check all piping for damage and leaks and repair if necessary. The entire system has been factory charged and tested, making it unnecessary to field charge. Factory refrigerant charge is shown on the unit's nameplate.

To confirm charge levels or, if a leak occurs and charge needs to be added to the system, it is recommended to evacuate the system and recharge refrigerant to the unit's nameplate specifications. This unit has been rated in the cooling mode at the AHRI rated conditions of: indoor (80°F db/67°F wb) and outdoor (95°F db). While operating at this condition, the superheat should range from 9°F to 11°F for each refrigeration circuit measured at the suction service port located near the compressor.

START-UP PROCEDURE AND CHECKLIST

Begin with power turned off at all disconnects.

1. Turn thermostat system switch to "Cool," and fan switch to "Auto" and turn temperature setting as high as it will go.
2. Inspect all registers and set them to the normal open position.
3. Turn on the electrical supply at the disconnect.
4. Turn the fan switch to the "ON" position. The blower should operate after a 7 second delay.
5. Turn the fan switch to "Auto" position. The blower should stop after a 60 second delay.
6. Slowly lower the cooling temperature until first stage COOL (LOW COOL) starts. The blower, both fans, and first stage compressor should now be operating. Allow the unit to run 10 minutes, make sure cool air is being supplied by the unit.
7. Lower the cooling temperature further until second stage COOL (HIGH COOL) starts. The blower, both fans, and both compressors should now be operating. Allow the unit to run 10 minutes, make sure cool air is being supplied by the unit.
8. Turn the temperature setting to the highest position, stopping the unit. The indoor blower will continue to run for 60 seconds.
9. Turn the thermostat system switch to "OFF" and disconnect all power when servicing the unit.

REFRIGERATION SEQUENCE CHECK

With the disconnect switch open, remove the field connected thermostat wire from terminal R on TB1 terminal block. Place a jumper across terminals R and G, and across R and Y on TB1 terminal block. Close the disconnect switch. The following operational sequence should be observed.

1. Current through primary winding of transformer TRANS1 energizes the 24-volt control circuit.
2. To simulate a mechanical call for cooling from the wall thermostat, place a jumper across terminals R and Y1 of terminal block TB1.
3. **UNIT WITH ECONOMIZER OPTION:** The compressor circuit is interlocked through terminals 3 and 4 of the economizer module. If the outdoor air enthalpy (temperature and humidity) is not suitable for cooling, the economizer terminals will be closed permitting compressor to be energized.
4. The belt drive blower contactor closes its contacts L1, L2 and L3 to T1, T2 and T3 to provide power to the blower motor.
5. Blower rotation should not be used to identify proper phasing of the unit. For phasing, please refer to step 7 below. If the blower is rotating in the wrong direction, please contact your local distributor or tech services for instructions.
6. Compressor contactor closes its contacts L1, L2 and L3 to T1, T2 and T3 to provide power to the compressor motor COMP 1; COMP 2, if conditions are correct. In addition, contactor C1 closes its contact L3 to T3, energizing the condenser fan motor.



WARNING

BURN HAZARD!
DO NOT TOUCH! DISCHARGE LINE MAY BE HOT!

7. Check that each compressor is operating correctly. The scroll compressors in these units **MUST** operate in the proper rotation. To ensure the compressors are operating in the correct direction, check the compressor discharge line pressure or temperature after each compressor is started. The discharge pressure and discharge line temperature should increase. If this does not occur and the compressor is producing an exceptional amount of noise, perform the following checks.
 - If a single compressor is operating backwards, check the power wiring for that compressor and correct any leads that have been interchanged at the contactor.
 - If both of the compressors are operating backward, disconnect the unit power supply and lock-out tagout in the OFF position. Switch two leads of the power supply at the unit Single Point Power Block. Reconnect power and check for compressor operation.

8. With all safety devices closed, the system will continue cooling operation until the thermostat is satisfied.
9. Disconnecting the jumper wire between R and Y1 and Y2 and between R and G on TB1 terminal block will simulate a satisfied thermostat. The compressor and the condenser fans will cycle off and IIC (pin 12) will initiate its time delay cycle. At the end of the time delay the indoor blower will cycle off.
10. After a time delay of approximately 3 minutes, the compressor control circuits will be ready to respond to a subsequent call for cooling from the wall thermostat.
11. Open disconnect switch. Reconnect the field thermostat wire at terminal R on terminal block TB1.

NOTE: WHILE IN THE COOLING MODE, TO PREVENT FROST FROM FORMING ON THE EVAPORATOR WHILE THE UNIT IS OPERATING IN OUTDOOR TEMPERATURES OF 65°F OR LOWER, IT IS RECOMMENDED THAT A LOW AMBIENT KIT (LAKT-) IS USED. THIS IS STRONGLY RECOMMENDED FOR 2 SPEED MODELS DUE TO THE LOWER AIRFLOW WHILE IN THE FIRST STAGE COOLING. TO FURTHER PROTECT THE COMPRESSOR FROM DAMAGE DURING LOW AMBIENT CONDITIONS, A FREEZESTAT KIT (FSK01) CAN BE ADDED THAT TURNS THE COMPRESSOR OFF WHEN THE EVAPORATOR TEMPERATURE DROPS TOO LOW.**



WARNING

HIGH VOLTAGE!
DISCONNECT ALL POWER BEFORE SERVICING OR INSTALLING THIS UNIT. MULTIPLE POWER SOURCES MAY BE PRESENT. FAILURE TO DO SO MAY CAUSE PROPERTY DAMAGE, PERSONAL INJURY OR DEATH.



FINAL SYSTEM CHECKS

1. Check to see if all supply and return air grilles are adjusted and the air distribution system is balanced for the best compromise between heating and cooling.
2. Check for air leaks in the ductwork. See Sections on Air Flow Adjustments.
3. Make sure the unit is free of "rattles", and the tubing in the unit is free from excessive vibration. Also make sure tubes or lines are not rubbing against each other or sheet metal surfaces or edges. If so, correct the trouble.
4. Set the thermostat at the appropriate setting for cooling and heating or automatic changeover for normal use.
5. Be sure the Owner is instructed on the unit operation, filter, servicing, correct thermostat operation, etc.

REFRIGERATION PERFORMANCE CHECK

Check that compressor RLA corresponds to values shown in Appendix B. RLA draw can be much lower than values listed at low load conditions and low ambient condensing temperatures. Values in Appendix B can slightly exceed at high load conditions and high ambient condensing temperatures.

CHECKING SUBCOOLING

NOTE: MAKE SURE THE AIR FLOW IS CORRECT BEFORE MAKING ANY ADJUSTMENTS. UNITS WITH A TXV SHOULD BE CHARGED TO SUBCOOLING ONLY.

EXAMPLE:

- Liquid Line Pressure = 417 PSI
- Corresponding Temp. = 120°F
- Thermometer on Liquid line = 109°F.

To obtain the amount of subcooling, subtract 109°F from 120°F. The difference is 11° subcooling. See the specification sheet or technical information manual for the design subcooling range for your unit.

SUBCOOLING FORMULA = SATURATED LIQUID LINE TEMPERATURE - LIQUID LINE TEMPERATURE
CHECKING SUPERHEAT

EXAMPLE:

- Suction Pressure = 143 PSI
- Corresponding Temp. = 50°F
- Thermometer on Suction Line = 59°F

To obtain the degrees temperature of superheat, subtract 50.0 from 59.0°F. The difference is 9° Superheat. The 9° Superheat would fall in the ± range of allowable superheat.
SUPERHEAT = SUCTION LINE TEMP - SAT. SUCTION TEMP.

SUPERHEAT ADJUSTMENT

NOTE: SUPERHEAT ADJUSTMENTS SHOULD NOT BE MADE UNTIL INDOOR AMBIENT CONDITIONS HAVE STABILIZED. THIS COULD TAKE UP TO 24 HOURS DEPENDING ON INDOOR TEMPERATURE AND HUMIDITY. BEFORE CHECKING SUPERHEAT, RUN THE UNIT IN COOLING FOR 15-20 MINUTES OR UNTIL REFRIGERANT PRESSURES STABILIZE. USE THE FOLLOWING GUIDELINES AND METHODS TO CHECK UNIT OPERATION AND ENSURE THAT THE REFRIGERANT CHARGE IS WITHIN LIMITS.

For TXV systems, to adjust superheat, unscrew the cover from the expansion valve, locate the adjustment screw, and turn it clockwise (in) to increase superheat or counterclockwise (out) to decrease superheat. It is recommended to make small adjustments at a time, 1/8-1/4 turn increments. Replace adjustment cap. Wait a minimum of 15 minutes between adjustments to allow time for the TXV and pressures to stabilize.

CHECKING SUBCOOLING

NOTE: UNITS WITH A TXV SHOULD BE CHARGED TO SUBCOOLING ONLY. MAKE SURE THE AIR FLOW IS

CORRECT BEFORE MAKING ANY ADJUSTMENTS.

EXAMPLE:

- Liquid Line Pressure = 417 PSI
- Corresponding Temp. = 120°F
- Thermometer on Liquid line = 109°F.

TO OBTAIN THE AMOUNT OF SUBCOOLING, SUBTRACT 109°F FROM 120°F. THE DIFFERENCE IS 11° SUBCOOLING.

SEE THE SPECIFICATION SHEET OR TECHNICAL INFORMATION MANUAL FOR THE DESIGN SUBCOOLING RANGE FOR YOUR UNIT.

SUBCOOLING FORMULA = SATURATED LIQUID LINE TEMPERATURE - LIQUID LINE TEMPERATURE
CHECKING SUPERHEAT

EXAMPLE:

- Suction Pressure = 143 PSI
- Corresponding Temp. = 50°F
- Thermometer on Suction Line = 59°F

TO OBTAIN THE DEGREES TEMPERATURE OF SUPERHEAT, SUBTRACT 50.0 FROM 59.0°F. THE DIFFERENCE IS 9° SUPERHEAT. THE 9° SUPERHEAT WOULD FALL IN THE ± RANGE OF ALLOWABLE SUPERHEAT.
SUPERHEAT = SUCTION LINE TEMP - SAT. SUCTION TEMP.

SUPERHEAT ADJUSTMENT

NOTE: SUPERHEAT ADJUSTMENTS SHOULD NOT BE MADE UNTIL INDOOR AMBIENT CONDITIONS HAVE STABILIZED. THIS COULD TAKE UP TO 24 HOURS DEPENDING ON INDOOR TEMPERATURE AND HUMIDITY. BEFORE CHECKING SUPERHEAT, RUN THE UNIT IN COOLING FOR 15-20 MINUTES OR UNTIL REFRIGERANT PRESSURES STABILIZE. USE THE FOLLOWING GUIDELINES AND METHODS TO CHECK UNIT OPERATION AND ENSURE THAT THE REFRIGERANT CHARGE IS WITHIN LIMITS.

For TXV systems, to adjust superheat, unscrew the cover from the expansion valve, locate the adjustment screw, and turn it clockwise (in) to increase superheat or counterclockwise (out) to decrease superheat. It is recommended to make small adjustments at a time, 1/8-1/4 turn increments. Replace adjustment cap. Wait a minimum of 15 minutes between adjustments to allow time for the TXV and pressures to stabilize.

REFRIGERANT CHARGE CHECK

NOTE: FOR OPTIMAL PERFORMANCE, FOLLOW CHARGING INSTRUCTIONS BELOW.

(UNITS WITH FIXED ORIFICE DEVICES)

All package units with fixed orifice devices are charged using the superheat method at the compressor suction line. To increase super heat, remove charge and to decrease super heat, add charge. After superheat is adjusted, it is recommended to check unit subcooling at the condenser coil liquid line. See Design Superheat and Subcooling table for targets on each model.

(UNITS WITH EXPANSION VALVE (TXV))

Run unit on High Stage cooling and refer to Design Superheat & Subcooling table

1. Purge gauge lines. Connect service gauge manifold to access fittings. Run system at least 10 minutes to allow pressure to stabilize.
2. Temporarily install thermometer on liquid (small) line near liquid line access fitting with adequate contact and insulate for best possible reading.
3. Check subcooling and superheat. System should have a subcooling and superheat within the range listed on the Design Superheat and Subcooling table.
 - a. If subcooling and superheat are low, adjust TXV superheat, then check subcooling.
NOTE: To ADJUST SUPERHEAT, TURN THE VALVE STEM CLOCKWISE TO INCREASE AND COUNTERCLOCKWISE TO DECREASE.
 - b. If subcooling is low and superheat is high, add charge to raise subcooling then check superheat.
 - c. If subcooling and superheat are high, adjust TXV valve superheat, then check subcooling.
 - d. If subcooling is high and superheat is low, adjust TXV valve superheat and remove charge to lower the subcooling.

NOTE: Do NOT adjust the charge based on suction pressure unless there is a gross undercharge. If an undercharge is suspected recover the charge, re-evacuate the system and recharge per data plate. No adjustments should be made if suspecting a charge issue.

4. Disconnect manifold set, installation is complete.

Model	Superheat ±2°F (Circuit 1/2)	Subcooling ±1°F (Circuit 1/2)	Expansion Device	Cooling Stage	Outdoor ambient (°F)
DSG090	17/16	12/14	TXV	High	95
DSG102	16/19	11/12	TXV	High	95
DSG120	18/22	16/15	TXV	High	95
DSG150	17/19	11/12	TXV	High	95

MAINTENANCE



WARNING

ELECTRICAL SHOCK, FIRE OR EXPLOSION HAZARD
FAILURE TO FOLLOW SAFETY WARNINGS EXACTLY COULD RESULT IN DANGEROUS OPERATION, SERIOUS INJURY, DEATH OR PROPERTY DAMAGE.

IMPROPER SERVICING COULD RESULT IN DANGEROUS OPERATION, SERIOUS INJURY, DEATH OR PROPERTY DAMAGE.

- **BEFORE SERVICING, DISCONNECT ALL ELECTRICAL POWER TO FURNACE.**
- **WHEN SERVICING CONTROLS, LABEL ALL WIRES PRIOR TO DISCONNECTING. RECONNECT WIRES CORRECTLY.**
- **VERIFY PROPER OPERATION AFTER SERVICING.**



WARNING

HIGH VOLTAGE!
DISCONNECT ALL POWER BEFORE SERVICING OR INSTALLING THIS UNIT.
MULTIPLE POWER SOURCES MAY BE PRESENT. FAILURE TO DO SO MAY CAUSE PROPERTY DAMAGE, PERSONAL INJURY OR DEATH.



WARNING

TO PREVENT PERSONAL INJURY OR DEATH DUE TO IMPROPER INSTALLATION, ADJUSTMENT, ALTERATION, SERVICE OR MAINTENANCE, REFER TO THIS MANUAL. FOR ADDITIONAL ASSISTANCE OR INFORMATION, CONSULT A QUALIFIED INSTALLER, SERVICER AGENCY OR THE GAS SUPPLIER.



CAUTION

SHEET METAL PARTS, SCREWS, CLIPS AND SIMILAR ITEMS INHERENTLY HAVE SHARP EDGES, AND IT IS NECESSARY THAT THE INSTALLER AND SERVICE PERSONNEL EXERCISE CAUTION.

Preventive maintenance is the best way to avoid unnecessary expense and inconvenience. Have this system inspected at regular intervals by qualified service personnel, at least twice a year. Routine maintenance should cover the following items:

1. Tighten all set screws, and wire connections.
2. Clean evaporator and condenser coils mechanically or with cold water, if necessary. Usually any fouling is only matted on the entering air face of the coil and can be removed by brushing.
3. Replace filters as needed (see Filters section).
4. Check for blockage of condensate drain.
5. Check power and control voltages.

6. Check running amperage.
7. Check operating temperatures and pressures.
8. Check and adjust temperature and pressure controls.
9. Check and adjust damper linkages.
10. Check operation of all safety controls.
11. Examine gas furnaces (see below and the User's Information Manual).
12. Check condenser fans and tighten set screws.

FILTERS



CAUTION

TO PREVENT PROPERTY DAMAGE DUE TO FIRE AND LOSS OF EQUIPMENT EFFICIENCY OR EQUIPMENT DAMAGE DUE TO DUST AND LINT BUILD UP ON INTERNAL PARTS, NEVER OPERATE UNIT WITHOUT AN AIR FILTER INSTALLED IN THE RETURN AIR SYSTEM.

Every application may require a different frequency of replacement of dirty filters. Filters must be replaced at least every three (3) months during operating seasons.

Dirty filters are the most common cause of inadequate heating or cooling performance. Filter inspection should be made at least every two months; more often if necessary because of local conditions and usage.

Dirty throwaway filters should be discarded and replaced with a new, clean filter.

Disposable return air filters are supplied with this unit. See the unit Specification Sheet or Technical Manual for the correct size and part number. To remove the filters, remove the filter access panel on return side of the unit.

CABINET FINISH MAINTENANCE

Use a fine grade automotive wax on the cabinet finish to maintain the finish's original high luster. This is especially important in installations with extended periods of direct sunlight.

CLEAN OUTSIDE COIL

The coil with the outside air flowing over it should be inspected annually and cleaned as frequently as necessary to keep the finned areas free of lint, hair and debris. Clean coil from inside out.

CLEAN INDOOR COIL (QUALIFIED SERVICER ONLY)

Before cleaning the indoor coil, A2L sensor must be removed from the unit to avoid damage and contamination. Air filters should also be removed before performing maintenance. The coil with the filtered air flowing over it should be inspected and cleaned as frequently as necessary to keep the finned areas free of debris. Any air blowing or water rinsing should be performed from inside-out (opposite operating airflow direction) to prevent damage to the tube, fin coil and any other components.

RECOVERY

When removing refrigerant from a system, either for servicing or decommissioning, it is recommended good practice that all refrigerants are removed safely.

When transferring refrigerant into cylinders, ensure that only appropriate refrigerant recovery cylinders are employed. Ensure that the correct number of cylinders for holding the total system charge is available. All cylinders to be used are designated for the recovered refrigerant and labelled for that refrigerant (i.e. special cylinders for the recovery of refrigerant). Cylinders shall be complete with pressure-relief valve and associated shut-off valves in good working order. Empty recovery cylinders are evacuated and, if possible, cooled before recovery occurs.

The recovery equipment shall be in good working order with a set of instructions concerning the equipment that is at hand and shall be suitable for the recovery of the flammable refrigerant. If in doubt, the manufacturer should be consulted. In addition, a set of calibrated weighing scales shall be available and in good working order. Hoses shall be complete with leak-free disconnect couplings and in good condition.

The recovered refrigerant shall be processed according to local legislation in the correct recovery cylinder, and the relevant waste transfer note arranged. Do not mix refrigerants in recovery units and especially not in cylinders.

If compressors or compressor oils are to be removed, ensure that they have been evacuated to an acceptable level to make certain that flammable refrigerant does not remain within the lubricant. The compressor body shall not be heated by an open flame or other ignition sources to accelerate this process. When oil is drained from a system, it shall be carried out safely.

CHARGING PROCEDURES

In addition to conventional charging procedures, the following requirements shall be followed.

- Ensure that contamination of different refrigerants does not occur when using charging equipment. Hoses or lines shall be as short as possible to minimize the amount of refrigerant contained in them.
- Cylinders shall be kept in an appropriate position according to the instructions.
- Ensure that the REFRIGERATING SYSTEM is grounded prior to charging the system with refrigerant.
- Label the system when charging is complete (if not already).
- Extreme care shall be taken not to overfill the REFRIGERATING SYSTEM.

NOTE: "GROUNDING" IS DEFINED AS ACHIEVING AN EARTH GROUND BY CONNECTING THE EQUIPMENT'S SUPPLIED GROUNDING LUG TO THE EARTH. THIS SHOULD BE VERIFIED BY A CERTIFIED TECHNICIAN.

Prior to recharging the system, it shall be pressure-tested with the appropriate purging gas. The system shall be leak-tested on completion of charging but prior to commissioning. A follow up leak test shall be carried out prior to leaving the site.

IMPORTANT: REFER TO THE STANDING PRESSURE TEST/ LEAK DETECTION METHOD REFERENCED LATER IN THIS MANUAL

THE FOLLOWING INSTRUCTIONS ARE MANDATORY FOR A2LSYSTEMS AND SUPERSEDE OTHER INSTRUCTIONS


WARNING

ONLY BRAZING TECHNIQUES OR APPROVED MECHANICAL JOINTS SHOULD BE USED TO CONNECT REFRIGERANT TUBING CONNECTIONS. NON-APPROVED MECHANICAL CONNECTORS AND OTHER METHODS ARE NOT PERMITTED IN THIS SYSTEM CONTAINING A2L REFRIGERANT. APPROVED MECHANICAL JOINTS WILL BE DETAILED IN THE PRODUCT'S SPECIFICATION SHEETS.

STANDING PRESSURE TEST/LEAK DETECTION METHOD

Using dry nitrogen or dry helium, pressurize the system to 450 PSIG. allow the pressure to stabilize and hold for 15 minutes (minimum). The system is considered leak-free if the pressure does not drop below 450 PSIG. If, after 15 minutes, the pressure drops below 450 PSIG, it implies a leak in the system. Proceed with identifying and sealing the leak and repeating the Standing Pressure Test. Leak test the system using dry nitrogen or dry helium and soapy water to identify leaks. **No refrigerant shall be used for pressure testing to detect leaks.** Proceed to system evacuation using the Deep Vacuum Method.

DEEP VACUUM METHOD

The Deep Vacuum Method requires a vacuum pump rated for 500 microns or less. This method effectively and efficiently ensures the system is free of non-condensable air and moisture. The Triple Evacuation Method is detailed in the Service Manual for this product model as an alternative. To expedite the evacuation procedure, it is recommended that the Schrader Cores be removed from the service valves using a core-removal tool.

1. Connect the vacuum pump, micron gauge, and vacuum-rated hoses to both service valves. Evacuation must use both service valves to eliminate system mechanical seals.
2. Evacuate the system to less than 500 microns.
3. Isolate the pump from the system and hold the vacuum for 10 minutes (minimum). Typically, pressure will rise slowly during this period. If the pressure rises to less than 1000 microns and remains steady, the system is considered leak-free; proceed to system charging and startup.
4. If pressure rises above 1000 microns but holds steady below 2000 microns, non-condensable air or moisture may remain,

or a small leak may be present. Return to step 2: If the same result is achieved, check for leaks and repair. Repeat the evacuation procedure.

5. If pressure rises above 2000 microns, a leak is present. Check for leaks and repair them. Then, repeat the evacuation procedure.

ACCESSORY INSTALLATION


WARNING

ALL ACCESSORIES THAT MAY BECOME A POTENTIAL IGNITION SOURCE IF INSTALLED. SUCH AS ELECTRONIC AIR CLEANERS, MUST ONLY BE POWERED THROUGH OUR ACCESSORY CONTROL BOARD KIT. IF AN ELECTRONIC AIR CLEANER IS ALREADY INSTALLED IN THE DUCT WORK AND NOT CONNECTED TO THE ACCESSORY CONTROL BOARD. IT WILL HAVE TO BE DISABLED OR REMOVED. ENSURE THAT ANY ADDITIONAL WIRING FROM THE INDOOR UNIT TO THE ACCESSORY CONTROL BOARD IS ROUTED AND PROTECTED FROM DAMAGE WEAR, AVOIDING THE FLUE PIPE AND ANY JOINTS THAT MAY NEED BRAZED OR DISCONNECTED FOR SERVICE. REFER TO THE PRODUCT SPECIFICATION SHEET FOR THE ACCESSORY CONTROL BOARD KIT PART NUMBER.

ALTITUDE ADJUSTMENT FACTOR TO CALCULATE MINIMUM ROOM AREA

The Indoor equipment mitigation requirements are calculated at sea level. For higher altitudes adjust the minimum room area specified on or near the Serial Plate by the corresponding altitude adjustment factor shown below. This table is provided as a reference.

Adjusted room area ($A_{min\ adj}$) is the product of the minimum room area specified in the serial plate and the adjustment factor AF, as shown in below formula

$$A_{min\ adj} = A_{min} \text{ (serial plate)} * AF$$

Height in meters	Height in feet	Altitude Adjustment Factor (AF)
At sea level	At sea level	1.00
1~200	1~660	1.02
200~400	660~1320	1.03
400~600	1320~1970	1.07
600~800	1970~2630	1.05
800~1000	2630~3290	1.09
1000~1200	3290~3940	1.11
1200~1400	3940~4600	1.13
1400~1600	4600~5250	1.15
1600~1800	5250~5910	1.17
1800~2000	5910~6570	1.19
2000~2200	6570~7220	1.21
2200~2400	7220~7880	1.26
2400~2600	7880~8540	1.24
2600~2800	8540~9190	1.29
2800~3000	9190~9850	1.31
3000~3200	9850~10500	1.34

CONDENSER AND INDUCED DRAFT MOTORS

Bearings on the condenser fan motors and the combustion fan motor are permanently lubricated. No additional oiling is required.

FLAME SENSOR

A drop in the flame current can be caused by a nearly invisible coating on the flame sensor. This coating, created by the fuel or combustion air supply, can be removed by carefully cleaning the flame sensor with steel wool.

NOTE: AFTER CLEANING, THE MICROAMP SIGNAL SHOULD BE STABLE AND IN THE RANGE OF 4 - 6 MICROAMPS DC.

FLUE PASSAGES

At the start of each heating season, inspect and, if necessary, clean the unit flue passage.

LUBRICATION

The fan shaft bearings, the blower motors, the condenser fan motors and compressors are permanently lubricated.

INSPECTION & CLEANING

All flue product carrying areas of the furnace, its vent system, and main burners should be examined by a qualified service agency, and cleaned if necessary, before the start of each heating season. This examination is necessary for continued safe operation. Particular attention should be given to deterioration from corrosion or other sources. This examination is accomplished in the following manner.


1. Disconnect power to the unit, close the manual gas shut off valve external to the unit, and remove furnace section access panel
2. Remove burner assembly:
 - a. Disconnect the wires from the gas valve after noting which wires are connected to each terminal.
 - b. Disconnect wires from the flame rod and ignition electrode.
 - c. Disconnect the gas piping at the union.
 - d. The entire burner assembly can now be removed from the unit.

NOTE: USE ALL SCREWS THAT WERE REMOVED; THEY ARE NECESSARY FOR SAFE AND PROPER OPERATION OF THE UNIT.

3. Inspect and periodically clean the vent outlet (bird screen) on the access panel.

NOTE: PERIODIC OBSERVATION OF THE FLAME AND A LOG OF CO₂ MEASUREMENTS ARE RECOMMENDED. THIS WILL AID IN DETERMINING WHETHER THE FURNACE IS OPERATING EFFICIENTLY OR IF THE FURNACE REQUIRES CLEANING.

Flames should be stable, soft and blue (dust may cause orange tips but must not be yellow). The flames must extend directly outward from the burner without curling, floating or lifting off.

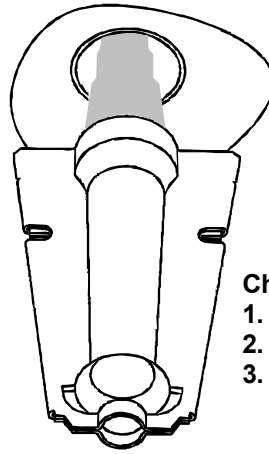

Check the burner flames for:

1. Good adjustment
2. Stable, soft and blue
3. Not curling, floating, or lifting off.

**BURNER FLAME
FIGURE 15**



WARNING

TO AVOID PERSONAL INJURY OR DEATH DUE TO ELECTRIC SHOCK, DO NOT REMOVE ANY INTERNAL COMPARTMENT COVERS OR ATTEMPT ANY ADJUSTMENT. CONTACT A QUALIFIED SERVICER AT ONCE IF AN ABNORMAL FLAME SHOULD DEVELOP.

At least once a year, prior to or during the heating season, make a visual check of the burner flames.

NOTE: THIS WILL INVOLVE REMOVING AND REINSTALLING THE HEAT EXCHANGER DOOR ON THE UNIT, WHICH IS HELD BY TWO SCREWS. IF YOU ARE UNCERTAIN ABOUT YOUR ABILITY TO DO THIS, CONTACT A QUALIFIED SERVICER.

If a strong wind is blowing, it may alter the airflow pattern within the unit enough that an inspection of the burner flames is not possible.

FUNCTIONAL PARTS

Refer to the unit Parts Catalog for a list of functional parts. Parts are available from your distributor.

TROUBLESHOOTING

IGNITION CONTROL ERROR CODES

The following presents probable causes of questionable unit operation. Refer to *Diagnostic Indicator Chart* for an interpretation of the signal and to this section for an explanation.

Remove the control box access panel and note the number of diagnostic LED flashes.

INTERNAL CONTROL FAILURE

If the integrated ignition control in this unit encounters an internal fault, it will go into a "hard" lockout and turn off the diagnostic LED. If diagnostic LED indicates an internal

fault, check power supply to unit for proper voltage, check all fuses, circuit breakers and wiring. Disconnect electric power for five seconds. If LED remains off after restoring power, replace control.

ABNORMAL OPERATION - HEATING CODES

EXTERNAL LOCKOUT (1 FLASH CODE)

An external lockout occurs if the integrated ignition control determines that a measurable combustion cannot be established within three (3) consecutive ignition attempts. If flame is not established within the seven (7) second trial for ignition, the gas valve is deenergized, 15 second inter-purge cycle is completed, and ignition is reattempted. The control will repeat this routine three times if a measurable combustion is not established. The control will then shut off the induced draft blower and go into a lockout state.

If flame is established but lost, the control will energize the circulator blower at the heat speed and then begin a new ignition sequence. If flame is established then lost on subsequent attempts, the control will recycle for four (4) consecutive ignition attempts (five attempts total) before locking out.

The diagnostic fault code is 1 flash for a lockout due to failed ignition attempts or flame dropouts. The integrated control will automatically reset after one hour, or it can be reset by removing the thermostat signal or disconnecting the electrical power supply for over five seconds. If the diagnostic LED indicates an external lockout, perform the following checks:

- *Check the supply and manifold gas pressures*
- *Check the gas orifices for debris*
- *Check gas valve for proper operation*
- *Check secondary limit*

A dirty filter, excessive duct static, insufficient air flow, a faulty limit, or a failed circulator blower can cause this limit to open. Check filters, total external duct static, circulator blower motor, blower motor speed tap (see wiring diagram) and limit. An interruption in electrical power during a heating cycle may also cause the auxiliary limit to open. The automatic reset secondary limit is located on top of the circulator blower assembly.

- *Check rollout limit*

If the burner flames are not properly drawn into the heat exchanger, the flame rollout protection device will open. Possible causes are restricted or blocked flue passages, blocked or cracked heat exchanger, a failed induced draft blower, or insufficient combustion air. The rollout protection device is a manual reset limit located on the burner bracket. The cause of the flame rollout must be determined and corrected before resetting the limit.

- *Check flame sensor*

A drop in flame signal can be caused by nearly invisible coating on the sensor. Remove the sensor and carefully clean with steel wool.

- *Check wiring*

Check wiring for opens/shorts and miswiring.

IMPORTANT: IF YOU HAVE TO FREQUENTLY RESET YOUR GAS/ELECTRIC PACKAGE UNIT, IT MEANS THAT A PROBLEM EXISTS THAT SHOULD BE CORRECTED. CONTACT A QUALIFIED SERVICER FOR FURTHER INFORMATION.

PRESSURE SWITCH STUCK OPEN (2 FLASH CODE)

A pressure switch stuck open can be caused by a faulty pressure switch, faulty wiring, a disconnected or damaged hose, a blocked or restricted flue, or a faulty induced draft blower. If the control senses an open pressure switch during the pre-purge cycle, the induced draft blower only will be energized.

If the pressure switch opens after ignition has begun the gas valve is deenergized, the circulator blower heat off cycle begins, and the induced draft blower remains on. The diagnostic fault code is two flashes.

PRESSURE SWITCH STUCK CLOSED (3 FLASH CODE)

A stuck closed pressure switch can be caused by a faulty pressure switch or faulty wiring. If the control encounters a pressure switch stuck closed, the induced draft blower remains off. The diagnostic LED code for this fault is three (3) flashes.

OPEN THERMAL PROTECTION DEVICE (4 FLASH CODE)

If the limit switch opens, the gas valve is immediately deenergized, the induced draft and air circulating blowers are energized. The induced draft and air circulator blowers remain energized until the limit switch recloses. The diagnostic fault code for an open limit is four (4) flashes.

A limit will open due to excessive supply air temperatures. This can be caused by a dirty filter, excessive duct static, insufficient air flow, or a faulty limit. Check filters, total external duct static, blower motor, blower motor speed tap (see wiring diagram), and limit. This limit will automatically reset once the temperature falls below a preset level.

FLAME DETECTED WITH GAS VALVE CLOSED (5 FLASH CODE)

If flame is detected with the gas valve deenergized, the combustion and air circulator blowers are energized. The diagnostic fault code is five (5) flashes for this condition. The control can be reset by removing the power supply to the unit or it will automatically reset after one hour. Miswiring is the probable cause for this fault.

ABNORMAL OPERATION - COOLING CODES

SHORT CYCLE COMPRESSOR DELAY (6 FLASH CODE)

The automatic ignition control has a built-in feature that prevents damage to the compressor in short cycling situations. In the event of intermittent power losses or intermittent thermostat operation, the ignition control will delay output to the compressor contactor for three minutes from the time power is restored. (Compressor is off a total of three minutes). The diagnostic LED will flash six (6) times to indicate the compressor contactor output is being delayed.

NOTE: SOME ELECTRONIC THERMOSTATS ALSO HAVE A BUILT-IN COMPRESSOR SHORT CYCLE TIMER THAT MAY BE LONGER THAN THE THREE MINUTE DELAY GIVEN ABOVE. IF YOU ARE USING AN ELECTRONIC THERMOSTAT AND THE COMPRESSOR HAS NOT STARTED AFTER THREE MINUTES, WAIT AN ADDITIONAL FIVE MINUTES TO ALLOW THE THERMOSTAT TO COMPLETE ITS SHORT CYCLE DELAY TIME.

SERVICING MEASURES FOR THE REFRIGERANT DETECTION SYSTEM:

Before servicing, identify the mode of operation of the system by reading the LED flashing pattern on the PCB within the control box and matching the LED flashing pattern with mode of operation in the REFRIGERANT DETECTION SYSTEM TROUBLESHOOTING GUIDE on the wiring diagram which is attached on the back side of the control box panel (RDS PCB Fault Code table). After identifying the mode of operation, take recommended actions as specified in the Recommended Actions for PCB LED Flashing Codes table.

REFRIGERANT SENSORS FOR REFRIGERANT

DETECTION SYSTEMS shall only be replaced with sensors specified by the manufacturer. If REFRIGERANT SENSOR requires replacement, please replace with Sensata R32 Sensor PN#RGD-00ML12 (Daikin PN#SER2A08011).

LED STATUS	
MODE	LED FLASHING PATTERN
NORMAL OPERATION	SLOW LED FLASHING PATTERN (2 SECONDS ON 2 SECONDS OFF)
R-32 LEAK ALARM	FAST LED FLASHING PATTERN
DELAY MODE	LED WILL BE ON CONTINUOUSLY
SYSTEM VERIFICATION MODE	FAST LED FLASHING PATTERN
CONTROL BOARD INTERNAL FAULT	LED WILL FLASH 2 TIMES AND THEN BE OFF FOR 5 SECONDS
R32 SENSOR COMMUNICATION FAULT	LED WILL FLASH 3 TIMES AND THEN BE OFF FOR 5 SECONDS
R32 SENSOR FAULT	LED WILL FLASH 4 TIMES AND THEN BE OFF FOR 5 SECONDS

RDS PCB Fault Code Table

APPENDIX A BLOWER PERFORMANCE DATA

7.5 TON GE

7.5T 130K 5 burner Standard Static

Motor 2.4 HP

Model: DSG090_STD

DOWNSHOT

	TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP
PL Rated	TAP 1	0.2	2085.3	507.0	211.3	0.33
		0.4	1907.6	574.2	247.2	0.38
		0.6	1720.3	640.6	269.9	0.42
		0.8	1550.1	686.7	292.5	0.45
	TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP
PL Max CFM	TAP 2	0.2	2159.2	517.7	233.9	0.37
		0.4	1983.4	583.4	269.5	0.41
		0.6	1800.6	648.3	292.7	0.46
		0.8	1635.7	693.7	315.9	0.49
	TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP
Rated	TAP 3	0.2	3029.7	645.0	540.9	0.85
		0.4	2876.7	695.1	576.6	0.92
		0.6	2739.0	743.6	605.1	0.98
		0.8	2626.8	782.0	639.7	1.03
	TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP
400 CFM/Ton @ 0.6 ESP	TAP 4	0.2	3291.4	683.9	652.8	1.05
		0.4	3145.9	730.0	689.8	1.12
		0.6	3018.2	774.3	716.3	1.19
		0.8	2916.9	811.4	755.2	1.25
	TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP
400 CFM/Ton	TAP 5	0.2	3374.1	696.2	690.7	1.12
		0.4	3231.0	741.3	728.4	1.19
		0.6	3106.1	784.3	759.6	1.26
		0.8	3007.6	821.0	800.6	1.32
	TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP
	TAP 6	0.2	1625.0	440.9	85.1	0.16
		0.4				
		0.6				
		0.8				
	TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP
	TAP 7	0.2	1972.4	490.7	177.6	0.18
		0.4	1791.9	560.1	213.9	0.21
		0.6	1597.7	628.9	236.1	0.23
		0.8				
	TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP
	TAP 8	0.2	2304.2	538.8	279.5	0.43
		0.4	2132.0	601.7	314.8	0.48
		0.6	1957.7	663.6	338.8	0.53
		0.8	1803.0	707.6	363.5	0.57
	TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP
	TAP 9	0.2	3291.4	683.9	652.8	1.05
		0.4	3145.9	730.0	689.8	1.12
		0.6	3018.2	774.3	720.3	1.19
		0.8	2916.9	811.4	759.7	1.25
	TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP
	TAP 10	0.2	3374.1	696.2	690.7	1.12
		0.4	3231.0	741.3	728.4	1.19
		0.6	3106.1	784.3	759.6	1.26
		0.8	3007.6	821.0	800.6	1.32

HORIZONTAL

	TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP
PL Rated	TAP 1	0.2	2077.0	497.6	226.7	0.33
		0.4	1909.5	563.3	252.6	0.37
		0.6	1715.7	629.9	284.7	0.41
		0.8				
	TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP
PL Max CFM	TAP 2	0.2	2152.2	508.0	245.4	0.36
		0.4	1986.5	572.4	271.8	0.40
		0.6	1797.3	637.5	304.7	0.45
		0.8	1530.7	716.3	337.6	0.51
	TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP
Rated	TAP 3	0.2	3035.1	632.0	516.3	0.84
		0.4	2892.0	682.1	549.6	0.90
		0.6	2751.6	731.5	590.8	0.97
		0.8	2609.4	783.5	629.2	1.04
	TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP
400 CFM/Ton @ 0.6 ESP	TAP 4	0.2	3300.1	670.3	621.7	1.03
		0.4	3164.3	716.5	657.7	1.10
		0.6	3036.2	761.8	701.2	1.17
		0.8	2921.7	807.2	741.3	1.24
	TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP
400 CFM/Ton	TAP 5	0.2	3383.8	682.6	658.2	1.10
		0.4	3250.4	727.6	695.1	1.17
		0.6	3125.8	771.6	739.3	1.24
		0.8	3018.8	815.2	779.9	1.31
	TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP
	TAP 6	0.2	1609.8	433.0	120.2	0.16
		0.4				
		0.6				
		0.8				
	TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP
	TAP 7	0.2	1962.4	481.9	199.0	0.18
		0.4	1792.1	549.5	224.3	0.21
		0.6	1591.2	618.3	255.2	0.23
		0.8				
	TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP
	TAP 8	0.2	2299.3	528.4	283.9	0.42
		0.4	2137.3	590.3	311.2	0.47
		0.6	1956.9	652.6	345.5	0.52
		0.8	1713.7	726.5	379.4	0.58
	TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP
	TAP 9	0.2	3300.1	670.3	621.7	1.03
		0.4	3164.3	716.5	657.7	1.10
		0.6	3036.2	761.8	701.2	1.17
		0.8	2921.7	807.2	741.3	1.24
	TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP
	TAP 10	0.2	3383.8	682.6	658.2	1.10
		0.4	3250.4	727.6	695.1	1.17
		0.6	3125.8	771.6	739.3	1.24
		0.8	3018.8	815.2	779.9	1.31

APPENDIX A BLOWER PERFORMANCE DATA

7.5 TON GE

7.5T 130K 5 burner Medium Static

Motor 2.4 HP

Model: DSG090_MED

DOWNSHOT

	TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP	VDC	Torque
PL Rated	TAP 1	0.2	2159.2	517.7	233.9	0.37	2.9	3.70
		0.4	1983.4	583.4	269.5	0.41	2.9	3.70
		0.6	1806.6	648.3	292.7	0.46	2.9	3.70
		0.8	1635.7	693.7	315.9	0.49	2.9	3.70
		1						
		1.2						
		1.4						
	TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP	VDC	Torque
PL CFM Max	TAP 2	0.2	2410.3	554.2	314.2	0.48	3.25	4.58
		0.4	2240.8	615.1	349.2	0.54	3.25	4.58
		0.6	2072.5	674.9	373.8	0.59	3.25	4.58
		0.8	1924.9	718.0	399.7	0.63	3.25	4.58
		1	1733.0	777.0	433.8	0.68	3.25	4.58
		1.2	1530.0	831.8	457.0	0.72	3.25	4.58
		1.4						
	TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP	VDC	Torque
Rated @ 0.8 ESP	TAP 3	0.2	3363.2	694.6	685.6	1.11	4.78	8.39
		0.4	3219.8	739.8	723.2	1.18	4.78	8.39
		0.6	3094.5	781.0	754.3	1.25	4.78	8.39
		0.8	2995.7	819.7	795.1	1.31	4.78	8.39
		1	2870.8	865.6	840.9	1.38	4.78	8.39
		1.2	2732.2	907.3	866.0	1.45	4.78	8.39
		1.4	2532.0	965.9	919.0	1.54	4.78	8.39
	TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP	VDC	Torque
400 CFM/Ton	TAP 4	0.2	3622.5	733.6	812.1	1.35	5.28	9.63
		0.4	3487.3	775.4	852.6	1.42	5.28	9.63
		0.6	3369.2	815.1	885.9	1.50	5.28	9.63
		0.8	3277.7	850.8	922.3	1.56	5.28	9.63
		1	3164.3	893.4	979.7	1.64	5.28	9.63
		1.2	3040.3	932.3	1008.8	1.71	5.28	9.63
		1.4	2859.4	986.6	1063.3	1.81	5.28	9.63
	TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP	VDC	Torque
400 CFM/Ton	TAP 5	0.2	3749.2	752.9	881.8	1.47	5.54	10.28
		0.4	3618.0	793.4	924.0	1.55	5.54	10.28
		0.6	3502.1	831.7	958.6	1.63	5.54	10.28
		0.8	3411.8	867.2	1008.3	1.70	5.54	10.28
		1	3302.2	908.3	1055.8	1.78	5.54	10.28
		1.2	3184.4	946.0	1087.8	1.85	5.54	10.28
		1.4	3015.2	997.6	1142.1	1.95	5.54	10.28
	TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP	VDC	Torque
	TAP 6	0.2	1934.3	485.2	166.5	0.27	2.60	2.96
		0.4	1752.9	555.4	203.0	0.31	2.60	2.96
		0.6	1556.2	624.9	225.0	0.35	2.60	2.96
		0.8						
		1						
		1.2						
		1.4						
	TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP	VDC	Torque
	TAP 7	0.2	2268.3	533.6	268.1	0.41	3.05	4.08
		0.4	2095.2	597.1	303.4	0.46	3.05	4.08
		0.6	1918.8	659.8	327.2	0.51	3.05	4.08
		0.8	1761.7	704.1	351.6	0.55	3.05	4.08
		1	1557.5	765.2	383.3	0.59	3.05	4.08
		1.2						
		1.4						
	TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP	VDC	Torque
	TAP 8	0.2	2582.1	579.2	372.6	0.57	3.5	5.20
		0.4	2417.0	637.0	407.5	0.63	3.5	5.20
		0.6	2258.0	693.5	433.0	0.69	3.5	5.20
		0.8	2121.4	735.1	461.1	0.73	3.5	5.20
		1	1943.7	791.7	497.9	0.78	3.5	5.20
		1.2	1753.3	843.9	520.3	0.84	3.5	5.20
		1.4	1506.6	911.7	563.4	0.90	3.5	5.20
	TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP	VDC	Torque
	TAP 9	0.2	3622.5	733.6	812.1	1.35	5.28	9.63
		0.4	3487.3	775.4	852.6	1.42	5.28	9.63
		0.6	3369.2	815.1	885.9	1.50	5.28	9.63
		0.8	3277.7	850.8	922.3	1.56	5.28	9.63
		1	3164.3	893.4	979.7	1.64	5.28	9.63
		1.2	3040.3	932.3	1008.8	1.71	5.28	9.63
		1.4	2859.4	986.6	1063.3	1.81	5.28	9.63
	TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP	VDC	Torque
	TAP 10	0.2	3749.2	752.9	881.8	1.47	5.54	10.28
		0.4	3618.0	793.4	924.0	1.55	5.54	10.28
		0.6	3502.1	831.7	958.6	1.63	5.54	10.28
		0.8	3411.8	867.2	1008.3	1.70	5.54	10.28
		1	3302.2	908.3	1055.8	1.78	5.54	10.28
		1.2	3184.4	946.0	1087.8	1.85	5.54	10.28
		1.4	3015.2	997.6	1142.1	1.95	5.54	10.28

HORIZONTAL

	TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP	VDC	Torque
PL Rated	TAP 1	0.2	2152.5	508.0	245.4	0.36	2.9	3.70
		0.4	1986.7	572.4	271.8	0.40	2.9	3.70
		0.6	1797.5	637.5	304.7	0.45	2.9	3.70
		0.8	1530.6	716.3	337.6	0.51	2.9	3.70
		1						
		1.2						
	TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP	VDC	Torque
PL CFM Max	TAP 2	0.2	2405.6	543.3	313.5	0.47	3.25	4.58
		0.4	2246.2	603.5	341.5	0.53	3.25	4.58
		0.6	2072.2	663.8	376.9	0.58	3.25	4.58
		0.8	1846.1	734.2	411.4	0.64	3.25	4.58
		1	1628.1	802.0	444.3	0.70	3.25	4.58
		1.2						
	TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP	VDC	Torque
Rated @ 0.8 ESP	TAP 3	0.2	3369.9	681.0	653.3	1.09	4.78	8.39
		0.4	3236.3	726.1	690.1	1.16	4.78	8.39
		0.6	3111.5	770.3	734.2	1.23	4.78	8.39
		0.8	3005.1	814.1	774.7	1.30	4.78	8.39
		1	2865.4	859.8	807.3	1.37	4.78	8.39
		1.2	2742.0	903.7	845.7	1.44	4.78	8.39
	TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP	VDC	Torque
400 CFM/Ton	TAP 4	0.2	3634.8	720.0	779.3	1.32	5.28	9.63
		0.4	3508.9	761.6	819.5	1.40	5.28	9.63
		0.6	3394.0	802.1	865.6	1.47	5.28	9.63
		0.8	3306.3	840.8	907.8	1.54	5.28	9.63
		1	3183.8	881.7	943.1	1.62	5.28	9.63
		1.2	3070.1	924.0	984.2	1.69	5.28	9.63
	TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP	VDC	Torque
400 CFM/Ton	TAP 5	0.2	3762.8	739.2	847.7	1.45	5.54	10.28
		0.4	3640.8	779.1	889.8	1.53	5.54	10.28
		0.6	3529.9	818.1	936.8	1.60	5.54	10.28
		0.8	3447.8	854.8	979.9	1.67	5.54	10.28
		1	3332.6	893.6	1017.0	1.75	5.54	10.28
		1.2	3222.9	935.1	1059.4	1.83	5.54	10.28
	TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP	VDC	Torque
	TAP 6	0.2	1925.8	476.6	190.0	0.27	2.60	2.96
		0.4	1754.5	544.8	215.0	0.31	2.60	2.96
		0.6	1551.0	614.4	245.6	0.35	2.60	2.96
		0.8						
		1						
		1.2						
	TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP	VDC	Torque
	TAP 7	0.2	2262.4	523.3	274.2	0.41	3.05	4.08
		0.4	2099.4	585.8	301.2	0.45	3.05	4.08
		0.6	1916.9	648.9	335.2	0.50	3.05	4.08
		0.8	1668.1	724.0	368.8	0.56	3.05	4.08
		1						
		1.2						
	TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP	VDC	Torque
	TAP 8	0.2	2579.0	567.7	364.3	0.56	3.5	5.20
		0.4	2424.1	625.0	393.6	0.62	3.5	5.20
		0.6	2260.0	682.1	430.7	0.68	3.5	5.20
		0.8	2059.9	747.1	466.2	0.74	3.5	5.20
		1	1857.4	810.5	498.3	0.80	3.5	5.20
		1.2	1696.9	857.5	526.7	0.85	3.5	5.20
	TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP	VDC	Torque
	TAP 9	0.2	3634.8	720.0	779.3	1.32	5.28	9.63
		0.4	3508.9	761.6	819.5	1.40	5.28	9.63
		0.6	3394.0	802.1	865.6	1.47	5.28	9.63
		0.8	3306.3	840.8	907.8	1.54	5.28	9.63
		1	3183.8	881.7	943.1	1.62	5.28	9.63
		1.2	3070.1	924.0	984.2	1.69	5.28	9.63
	TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP	VDC	Torque
	TAP 10	0.2	3762.8	739.2	847.7	1.45	5.54	10.28
		0.4	3640.8	779.1	889.8	1.53	5.54	10.28
		0.6	3529.9	818.1	936.8	1.60	5.54	10.28
		0.8	3447.8	854.8	979.9	1.67	5.54	10.28
		1	3332.6	893.6	1017.0	1.75	5.54	10.28
		1.2	3222.9	935.1	1059.4	1.83	5.54	10.28

APPENDIX A BLOWER PERFORMANCE DATA

7.5 TON GE

7.5T 130K 5 burner High Static

Motor 2.4 HP

Model: DSG090_HIGH

DOWNSHOT

		TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP
PL Rated	TAP 1	0.2	2304.2	538.8	279.5	0.43	
		0.4	2132.0	601.7	314.8	0.48	
		0.6	1957.7	663.6	338.8	0.53	
		0.8	1803.0	707.6	363.5	0.57	
		1	1601.9	768.2	395.9	0.61	
		1.2					
		1.4					
		1.6					
		1.8					
PL Max CFM	TAP 2	0.2	2514.1	569.3	349.1	0.54	
		0.4	2347.3	628.3	384.1	0.59	
		0.6	2184.7	686.1	409.2	0.65	
		0.8	2043.8	728.3	436.4	0.69	
		1	1860.6	785.8	472.2	0.74	
		1.2	1665.2	839.0	494.8	0.79	
		1.4					
		1.6					
		1.8					
Rated	TAP 3	0.2	3613.6	732.3	809.1	1.34	
		0.4	3477.9	774.3	849.1	1.41	
		0.6	3359.3	814.2	882.5	1.49	
		0.8	3266.7	850.1	928.9	1.55	
		1	3153.0	892.8	975.9	1.63	
		1.2	3028.3	931.8	1004.8	1.70	
		1.4	2847.9	986.0	1058.9	1.80	
		1.6	2714.9	1023.9	1097.1	1.87	
		1.8	2562.0	1072.4	1145.8	1.96	
400 CFM/Ton	TAP 4	0.2	3846.7	767.9	939.0	1.58	
		0.4	3718.8	807.5	982.8	1.66	
		0.6	3603.8	844.8	1018.4	1.74	
		0.8	3513.6	880.3	1071.0	1.81	
		1	3406.1	920.3	1118.3	1.89	
		1.2	3292.6	957.2	1152.9	1.97	
		1.4	3133.2	1006.5	1206.8	2.07	
		1.6	3007.9	1042.0	1246.4	2.14	
		1.8	2865.5	1088.5	1298.0	2.24	
400 CFM/Ton	TAP 5	0.2	3957.3	785.0	1008.2	1.71	
		0.4	3833.1	823.8	1054.0	1.79	
		0.6	3718.5	860.2	1091.0	1.87	
		0.8	3627.2	895.8	1147.2	1.95	
		1	3520.9	934.5	1193.8	2.03	
		1.2	3412.0	970.7	1232.0	2.11	
		1.4	3264.6	1017.1	1284.9	2.21	
		1.6	3143.9	1051.7	1325.8	2.29	
		1.8	3008.3	1096.6	1378.3	2.39	
	TAP 6	0.2	2732.0	528.3	256.5	0.40	
		0.4	2057.9	592.6	291.9	0.45	
		0.6	1879.4	655.9	315.4	0.49	
		0.8	1719.7	700.6	339.4	0.53	
		1	1512.3	762.2	370.5	0.57	
		1.2					
		1.4					
		1.6					
		1.8					
	TAP 7	0.2	2682.1	593.9	408.1	0.63	
		0.4	2519.7	649.8	443.0	0.69	
		0.6	2365.8	704.4	469.2	0.75	
		0.8	2235.2	745.3	498.5	0.79	
		1	2065.5	800.4	536.8	0.85	
		1.2	1882.3	851.2	558.9	0.90	
		1.4	1640.6	918.1	603.8	0.97	
		1.6					
		1.8					
	TAP 8	0.2	3089.6	653.9	565.5	0.90	
		0.4	2938.3	703.0	601.4	0.96	
		0.6	2803.1	750.5	630.4	1.03	
		0.8	2693.6	788.6	666.0	1.08	
		1	2522.9	838.1	709.3	1.15	
		1.2	2397.4	883.2	732.1	1.21	
		1.4	2178.7	945.6	782.6	1.29	
		1.6	2028.5	990.5	816.2	1.36	
		1.8	1859.7	1039.1	856.4	1.42	
	TAP 9	0.2	3846.7	767.9	939.0	1.58	
		0.4	3718.8	807.5	982.8	1.66	
		0.6	3603.8	844.8	1018.4	1.74	
		0.8	3513.6	880.3	1071.0	1.81	
		1	3406.1	920.3	1118.3	1.89	
		1.2	3292.6	957.2	1152.9	1.97	
		1.4	3133.2	1006.5	1206.8	2.07	
		1.6	3007.9	1042.0	1246.4	2.14	
		1.8	2865.5	1088.5	1298.0	2.24	
	TAP 10	0.2	3957.3	785.0	1008.2	1.71	
		0.4	3833.1	823.8	1054.0	1.79	
		0.6	3718.5	860.2	1091.0	1.87	
		0.8	3627.2	895.8	1147.2	1.95	
		1	3520.9	934.5	1193.8	2.03	
		1.2	3412.0	970.7	1232.0	2.11	
		1.4	3264.6	1017.1	1284.9	2.21	
		1.6	3143.9	1051.7	1325.8	2.29	
		1.8	3008.3	1096.6	1378.3	2.39	

HORIZONTAL

		TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP
PL Rated	TAP 1	0.2	2298.6	528.4	283.9	0.42	
		0.4	2136.5	590.3	311.2	0.47	
		0.6	1956.2	652.6	345.5	0.52	
		0.8	1713.2	726.5	379.4	0.58	
		1					
		1.2					
		1.4					
		1.6					
		1.8					
		TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP
PL Max CFM	TAP 2	0.2	2510.4	558.0	343.7	0.53	
		0.4	2353.7	616.4	372.5	0.58	
		0.6	2185.7	674.8	408.9	0.64	
		0.8	1975.5	741.9	444.1	0.70	
		1	1767.0	807.1	476.5	0.76	
		1.2	1602.8	854.2	503.9	0.81	
		1.4					
		1.6					
		1.8					
		TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP
Rated	TAP 3	0.2	3624.7	718.5	774.1	1.31	
		0.4	3498.5	760.2	814.2	1.39	
		0.6	3383.3	800.9	860.2	1.46	
		0.8	3295.0	839.8	902.4	1.53	
		1	3171.9	880.7	937.5	1.61	
		1.2	3057.8	923.2	978.6	1.68	
		1.4	2887.3	970.9	1021.6	1.77	
		1.6	2771.4	1009.8	1070.4	1.84	
		1.8	2613.4	1061.2	1119.7	1.94	
		TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP
400 CFM/Ton	TAP 4	0.2	3846.7	767.9	939.0	1.58	
		0.4	3718.8	807.5	982.8	1.66	
		0.6	3603.8	844.8	1018.4	1.74	
		0.8	3513.6	880.3	1071.0	1.81	
		1	3406.1	920.3	1118.3	1.89	
		1.2	3292.6	957.2	1152.9	1.97	
		1.4	3133.2	1006.5	1206.8	2.07	
		1.6	3007.9	1042.0	1246.4	2.14	
		1.8	2865.5	1088.5	1298.0	2.24	
		TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP
400 CFM/Ton	TAP 5	0.2	3972.9	771.1	973.7	1.68	
		0.4	3857.4	808.5	1019.3	1.76	
		0.6	3751.6	845.4	1067.5	1.84	
		0.8	3672.8	879.8	1112.0	1.91	
		1	3567.9	915.8	1153.3	1.99	
		1.2	3463.3	955.5	1197.6	2.08	
		1.4	3327.9	991.3	1242.5	2.16	
		1.6	3228.2	1028.4	1296.0	2.24	
		1.8	3082.5	1078.0	1351.0	2.35	
		TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP
	TAP 6	0.2	2226.0	518.2	264.5	0.39	
		0.4	2062.1	581.4	291.3	0.44	
		0.6	1877.4	645.1	324.9	0.49	
		0.8	1622.6	721.4	358.4	0.54	
		1					
		1.2					
		1.4					
		1.6					
		1.8					
		TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP
	TAP 7	0.2	2680.1	581.9	395.6	0.62	
		0.4	2527.8	637.6	425.7	0.68	
		0.6	2369.3	693.0	463.8	0.74	
		0.8	2183.6	754.8	500.0	0.80	
		1	1989.9	815.8	531.6	0.87	
		1.2	1834.6	862.5	561.4	0.92	
		1.4	1574.2	964.4	611.9	1.02	
		1.6					
		1.8					
		TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP
	TAP 8	0.2	3092.3	640.7	539.2	0.88	
		0.4	2951.0	690.0	573.1	0.94	
		0.6	2813.8	738.3	614.8	1.01	
		0.8	2680.0	788.8	653.6	1.08	
		1	2519.9	840.2	685.0	1.15	
		1.2	2384.7	885.4	720.0	1.21	
		1.4	2162.8	960.8	765.6	1.32	
		1.6	2007.6	1002.2	802.1	1.37	
		1.8	1851.8	1047.9	835.0	1.43	
		TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP
	TAP 9	0.2	3846.7	767.9	939.0	1.58	
		0.4	3718.8	807.5	982.8	1.66	
		0.6	3603.8	844.8	1018.4	1.74	
		0.8	3513.6	880.3	1071.0	1.81	
		1	3406.1	920.3	1118.3	1.89	
		1.2	3292.6	957.2	1152.9	1.97	
		1.4	3133.2	1006.5	1206.8	2.07	
		1.6	3007.9	1042.0	1246.4	2.14	
		1.8	2865.5	1088.5	1298.0	2.24	
		TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP
	TAP 10	0.2	3972.9	771.1	973.7	1.68	
		0.4	3857.4	808.5	1019.3	1.76	
		0.6	3751.6	845.4	1067.5	1.84	
		0.8	3672.8	879.8	1112.0	1.91	
		1	3567.9	915.8	1153.3	1.99	
		1.2	3463.3	955.5	1197.6	2.08	
		1.4	3327.9	991.3	1242.5	2.16	
		1.6	3228.2	1028.4	1296.0	2.24	
		1.8	3082.5	1078.0	1351.0	2.35	

APPENDIX A BLOWER PERFORMANCE DATA

7.5 TON GE

7.5T 180K 6 burner Standard Static

Motor 2.4 HP

Model: DSG090_STD

DOWNSHOT

	TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP
PL Rated	TAP 1	0.2	1888.7	503.5	209.1	0.30
		0.4	1815.1	537.9	218.3	0.32
		0.6				
		0.8				
	TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP
PL Max CFM	TAP 2	0.2	2136.4	542.3	272.9	0.41
		0.4	2047.0	579.6	287.7	0.44
		0.6	1758.1	671.8	331.1	0.51
		0.8	1532.3	738.8	362.7	0.56
	TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP
Rated	TAP 3	0.2	3034.7	682.2	580.4	0.97
		0.4	2904.3	726.1	612.7	1.04
		0.6	2771.7	769.9	644.4	1.10
		0.8	2624.8	819.3	690.1	1.17
	TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP
400 CFM/Ton	TAP 4	0.2	3288.9	721.6	696.8	1.19
		0.4	3153.2	765.7	733.0	1.26
		0.6	3049.2	800.1	763.6	1.32
		0.8	2919.6	845.2	811.8	1.39
	TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP
400 CFM/Ton	TAP 5	0.2	3404.2	739.4	755.3	1.29
		0.4	3267.3	783.3	793.2	1.37
		0.6	3173.1	814.3	823.7	1.42
		0.8	3050.3	857.6	872.7	1.50
	TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP
	TAP 6	0.2	1705.3	474.8	166.4	0.22
		0.4	1644.5	506.7	171.4	0.24
		0.6				
		0.8				
	TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP
	TAP 7	0.2	2136.4	542.3	272.9	0.25
		0.4	2047.0	579.6	287.7	0.27
		0.6	1758.1	671.8	331.1	0.31
		0.8	1532.3	738.8	362.7	0.35
	TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP
	TAP 8	0.2	2536.8	604.8	393.3	0.63
		0.4	2425.6	646.0	416.5	0.67
		0.6	2215.3	714.1	453.4	0.74
		0.8	2027.6	772.9	492.1	0.80
	TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP
	TAP 9	0.2	3288.9	721.6	696.8	1.19
		0.4	3153.2	765.7	733.0	1.26
		0.6	3049.2	800.1	763.6	1.32
		0.8	2919.6	845.2	811.8	1.39
	TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP
	TAP 10	0.2	3404.2	739.4	755.3	1.29
		0.4	3267.3	783.3	793.2	1.37
		0.6	3173.1	814.3	823.7	1.42
		0.8	3050.3	857.6	872.7	1.50

HORIZONTAL

	TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP
PL Rated	TAP 1	0.2	1995.7	475.9	199.1	0.28
		0.4	1800.6	545.1	221.1	0.32
		0.6	1613.5	615.7	252.7	0.36
		0.8				
	TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP
PL Max CFM	TAP 2	0.2	2249.8	511.9	258.3	0.39
		0.4	2067.7	575.8	285.1	0.43
		0.6	1892.1	640.8	317.1	0.48
		0.8	1623.4	722.3	352.3	0.54
	TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP
Rated	TAP 3	0.2	3168.5	643.4	551.1	0.92
		0.4	3027.8	690.4	592.9	0.98
		0.6	2890.1	737.2	627.0	1.05
		0.8	2759.8	787.0	671.2	1.12
	TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP
400 CFM/Ton	TAP 4	0.2	3427.5	681.0	663.9	1.12
		0.4	3296.4	724.0	709.2	1.19
		0.6	3167.9	766.5	744.1	1.26
		0.8	3063.1	809.5	790.1	1.33
	TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP
400 CFM/Ton	TAP 5	0.2	3544.7	698.1	721.0	1.22
		0.4	3417.5	739.5	767.6	1.29
		0.6	3292.9	780.1	803.0	1.36
		0.8	3196.9	820.6	849.6	1.44
	TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP
	TAP 6	0.2	1807.5	449.4	159.9	0.21
		0.4	1602.5	522.6	178.2	0.24
		0.6				
		0.8				
	TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP
	TAP 7	0.2	2249.8	511.9	258.3	0.24
		0.4	2067.7	575.8	285.1	0.27
		0.6	1892.1	640.8	317.1	0.30
		0.8	1623.4	722.3	352.3	0.34
	TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP
	TAP 8	0.2	2660.0	570.3	371.8	0.59
		0.4	2497.6	626.2	405.8	0.65
		0.6	2339.6	682.6	438.6	0.71
		0.8	2140.5	748.8	478.2	0.78
	TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP
	TAP 9	0.2	3427.5	681.0	663.9	1.12
		0.4	3296.4	724.0	709.2	1.19
		0.6	3167.9	766.5	744.1	1.26
		0.8	3063.1	809.5	790.1	1.33
	TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP
	TAP 10	0.2	3544.7	698.1	721.0	1.22
		0.4	3417.5	739.5	767.6	1.29
		0.6	3292.9	780.1	803.0	1.36
		0.8	3196.9	820.6	849.6	1.44

APPENDIX A BLOWER PERFORMANCE DATA

7.5 TON GE

7.5T 180K 6 burner Medium Static

Motor 2.4 HP

Model: DSG090_MED

DOWNSHOT

	TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP
PL Rated	TAP 1	0.2	2136.4	542.3	272.9	0.41
		0.4	2047.0	579.6	287.7	0.44
		0.6	1758.1	671.8	331.1	0.51
		0.8	1532.3	738.8	362.7	0.56
		1				
		1.2				
		1.4				
PL CFM Max	TAP 2	0.2	2373.7	579.4	341.4	0.53
		0.4	2270.7	619.1	361.3	0.57
		0.6	2029.9	696.7	400.7	0.64
		0.8	1827.2	758.7	436.6	0.70
		1	1656.3	808.1	459.7	0.74
		1.2				
		1.4				
Rated @ 0.8 ESP	TAP 3	0.2	3404.2	739.4	755.3	1.29
		0.4	3267.3	783.3	793.2	1.37
		0.6	3173.1	814.3	823.7	1.42
		0.8	3050.3	857.6	872.7	1.50
		1	2934.1	898.5	906.4	1.57
		1.2	2815.5	934.7	943.7	1.63
		1.4	2628.1	985.2	981.2	1.72
400 CFM/Ton	TAP 4	0.2	3579.1	766.4	852.3	1.47
		0.4	3442.2	809.5	892.3	1.55
		0.6	3358.6	836.6	923.3	1.60
		0.8	3244.7	877.2	973.3	1.68
		1	3134.1	916.7	1009.8	1.76
		1.2	3021.7	951.5	1048.5	1.82
		1.4	2843.0	999.5	1087.6	1.91
400 CFM/Ton	TAP 5	0.2	3711.5	786.7	933.3	1.61
		0.4	3576.3	828.9	974.7	1.70
		0.6	3496.6	854.0	1006.6	1.75
		0.8	3388.1	892.9	1056.9	1.83
		1	3280.9	931.3	1095.8	1.91
		1.2	3172.1	965.3	1135.6	1.98
		1.4	3002.0	1011.0	1176.3	2.07
	TAP 6	0.2	2273.3	563.7	311.5	0.48
		0.4	2175.9	602.5	329.2	0.51
		0.6	1915.2	686.1	370.2	0.58
		0.8	1702.9	750.2	404.4	0.64
		1	1525.2	800.3	426.9	0.68
		1.2				
		1.4				
	TAP 7	0.2	2663.5	624.5	436.6	0.71
		0.4	2546.5	666.6	462.2	0.75
		0.6	2358.3	728.0	497.5	0.82
		0.8	2181.7	784.2	538.1	0.89
		1	2029.0	831.2	563.4	0.94
		1.2	1871.1	875.6	593.9	0.99
		1.4	1673.6	932.3	629.2	1.06
	TAP 8	0.2	3023.2	680.4	575.6	0.96
		0.4	2893.1	724.3	607.7	1.03
		0.6	2759.0	768.6	639.5	1.09
		0.8	2611.3	818.1	684.9	1.16
		1	2478.4	862.2	713.7	1.22
		1.2	2341.9	902.2	747.6	1.28
		1.4	2144.7	956.7	783.2	1.36
	TAP 9	0.2	3579.1	766.4	852.3	1.47
		0.4	3442.2	809.5	892.3	1.55
		0.6	3358.6	836.6	923.3	1.60
		0.8	3244.7	877.2	973.3	1.68
		1	3134.1	916.7	1009.8	1.76
		1.2	3021.7	951.5	1048.5	1.82
		1.4	2843.0	999.5	1087.6	1.91
	TAP 10	0.2	3711.5	786.7	933.3	1.61
		0.4	3576.3	828.9	974.7	1.70
		0.6	3496.6	854.0	1006.6	1.75
		0.8	3388.1	892.9	1056.9	1.83
		1	3280.9	931.3	1095.8	1.91
		1.2	3172.1	965.3	1135.6	1.98
		1.4	3002.0	1011.0	1176.3	2.07

HORIZONTAL

	TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP
PL Rated	TAP 1	0.2	2249.8	511.9	258.3	0.39
		0.4	2067.7	575.8	285.1	0.43
		0.6	1892.1	640.8	317.1	0.48
		0.8	1623.4	722.3	352.3	0.54
		1				
		1.2				
		1.4				
PL CFM Max	TAP 2	0.2	2493.0	546.5	322.7	0.50
		0.4	2322.7	605.6	353.8	0.56
		0.6	2157.7	665.4	386.3	0.61
		0.8	1931.6	737.6	424.2	0.68
		1	1719.7	797.1	457.0	0.73
		1.2	1564.8	853.9	482.5	0.78
		1.4				
Rated @ 0.8 ESP	TAP 3	0.2	3544.7	698.1	721.0	1.22
		0.4	3417.5	739.5	767.6	1.29
		0.6	3292.9	780.1	803.0	1.36
		0.8	3196.9	820.6	849.6	1.44
		1	3069.9	864.8	898.6	1.51
		1.2	2940.3	907.9	936.6	1.59
		1.4	2767.0	958.8	987.4	1.68
400 CFM/Ton	TAP 4	0.2	3722.1	724.2	815.9	1.39
		0.4	3600.3	763.3	864.4	1.46
		0.6	3481.3	801.4	900.5	1.53
		0.8	3394.9	838.5	947.8	1.61
		1	3278.2	880.5	999.6	1.69
		1.2	3153.4	921.5	1040.3	1.76
		1.4	2995.4	965.3	1090.6	1.85
400 CFM/Ton	TAP 5	0.2	3856.3	744.1	895.6	1.52
		0.4	3737.9	781.6	945.2	1.60
		0.6	3622.7	818.1	981.9	1.68
		0.8	3540.0	853.2	1029.5	1.75
		1	3430.2	893.6	1083.5	1.83
		1.2	3309.0	933.1	1126.3	1.91
		1.4	3162.6	972.4	1176.3	1.99
	TAP 6	0.2	2390.1	531.8	294.5	0.45
		0.4	2214.9	592.9	323.8	0.50
		0.6	2045.5	654.9	356.1	0.56
		0.8	1801.8	731.0	392.8	0.62
		1	1580.0	792.1	424.1	0.67
		1.2				
		1.4				
	TAP 7	0.2	2789.6	588.8	412.9	0.67
		0.4	2633.0	642.4	449.1	0.73
		0.6	2480.4	696.2	482.2	0.79
		0.8	2300.8	757.9	523.1	0.86
		1	2115.9	812.8	560.5	0.92
		1.2	1967.8	865.5	589.0	0.98
		1.4	1729.3	958.1	641.4	1.08
	TAP 8	0.2	3156.8	641.7	546.4	0.91
		0.4	3015.7	688.9	588.1	0.98
		0.6	2877.5	735.9	622.1	1.04
		0.8	2745.9	786.0	666.2	1.11
		1	2591.4	835.5	709.3	1.18
		1.2	2452.1	883.4	742.1	1.25
		1.4	2245.2	953.8	793.8	1.35
	TAP 9	0.2	3722.1	724.2	815.9	1.39
		0.4	3600.3	763.3	864.4	1.46
		0.6	3481.3	801.4	900.5	1.53
		0.8	3394.9	838.5	947.8	1.61
		1	3278.2	880.5	999.6	1.69
		1.2	3153.4	921.5	1040.3	1.76
		1.4	2995.4	965.3	1090.6	1.85
	TAP 10	0.2	3856.3	744.1	895.6	1.52
		0.4	3737.9	781.6	945.2	1.60
		0.6	3622.7	818.1	981.9	1.68
		0.8	3540.0	853.2	1029.5	1.75
		1	3430.2	893.6	1083.5	1.83
		1.2	3309.0	933.1	1126.3	1.91
		1.4	3162.6	972.4	1176.3	1.99

APPENDIX A BLOWER PERFORMANCE DATA

7.5 TON GE

7.5T 180K 6 burner High Static

Motor 3.5 HP

Model: D5G090_HIGH

DOWNSHOT							HORIZONTAL						
	TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP		TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP
		0.2	2307.0	568.9	321.4	0.49			0.2	2424.7	536.7	303.8	0.46
PL Rated	TAP 1	0.4	2207.7	608.1	339.8	0.52	PL Rated	TAP 1	0.4	2251.1	597.2	333.7	0.51
		0.6	1953.7	689.6	380.3	0.59			0.6	2085.1	658.4	366.0	0.57
		0.8	1744.6	753.0	415.0	0.65			0.8	1845.4	733.2	403.2	0.63
		1	1569.3	802.9	437.8	0.69			1	1627.0	793.8	435.0	0.68
		1.2							1.2				
		1.4							1.4				
		1.6							1.6				
PL Max CFM	TAP 2	1.8					PL Max CFM	TAP 2	1.8				
		0.2	2511.1	600.8	384.9	0.60			0.2	2633.7	566.5	363.8	0.57
		0.4	2401.1	641.7	407.5	0.64			0.4	2470.0	622.9	397.3	0.62
		0.6	2186.1	711.4	444.8	0.71			0.6	2311.0	679.9	430.0	0.68
		0.8	1996.1	770.6	483.1	0.77			0.8	2107.7	747.0	469.4	0.75
		1	1834.0	818.9	507.1	0.82			1	1908.8	804.3	504.4	0.81
		1.2	1666.1	865.3	536.2	0.87			1.2	1757.1	859.1	531.3	0.86
Rated	TAP 3	1.4					Rated	TAP 3	1.4	1505.1	962.0	584.0	0.96
		1.6							1.6				
		1.8							1.8				
		0.2	3564.5	764.1	843.8	1.43			0.2	3707.4	722.0	807.6	1.35
		0.4	3427.6	807.3	883.7	1.51			0.4	3585.1	761.3	855.9	1.42
		0.6	3343.3	834.7	914.6	1.56			0.6	3465.6	799.6	891.9	1.49
		0.8	3228.7	875.5	964.5	1.63			0.8	3378.6	837.0	939.2	1.56
400 CFM/Ton	TAP 4	1	3117.7	915.1	1000.7	1.71	400 CFM/Ton	TAP 4	1	3261.2	879.1	990.8	1.64
		1.2	3004.9	950.1	1039.3	1.77			1.2	3135.9	920.3	1031.2	1.72
		1.4	2825.2	998.3	1078.3	1.86			1.4	2976.7	964.6	1081.6	1.80
		1.6	2705.4	1034.4	1121.6	1.93			1.6	2834.0	1015.7	1125.4	1.90
		1.8	2442.7	1102.2	1155.6	2.06			1.8	2689.3	1053.9	1172.6	1.97
		0.2	3819.7	803.3	1005.2	1.70			0.2	3965.6	760.4	966.4	1.61
		0.4	3687.0	844.3	1047.5	1.79			0.4	3849.7	796.8	1016.8	1.69
400 CFM/Ton	TAP 5	0.6	3607.5	868.8	1080.5	1.84	400 CFM/Ton	TAP 5	0.6	3737.3	832.1	1054.1	1.76
		0.8	3502.5	906.3	1130.8	1.92			0.8	3655.0	866.0	1101.8	1.84
		1	3397.2	943.8	1172.0	2.00			1	3549.9	905.2	1157.5	1.92
		1.2	3290.6	977.2	1212.5	2.07			1.2	3431.9	943.6	1202.2	2.00
		1.4	3129.2	1020.9	1254.9	2.17			1.4	3294.9	979.8	1251.9	2.08
		1.6	3015.1	1055.1	1299.1	2.24			1.6	3165.0	1031.9	1297.6	2.19
		1.8	2781.0	1115.1	1335.3	2.37			1.8	3037.9	1064.9	1348.9	2.26
400 CFM/Ton	TAP 6	0.2	3980.9	827.9	1123.5	1.90	400 CFM/Ton	TAP 6	0.2	4128.3	784.9	1083.5	1.80
		0.4	3854.6	866.6	1166.8	1.99			0.4	4015.2	820.0	1134.8	1.88
		0.6	3769.4	891.7	1202.4	2.05			0.6	3906.5	853.7	1172.9	1.96
		0.8	3667.5	927.5	1252.2	2.13			0.8	3819.5	886.7	1220.5	2.04
		1	3563.6	963.6	1297.1	2.21			1	3719.7	924.2	1278.7	2.12
		1.2	3458.6	996.6	1338.7	2.29			1.2	3606.5	961.0	1326.5	2.21
		1.4	3313.5	1036.5	1384.0	2.38			1.4	3483.7	994.2	1375.8	2.28
TAP 7	TAP 7	1.6	3201.6	1069.9	1427.6	2.46	TAP 7	TAP 7	1.6	3364.3	1043.7	1421.5	2.40
		1.8	2999.6	1122.1	1466.8	2.58			1.8	3246.3	1075.3	1476.0	2.47
		0.2	2406.8	584.5	351.6	0.54			0.2	2526.9	551.3	332.3	0.51
		0.4	2302.0	624.6	372.2	0.58			0.4	2358.2	609.7	364.0	0.57
		0.6	2067.6	700.2	411.0	0.65			0.6	2194.6	668.9	396.5	0.62
		0.8	1868.0	761.5	447.5	0.71			0.8	1974.1	739.8	434.8	0.69
		1	1699.2	810.6	470.9	0.75			1	1765.4	798.8	468.2	0.74
TAP 8	TAP 8	1.2	1524.1	858.5	498.8	0.80	TAP 8	TAP 8	1.2	1611.3	855.1	494.0	0.79
		1.4							1.4				
		1.6							1.6				
		1.8							1.8				
		0.2	2994.4	676.0	563.5	0.93			0.2	3127.5	637.4	534.7	0.87
		0.4	2865.1	719.7	595.1	0.99			0.4	2985.1	685.1	576.0	0.94
		0.6	2727.3	765.2	627.1	1.05			0.6	2845.8	732.7	609.9	1.00
TAP 9	TAP 9	0.8	2577.4	815.3	672.2	1.12	TAP 9	TAP 9	0.8	2710.9	783.5	653.8	1.07
		1	2443.1	859.6	700.6	1.18			1	2554.1	833.6	696.4	1.14
		1.2	2304.9	899.9	734.3	1.23			1.2	2414.1	881.8	728.9	1.21
		1.4	2107.5	954.7	769.8	1.31			1.4	2204.7	953.9	780.6	1.31
		1.6	1967.9	996.4	805.7	1.36			1.6	2046.2	987.1	814.3	1.35
		1.8	1710.5	1067.4	842.6	1.46			1.8	1852.7	1045.9	855.9	1.43
		0.2	3505.4	755.0	810.2	1.37			0.2	3647.4	713.2	774.6	1.29
TAP 10	TAP 10	0.4	3368.3	798.6	849.3	1.45	TAP 10	TAP 10	0.4	3523.4	753.2	822.3	1.36
		0.6	3280.9	827.1	880.0	1.50			0.6	3402.1	792.4	858.1	1.43
		0.8	3163.4	868.8	929.6	1.57			0.8	3312.3	830.8	905.2	1.50
		1	3050.7	908.9	964.9	1.65			1	3191.5	873.7	955.8	1.58
		1.2	2935.8	944.3	1003.0	1.71			1.2	3064.6	915.5	995.3	1.66
		1.4	2753.1	993.4	1041.4	1.80			1.4	2900.1	962.2	1045.9	1.74
		1.6	2631.5	1030.0	1084.3	1.86			1.6	2755.1	1012.3	1088.9	1.83
TAP 10	TAP 10	1.8	2365.5	1098.9	1118.1	1.99	TAP 10	TAP 10	1.8	2605.9	1052.1	1135.4	1.90
		0.2	3819.7	803.3	1005.2	1.70			0.2	3965.6	760.4	966.4	1.61
		0.4	3687.0	844.3	1047.5	1.79			0.4	3849.7	796.8	1016.8	1.69
		0.6	3607.5	868.8	1080.5	1.84			0.6	3737.3	832.1	1054.1	1.76
		0.8	3502.5	906.3	1130.8	1.92			0.8	3655.0	866.0	1101.8	1.84
		1	3397.2	943.8	1172.0	2.00			1	3549.9	905.2	1157.5	1.92
		1.2	3290.6	977.2	1212.5	2.07			1.2	3431.9	943.6	1202.2	2.00
TAP 10	TAP 10	1.4	3129.2	1020.9	1254.9	2.17	TAP 10	TAP 10	1.4	3294.9	979.8	1251.9	2.08
		1.6	3015.1	1055.1	1299.1	2.24			1.6	3165.0	1031.9	1297.6	2.19
		1.8	2781.0	1115.1	1335.3	2.37			1.8	3037.9	1064.9	1348.9	2.26
		0.2	3980.9	827.9	1123.5	1.90			0.2	4128.3	784.9	1083.5	1.80
		0.4	3854.6	866.6	1166.8	1.99			0.4	4015.2	820.0	1134.8	1.88
		0.6	3769.4	891.7	1202.4	2.05			0.6	3906.5	853.7	1172.9	1.96
		0.8	3667.5	927.5	1252.2	2.13			0.8	3819.5	886.7	1220.5	2.04
TAP 10	TAP 10	1	3563.6	963.6	1297.1	2.21	TAP 10	TAP 10	1	3719.7	924.2	1278.7	2.12
		1.2	3458.6	996.6	1338.7	2.29			1.2	3606.5	961.0	1326.5	2.21
		1.4	3313.5	1036.5	1384.0	2.38			1.4	3483.7	994.2	1375.8	2.28
		1.6	3201.6	1069.9	1427.6	2.46			1.6	3364.3	1043.7	1421.5	2.40

APPENDIX A BLOWER PERFORMANCE DATA

7.5 TON GE

7.5T 225K 7 burner Standard Static

Motor 2.4 HP

Model: DSG090_STD

DOWNSHOT

	TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP
PL Rated	TAP 1	0.2	1929.7	526.8	419.1	0.31
		0.4	1730.8	593.8	459.0	0.35
		0.6	1550.9	667.4	505.7	0.39
		0.8				
	TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP
PL Max CFM	TAP 2	0.2	2136.3	560.5	505.7	0.40
		0.4	1958.0	620.0	548.5	0.45
		0.6	1791.2	690.0	597.1	0.50
		0.8	1671.5	750.9	637.5	0.54
	TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP
Rated	TAP 3	0.2	3009.4	703.2	971.3	0.94
		0.4	2903.6	738.2	1026.8	0.98
		0.6	2785.3	792.3	1084.2	1.05
		0.8	2650.1	838.3	1141.3	1.12
	TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP
400 CFM/Ton	TAP 4	0.2	3208.2	735.7	1108.4	1.10
		0.4	3114.3	767.3	1166.9	1.15
		0.6	3005.3	817.9	1226.4	1.22
		0.8	2870.3	860.7	1286.8	1.28
	TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP
400 CFM/Ton	TAP 5	0.2	3329.8	755.5	1200.3	1.21
		0.4	3242.0	785.7	1260.6	1.25
		0.6	3138.1	834.1	1321.5	1.33
		0.8	3004.5	875.2	1383.8	1.40
	TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP
	TAP 6	0.2	2476.2	616.1	665.3	0.58
		0.4	2329.3	664.5	713.0	0.63
		0.6	2182.9	728.3	765.0	0.69
		0.8	2054.2	783.1	812.2	0.74
	TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP
	TAP 7	0.2	3174.1	730.1	1083.7	0.69
		0.4	3078.2	762.3	1141.7	0.72
		0.6	2967.8	813.4	1200.9	0.77
		0.8	2832.6	856.8	1260.7	0.81
	TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP
	TAP 8	0.2	3735.1	821.6	1564.9	1.63
		0.4	3659.0	851.3	1631.5	1.69
		0.6	3568.1	892.2	1697.1	1.77
		0.8	3446.6	928.0	1764.8	1.84
	TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP
	TAP 9	0.2	3208.2	735.7	1108.4	1.10
		0.4	3114.3	767.3	1166.9	1.15
		0.6	3005.3	817.9	1226.4	1.22
		0.8	2870.3	860.7	1286.8	1.28
	TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP
	TAP 10	0.2	3329.8	755.5	1200.3	1.21
		0.4	3242.0	785.7	1260.6	1.25
		0.6	3138.1	834.1	1321.5	1.33
		0.8	3004.5	875.2	1383.8	1.40

HORIZONTAL

	TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP
PL Rated	TAP 1	0.2	1990.9	484.9	392.3	0.29
		0.4	1790.9	571.8	440.7	0.34
		0.6	1567.6	650.0	486.3	0.38
		0.8				
	TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP
PL Max CFM	TAP 2	0.2	2210.0	514.7	472.7	0.37
		0.4	2025.7	593.8	522.3	0.43
		0.6	1821.2	667.0	570.7	0.48
		0.8	1724.2	733.7	619.1	0.53
	TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP
Rated	TAP 3	0.2	3130.2	642.9	903.6	0.86
		0.4	3002.2	693.6	961.1	0.92
		0.6	2865.4	748.0	1023.2	1.00
		0.8	2742.5	797.5	1085.2	1.06
	TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP
400 CFM/Ton	TAP 4	0.2	3337.8	672.8	1030.2	1.00
		0.4	3219.5	718.4	1090.3	1.07
		0.6	3094.5	769.2	1156.1	1.15
		0.8	2970.0	815.2	1220.5	1.22
	TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP
400 CFM/Ton	TAP 5	0.2	3464.4	691.3	1114.9	1.10
		0.4	3351.3	734.2	1176.8	1.17
		0.6	3232.5	782.9	1245.1	1.25
		0.8	3108.2	826.8	1310.8	1.32
	TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP
	TAP 6	0.2	2569.5	564.1	620.7	0.53
		0.4	2409.3	631.1	672.8	0.59
		0.6	2233.7	696.6	726.1	0.66
		0.8	2123.6	756.3	780.3	0.71
	TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP
	TAP 7	0.2	3302.2	667.7	1007.4	0.63
		0.4	3182.4	714.1	1067.1	0.67
		0.6	3055.5	765.5	1132.2	0.72
		0.8	2931.1	812.1	1196.2	0.77
	TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP
	TAP 8	0.2	3882.5	754.3	1450.6	1.50
		0.4	3780.8	790.7	1520.1	1.57
		0.6	3676.0	833.8	1597.8	1.66
		0.8	3560.2	871.6	1666.5	1.73
	TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP
	TAP 9	0.2	3337.8	672.8	1030.2	1.00
		0.4	3219.5	718.4	1090.3	1.07
		0.6	3094.5	769.2	1156.1	1.15
		0.8	2970.0	815.2	1220.5	1.22
	TAP SPEED	ESP	SCFM	R.P.M.	WATTS	BHP
	TAP 10	0.2	3464.4	691.3	1114.9	1.10
		0.4	3351.3	734.2	1176.8	1.17
		0.6	3232.5	782.9	1245.1	1.25
		0.8	3108.2	826.8	1310.8	1.32