

Air Conditioners / Contrôleur AHU

PVA-AA12,18, 24, 30, 36, 42, 48, 60NL*

SERVICE MANUAL

For use with R454B

MANUEL D'ENTRETIEN

Pour utilisation avec le R454B

ENGLISH

FRANÇAIS

Table of Contents

PVA-AA12,18, 24, 30, 36, 42, 48, 60NL*	7
1. Safety Precautions	7
1.1. Symbols used in the text	7
1.2. Cautions for service	8
1.3. Warning for service	8
1.4. Additional refrigerant charge	9
1.5. Service tools	10
2. Refrigerant R454B	10
2.1. Precautions for devices that use R454B	11
2.2. Installation of R454B system	12
2.2.1. Safety checks for systems using R454B	13
2.2.2. Minimum floor and conditioned space area requirements	14
2.3. Handling and service of R454B system	19
2.3.1. Removal and evacuation of refrigerant R454B	19
2.3.2. Purging the system with R454B	20
2.3.3. Charging R454B system	20
2.3.4. Recovery of R454B	21
2.4. Description and testing of leak mitigation functions	21
2.4.1. Testing procedure	21
2.5. Decommissioning of R454B system	22
2.6. Disposal of R454B	22
3. Part Names and Functions	24
4. Specifications	25
5. Fan Performance and Corrected Airflow	27
6. Sound pressure level	41
6.1. NC Curves	42
7. Dimensions	63
7.1. Outlines	64
8. Wiring Diagram	65
9. Refrigerant System Diagram	68
10. Heater Control	68
10.1. Control specifications and function setting	68
10.2. Fan control	71
10.3. CN24RELAY-KIT-CM3 (Optional Parts) installation	72
11. Humidifier	74
12. ERV (Energy Recovery Ventilation)	75
13. Troubleshooting	75
13.1. Cautions on troubleshooting	75
13.2. Self-check	76
13.2.1. Auto restart function	78
13.2.2. Function table	79
13.3. Self-diagnosis action table	80
13.4. Troubleshooting by inferior phenomena	87
13.5. Test point diagram	88
13.6. Trouble criterion of main parts	91
13.7. Thermistor	94
13.8. DC Fan motor (fan motor/indoor controller board)	95
13.8.1. DC Fan motor measuring points	96
13.9. Functions of DIP switch and jumper wire	96

14. Disassembly Procedure	98
14.1. Control Box	98
14.2. Coil Assembly	98
14.3. Blower/Fan Assembly	100
14.4. Thermistor (Return Air)	101
14.5. Refrigerant leak sensor	101
15. Appendix A: Quick Reference Worksheet for R454B	105
16. Appendix B - High altitude applications - capacity reduction factors	109

Table des matières

PVA-AA12,18, 24, 30, 36, 42, 48, 60NL*	111
1. Précautions de sécurité	111
1.1. Symboles utilisés dans le texte	111
1.2. Mises en garde de service	112
1.3. Avertissement de service	112
1.4. Charge de frigorigène supplémentaire	113
1.5. Outils de service	114
2. Réfrigérant R454B	114
2.1. Précautions pour les dispositifs qui utilisent du frigorigène R454B	115
2.2. Installation du système R454B	117
2.2.1. Contrôles de sécurité pour les systèmes utilisant le R454B	118
2.2.2. Exigences minimales en matière de surface de plancher et d'espace conditionné	119
2.3. Manipulation et entretien du système R454B	124
2.3.1. Retrait et évacuation du réfrigérant R454B	124
2.3.2. Purge du système avec R454B	125
2.3.3. Chargement du système R454B	125
2.3.4. Restauration du R454B	126
2.4. Description et essai des fonctions de réduction des fuites	126
2.4.1. Procédure d'essai	127
2.5. Mise hors service du système R454B	127
2.6. Mise au rebut du R454B	128
3. Noms des pièces et fonctions	129
4. Spécifications techniques	130
5. Performance du ventilateur et débit d'air corrigé	132
6. Niveau de pression sonore	146
6.1. Courbes NC	147
7. Dimensions	168
7.1. Données générales	169
8. Schéma de câblage	170
9. Schéma du système de frigorigène	173
10. Commande de l'appareil de chauffage	173
10.1. Caractéristiques de commande et réglage des fonctions	173
10.2. Commande du ventilateur	177
10.3. Installation de la trousse CN24RELAY-KIT-CM3 (pièces en option)	178
11. Humidificateur	180
12. Ventilation de récupération d'énergie (ERV)	181
13. Dépannage	182
13.1. Mises en garde concernant le dépannage	182

13.2. Autotest	182
13.2.1. Fonction d'autoredémarrage	184
13.2.2. Tableau des fonctions	185
13.3. Tableau de mesures d'autodiagnostic	186
13.4. Dépannage par phénomène mineur	193
13.5. Schéma de point de test	195
13.6. Critère de problème des pièces principales	198
13.7. Thermistance	201
13.8. Moteur du ventilateur c. c. (moteur du ventilateur/carte du contrôleur intérieur)	202
13.8.1. Points de mesure du moteur du ventilateur c. c.	203
13.9. Fonction de l'interrupteur DIP et du cavalier	203
14. Méthode de désassemblage	205
14.1. Boîtier de commande	206
14.2. Assemblage du serpentin	206
14.3. Assemblage de la soufflante/ventilateur	208
14.4. Thermistance (air de retour)	208
14.5. Capteur de fuite de frigorigène	209
15. Annexe A: Feuille de travail de référence rapide (exigence minimale de surface)	212
16. Annexe B - Applications en haute altitude - facteurs de réduction de la capacité	217

1. Safety Precautions

Always observe for safety!
Before obtaining access to terminal, all supply circuits must be disconnected.

1.1. Symbols used in the text

**WARNING**

Describes precautions that should be observed to prevent danger of injury or death to the user.

**CAUTION**

Describes precautions that should be observed to prevent damage to the unit.

**FLAMMABLE REFRIGERANT WARNING**

This unit uses a flammable refrigerant. If refrigerant leaks and comes in contact with fire or heating part, it will create harmful gas and there is risk of fire.

 : Indicates a part which must be grounded.

Meaning of symbols displayed on unit			
	Refrigerant Safety Group A2L	Warning! (Risk of fire)	<u>This unit uses a flammable refrigerant.</u> If refrigerant leaks and comes in contact with fire or heating part, it will create harmful gas and there is risk of fire.
	Read the OPERATING INSTRUCTIONS carefully before operation.		
	Service personnel are required to carefully read the OPERATING INSTRUCTIONS and INSTALLATION MANUAL before operation.		
	Further information is available in the OPERATING INSTRUCTIONS, INSTALLATION MANUAL, and the like.		

1.2. Cautions for service



CAUTION

1. Perform service after recovering the refrigerant left in unit completely.
2. Do not release refrigerant in the air.
3. After completing service, charge the system with specified amount of refrigerant.

1.3. Warning for service



WARNING

1. Do not alter the unit.
2. For installation and relocation work, follow the instructions in the Installation Manual and use tools and pipe components specifically made for use with refrigerant specified in the outdoor unit installation manual.
3. Ask a dealer or an authorized technician to install, relocate and repair the unit.
4. This unit should be installed in rooms which exceed the floor space specified in outdoor unit installation manual. Refer to outdoor unit installation manual.
5. Refrigerant pipes connection shall be accessible for maintenance purposes.
6. If the air conditioner is installed in a small room or closed room, measures must be taken to prevent the refrigerant concentration in the room from exceeding the safety limit in the event of refrigerant leakage. Should the refrigerant leak and cause the concentration limit to be exceeded, hazards due to lack of oxygen in the room may result.
7. Keep gas-burning appliances, electric heaters, and other fire sources (ignition sources) away from the location where installation, repair, and other air conditioner work will be performed. If refrigerant comes into contact with a flame, poisonous gases will be released.
8. When installing or relocating, or servicing the air conditioner, use only the specified refrigerant written on outdoor unit to charge

the refrigerant lines. Do not mix it with any other refrigerant and do not allow air to remain in the lines. If air is mixed with the refrigerant, then it can be the cause of abnormal high pressure in the refrigerant line, and may result in an explosion and other hazards.

9. After installation has been completed, check for refrigerant leaks. If refrigerant leaks into the room and comes into contact with the flame of a heater or portable cooking range, poisonous gases will be released.
10. Do not use low temperature solder alloy in case of brazing the refrigerant pipes.
11. When performing brazing work, be sure to ventilate the room sufficiently. Make sure that there are no hazardous or flammable materials nearby. When performing the work in a closed room, small room, or similar location, make sure that there are no refrigerant leaks before performing the work. If refrigerant leaks and accumulates, it may ignite or poisonous gases may be released.
12. Do not install the unit in places where refrigerant may build-up or places with poor ventilation such as a semi-basement or a sunken place in outdoor: Refrigerant is heavier than air, and inclined to fall away from the leak source.
13. Do not use means to accelerate the defrosting process or to clean, other than those recommended by the manufacturer.
14. The appliance shall be stored in a room without continuously operating ignition sources (for example: open flames, an

operating gas appliance or an operating electric heater).

15. Do not pierce or burn.
16. Be aware that refrigerants may not contain an odor.
17. Pipe-work shall be protected from physical damage.
18. The installation of pipe-work shall be kept to a minimum.
19. Compliance with national gas regulations shall be observed.
20. Keep any required ventilation openings clear of obstruction.

21. Servicing shall be performed only as recommended by the manufacturer.


22. The appliance shall be stored in a well-ventilated area where the room size corresponds to the room area as specified for operation.

23. Maintenance, service, and repair operations shall be performed by authorized technician with required.

1.4. Additional refrigerant charge

(When charging directly from cylinder.)

1. Check that cylinder for R454B available on the market is a siphon type.
2. Charging should be performed with the cylinder of siphon stood vertically. (Refrigerant is charged from liquid phase.)

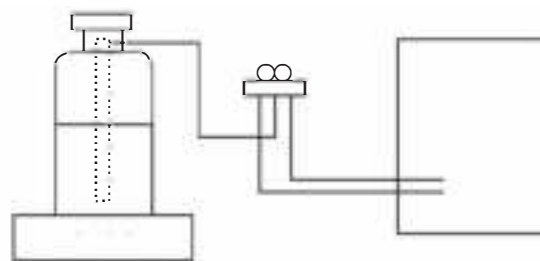

Electronic weighing scale

Unit

1.5. Service tools

Use the below service tools as exclusive tools for R454B refrigerant.

No.	Tool name	Specifications
①	Gauge manifold	Specifications • Only for R454B • Use the existing fitting specifications. (UNF1/2) • Use high-tension side pressure of 768.7 PSIG [5.3 MPa.G] or over.
②	Charge hose	• Only for R454B • Use pressure performance of 738.2 PSIG [5.09 MPa.G] or over.
③	Electronic weighing scale	-
④	Gas leak detector	• Use the detector for R454B.
⑤	Adapter for reverse flow check	• Attach on vacuum pump.
⑥	Refrigerant charge base	-
⑦	Refrigerant cylinder	• Only for R454B • Cylinder with siphon
⑧	Refrigerant recovery equipment	-

2. Refrigerant R454B



FLAMMABLE REFRIGERANT WARNING

- Refrigerant is FLAMMABLE and may cause INJURY, DEATH, or significant DAMAGE to equipment if improperly handled.
 - Carefully read all labels affixed to the unit.
 - Carefully read and follow all safety precautions for the unit.
 - Verify any person performing work near where flammable refrigerant is used is properly informed prior to work commencing of the risks and safety precautions associated with flammable refrigerant and the nature of the work being done.

2.1. Precautions for devices that use R454B



FLAMMABLE REFRIGERANT WARNING

- IGNITION SOURCES: Verify the following safety precautions are followed to prevent refrigerant ignition and ensure proper operation without equipment damage, injury, or death.
 - Verify equipment is installed in a room that does not contain continuously operating ignition sources (for example: open flames, an operating gas appliance, or an operating electric heater).
 - Verify equipment is installed in a room large enough to properly accommodate the release of the full system charge.
 - Ensure actual system refrigerant charge is in accordance with the room sizes Amin and TAmin, found in **Appendix A** of this manual.
 - Improper room sizes can lead to dangerously high concentrations of refrigerant vapor.
 - Ensure appropriate fire extinguishing equipment (dry powder or CO2 fire extinguisher) is available and adjacent to worksite whenever any hot work is required on the refrigerating equipment or any associated parts.
 - DO NOT use ignition methods, such as a halide torch, to detect refrigeration leaks. Electronic leak detectors may be used as long as they pose no risk as potential ignition source.
 - Verify the electronic refrigerant leak sensor is calibrated to the refrigerant used and appropriate percent of gas is confirmed.
 - When installing field pipe joint connections, avoid locations with possible ignition sources such as UV lights, electric heaters, gas appliances, pilot flames, brushed motors and similar devices.
 - Ensure the worksite is free from faulty equipment and appliances that could be a potential ignition source.
 - Failure to do so may result in ignition risk due to outdated and unsafe equipment.
 - Place “No Smoking” signs in the worksite.

- Markings and labels on the equipment must remain legible. Correct all labels or service markings that are illegible. Labels and service markings contain information that is critical to the next service technician



FLAMMABLE REFRIGERANT WARNING

- VENTILATION: Be aware that refrigerants may not contain an odor. If the refrigerant gas comes into contact with a flame, poisonous gases will be released.
 - Limit or avoid work in confined spaces. Prior to installation, verify service connections and field joints are placed in ventilated and easily accessible areas.
 - Do not perform any hot work without proper ventilation in the work space.
 - Confirm that all ventilation outlets and machinery are not obstructed, and are operating adequately.
 - Failure to provide constant ventilation allows for the concentration of refrigerant vapor in the work area.
 - If refrigerant gas leaks during installation work, ventilate the room.
 - If the refrigerant gas comes into contact with a flame, poisonous gases will be released.



FLAMMABLE REFRIGERANT WARNING

- LEAK DETECTION: Check the work area for any potential toxic or flammable gases using an appropriate refrigerant detector prior to, during, and after work is complete.
 - If a leak is suspected, immediately remove/ extinguish all naked flames.
 - Ensure all refrigerant is recovered and system is isolated prior to making repairs. For PAA connections, use flare connection as the equipment as designed for. Mitsubishi Electric US, Inc. is not responsible for

improper brazing connections done by the installer.

- Instructions for the removal of refrigerant can be found in *Handling and service of R454B* chapter of this manual.
- Hazardous vapors may exist in mechanical rooms. Use appropriate leak detection equipment (non-sparking) that is adequately sealed and intrinsically safe.
 - Ensure leak detection equipment set at a percentage of the LFL (lower flammability limit) of the refrigerant employed, and the appropriate percentage of gas (25% maximum) is confirmed.
- Recover refrigerant via the outdoor unit service ports only. Do not vent refrigerant. Always follow the decommissioning procedure.
- Do not pierce or burn.

– Some chemicals and cleaning products may be incompatible with the coil materials, and may corrode the coil.

- Verify leak detection fluids do not contain chlorine.
 - Leak detection fluids that contain chlorine may react with refrigerant and corrode pipework.
- Confirm that refrigerant piping and other components are installed in a position/location that is unlikely to be exposed to corrosive materials.
 - Corrosion can reduce the longevity of the product, and possibly lead to a hazardous refrigerant leak.
- When it is necessary to replace electrical components, the new components must be fit for the purpose and to the correct specification. Always follow guidelines in the installation and service manuals, and if in doubt, consult with the manufacturer's technical department for assistance.
 - Improperly sourced parts may lead to reduced functionality and product life.



CAUTION

- Do not use means to accelerate the defrosting process or to clean, other than those recommended by the manufacturer.

2.2. Installation of R454B system



FLAMMABLE REFRIGERANT WARNING

- Ensure proper protection from physical damage during installation, operation, and service when performing pipework or handling piping material.
- Verify pipe work performed in compliance with national and local regulations and standards.
- Ensure all field joints in pipe work are inspected prior to covering and enclosing.
 - Verify all field pipe joints are properly pressure tested with inert gas.
 - Verify all field pipe joints are vacuum tested prior to refrigerant charging.
 - Verify all indoor field-made joints are tightness tested with 0.25 times the MAXIMUM ALLOWABLE PRESSURE, with NO LEAK DETECTED.



FLAMMABLE REFRIGERANT WARNING

Auxiliary devices which may be a POTENTIAL IGNITION SOURCE shall not be installed in the duct work. Examples of such POTENTIAL IGNITION SOURCES are hot surfaces with a temperature exceeding 1292 °F (700 °C) and electric switching devices.

**IMPORTANT**

Approved electric heater kits manufactured for Mitsubishi Electric US, Inc. includes electric heat kits manufactured for Mitsubishi Electric US, Inc. that are allowed for use with the listed air handlers. These tables are found in the chapter *Indoor unit accessories* found in the Installation manual.

**FLAMMABLE REFRIGERANT WARNING**

LEAK DETECTION SYSTEM INSTALLED. This air handler is equipped with a refrigerant leak detection system.

See service manual for service and replacement instructions.

- Unit must remain ON, except for service, installation, or inspection.
- Loss of power to the refrigerant leak sensor mounted in the indoor unit will result in an inability to detect a refrigerant leak. This may cause a fire. Refrigerant leak sensor lifetime is 15 years.
- Only replace refrigerant leak sensor devices with sensors approved for use by Mitsubishi Electric US, Inc.
- Do not install equipment in a configuration where false ceilings or drop ceilings are used as a return air plenum.

2.2.1. Safety checks for systems using R454B**1. Complete prior to installation**

- Verify the REFRIGERANT CHARGE is in accordance with the room size, found in the charts below in *Minimum floor and minimum conditioned space area*, where refrigerant containing parts are installed.
- Verify ventilation openings are not obstructed and the required ventilation is present.

**IMPORTANT**

Alarm-triggered mechanical ventilation is not supported at this time.

- Verify markings and signs for the equipment are visible and legible. Correct all illegible markings and signs.
- Verify refrigeration pipe and components are installed in a position where they are unlikely to be exposed to any substance which may corrode refrigerant containing components, unless the components are constructed of materials which are inherently resistant to

being corroded or are suitably protected against being so corroded.

- Verify common household chemicals and appliances are properly stored away from the return vents and air handler
 - Vapors and gases from chemicals such as propane, butane, methane, insecticides, aerosol or cleaning sprays, and paint or small smoke producing appliances may falsely trigger the leak detection system and impede the proper function of the unit.

2. Checks to electrical devices

Repair and maintenance of electrical components include initial safety checks and component inspection procedures.

- Verify capacitors are discharged in a safe manner to avoid possibility of sparking.
- Verify there are no live electrical components.
- Ensure wiring is not exposed while charging, recovering, or purging the system.
- Verify continuity of earth bonding.

- If a fault exists that could compromise safety, do not connect electrical supply to the circuit until fault is repaired.
 - If the fault cannot be corrected immediately but it is necessary to continue operation, an adequate temporary solution shall be used. Report any malfunction or faulty equipment/operation to the owner of the equipment so all parties are aware.
3. **During repairs to sealed components**
- Verify all electrical power supplies are disconnected from the equipment being worked upon prior to any removal of sealed covers, etc. If it is absolutely necessary to have an electrical supply to equipment during service, then permanently operating leak detection must be installed at the most critical point to warn of a potentially hazardous situation.
 - Verify the casing is not altered in any manner that affects protection.
 - Verify no visible physical damage to cables exists.
 - Verify connections are not excessive.
 - Verify terminals are installed according to specification.
 - Verify there is no damage to seals.
 - Verify gland fitting are installed properly and according to specifications.
 - Ensure equipment properly secured.
 - Ensure seals or sealing materials are not degraded and operating properly.
 - Verify all replacement parts in accordance with the manufacturer specifications.
4. **Intrinsically safe components can only be replaced but never repaired**
- Do not apply any permanent inductive or capacitance loads to the circuit without ensuring it will not exceed the permissible voltage and current permitted for the equipment in use. Intrinsically safe components are the only type of components that may be worked on while live in the presence of a flammable atmosphere.
 - Ensure test apparatus meets correct rating specification.
 - Replace components only with parts specified by the manufacturer. Other parts may result in the ignition of refrigerant in the atmosphere from a leak.
-  **NOTE**

The use of silicon sealant can inhibit the effectiveness of some types of leak detection equipment.

Intrinsically safe components do not have to be isolated prior to working on them.
5. **Cabling**
- Verify cabling is installed in a location that avoids wear, corrosion, excessive pressure, vibration, sharp edges, or any other adverse environmental effects.
 - Check the cables for effects of aging or continual vibration from sources such as compressors or fans.

2.2.2. Minimum floor and conditioned space area requirements

For safe and acceptable installation, there are a number of requirements that must be met to ensure that in the event of a refrigerant leak, refrigerant vapors do not have the opportunity to collect and create a hazardous concentration levels of refrigerant vapors.

These requirements are in relation to the following categories:

- Area of the conditioned space (**T_{Amin}**)
- Area of the indoor unit installation space (**A_{min}**)

- Installation height of the indoor unit, measured from the floor to the bottom of the air handler (**H_{is}**)
- Opening conditions for connected rooms and natural ventilation (**Anv**).
- Ducting and damper configurations

For all installations, the following guidelines must be followed:

- Residential installations and ductwork should be designed to comply with ACCA's Manual D (ANSI / ACCA 1 Manual D 2016, Residential Duct Systems).

- Failure to comply with industry best practices can result in poor performance, including unbalanced heating / cooling / airflow.
- When zone dampers are used, they must be configured such that they will open fully during a refrigerant leak error.
 - Pre-existing zone dampers that do not meet this requirement must be permanently opened fully and disabled.
- Manual dampers must not be completely closed during or after installation. Balancing is acceptable.
 - Closing dampers can reduce the conditioned space area beyond intended acceptable limits.
- Vent registers, grilles, and covers must not completely obstruct air flow from any vent.
 - A blocked vent can reduce the conditioned space area beyond intended acceptable limits.
- At least one room (not including the indoor unit installation room) must have a dedicated return duct.
 - Spaces without return ducts have a risk of refrigerant accumulation during a leak event.
- The height of the ceiling in the indoor unit installation room must be at least 2.2 m (7 ft - 2.7 in).
 - Area calculations have been calculated using this assumption.
- The area of the indoor unit installation room must be at least 20% of the total area of **Amin**.
- Rooms adjacent to the indoor unit installation room can be considered part of the **Amin** area for the purpose of contributing to **Amin** area when the following conditions are met:
 - The rooms are on the same floor.
 - The rooms are connected by a permanent opening that cannot be closed, with an area greater than **Anv** that is below 300 mm (11.8 in) from the floor, at least 50% of which is below 200 mm (7.8 in) from the floor.
 - The rooms are connected by a second permanent opening that cannot be closed, with an area greater than 50% of **Anv** that is above 1.5 m (4 ft - 11.1 in).
- Natural ventilation requirements can be satisfied by use of ventilation ducting, passive through-

wall ducts, drop ceilings, louvered doors, door undercuts, space between wall and floor, etc.

- For openings which extend to the floor, the minimum height is 20 mm (0.8 in) above the top of the floor covering (i.e. tiles and carpet pile).
- Enhanced tightness refrigeration systems (ETRS) are approved for fixed **Anv** requirements.
 - Almost every combination of Mitsubishi Electric US, Inc. indoor unit / outdoor unit are considered an enhanced tightness refrigeration system (ETRS).



IMPORTANT

SVZ-AP12NL indoor unit (IDU) with **SUZ-AA12NL** outdoor unit (ODU) is **the only non-ETRS combination.**


For ETRS-compliant systems, the value for:

$$A_{nvETRS} \geq 114\text{cm}^2 \text{ or } 22\text{in}^2$$

- For Non-ETRS-compliant systems, the minimum opening size can be determined from the following equation:


$$A_{nv} = 0.0317 \times \left(m_c - 0.337 \times \left(\sqrt{A} \right) \right) \times \sqrt{0.563 \times \sqrt{A}}$$

- Where **A** is the area of the installation room in square meters, and **m_c** is the planned total system charge in kilograms.
- Use the tables on the following pages to determine **Amin** and **T_{Amin}** requirements.
 1. Match the chart title to the outdoor unit being paired with the air handler.
 2. Use the following flow chart to determine which case line is correct for your application.
 3. Confirm the planned system charge, **m_c**, and trace up to the correct case line.
 4. Trace left from the intersection with the correct case line to determine **Amin** and **T_{Amin}**.
 5. This information is available in **Appendix A** at the end of this manual.


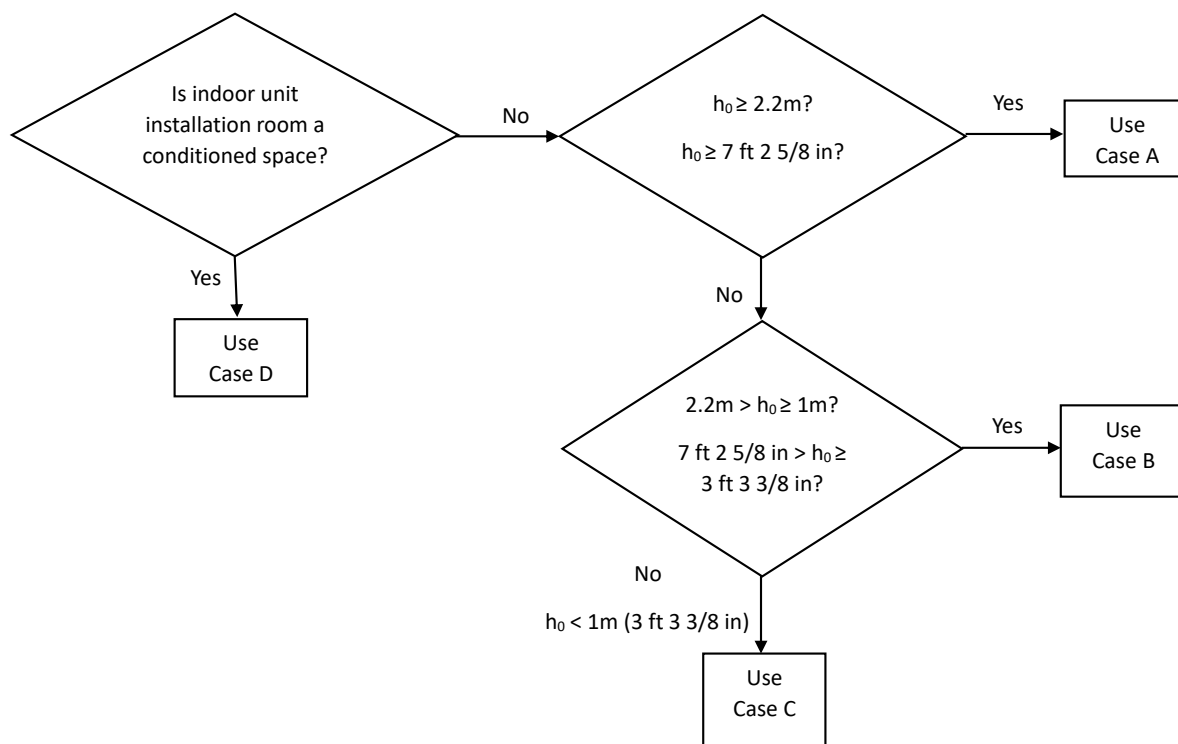
**NOTE**


For systems certified as ETRS the following ventilation requirement can be substituted:

$$A_{nvETRS} \geq 114\text{cm}^2 \text{ or } 22\text{in}^2$$

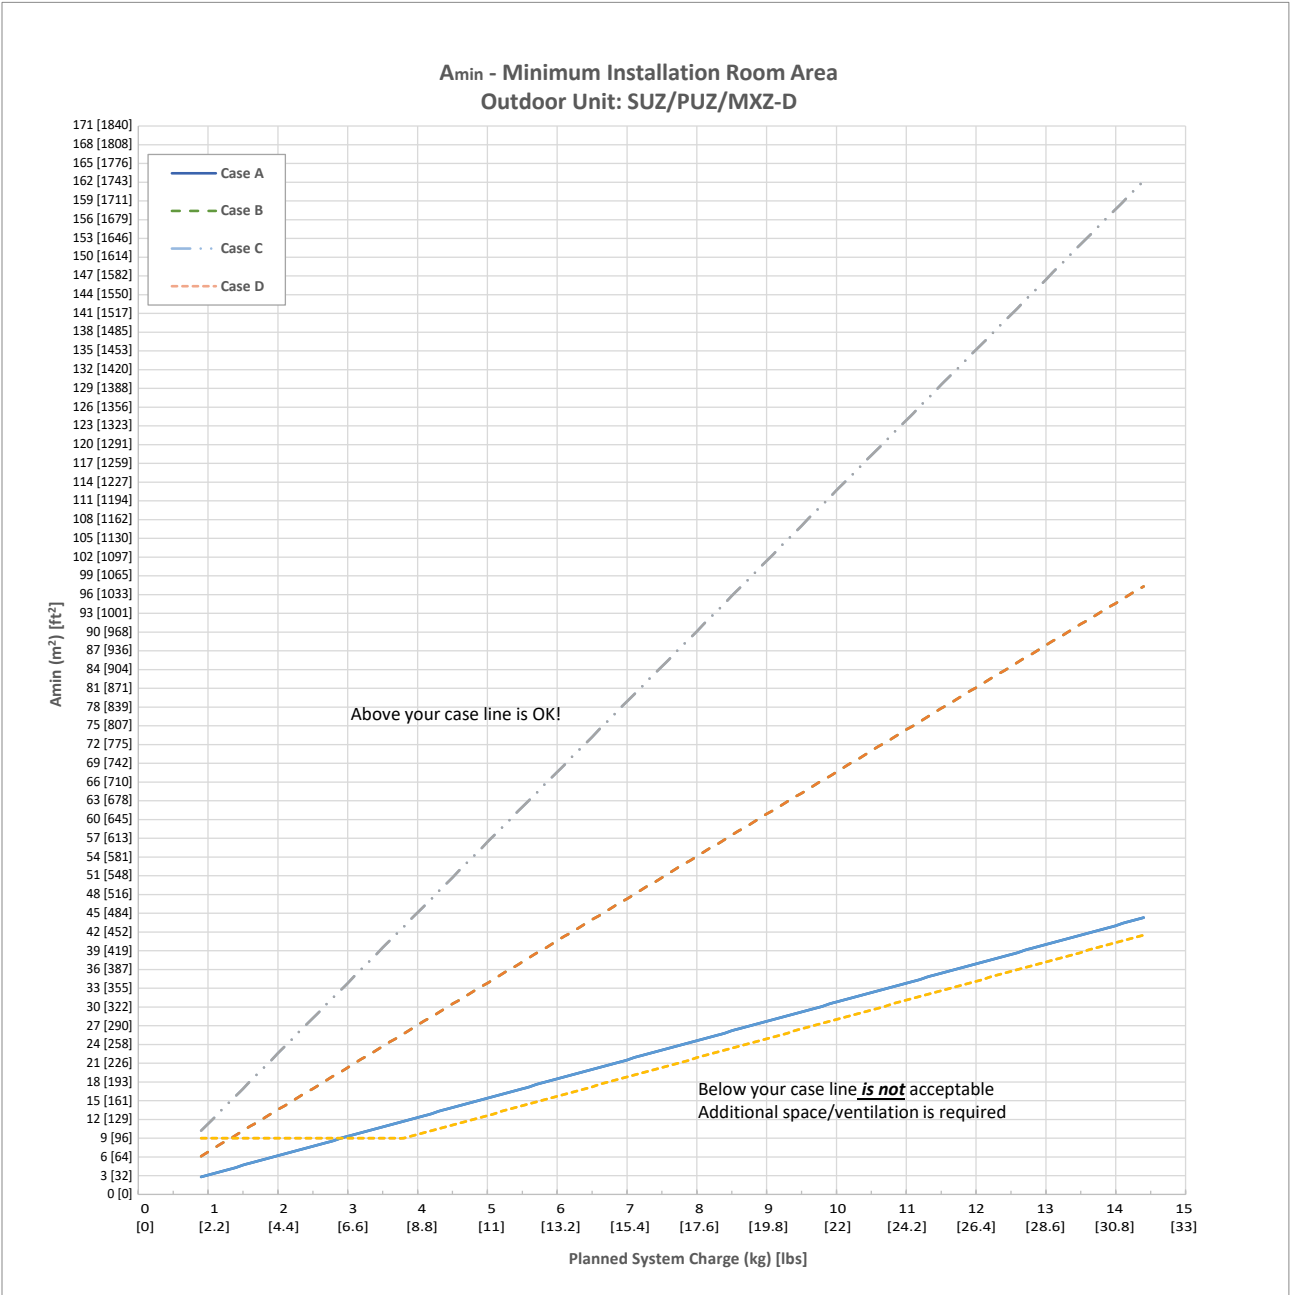

ENGLISH

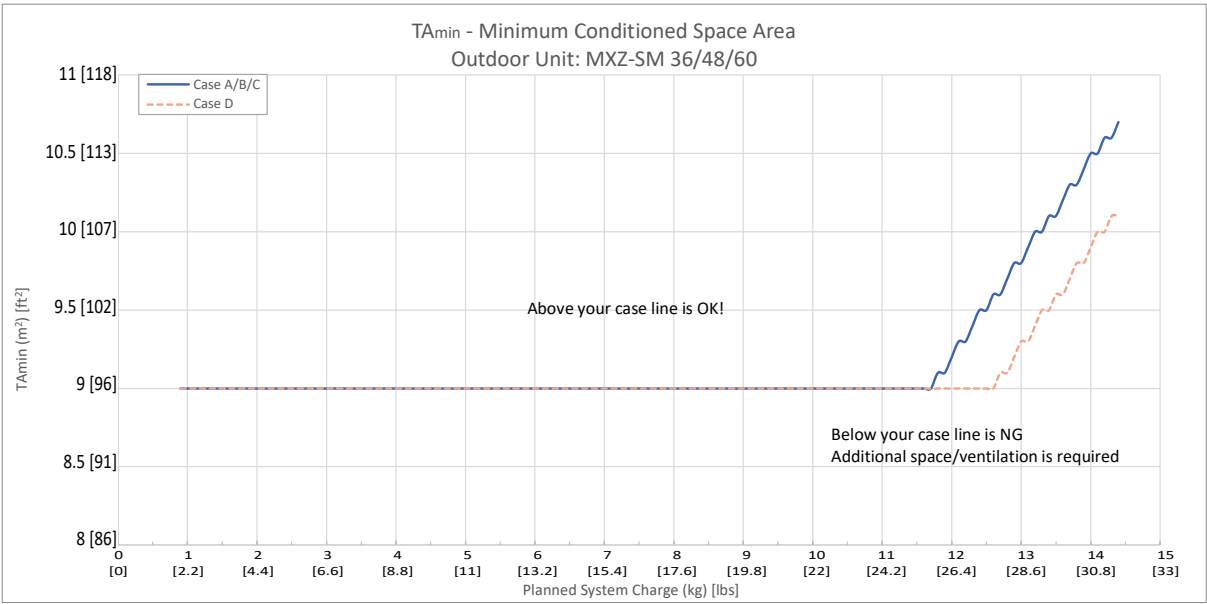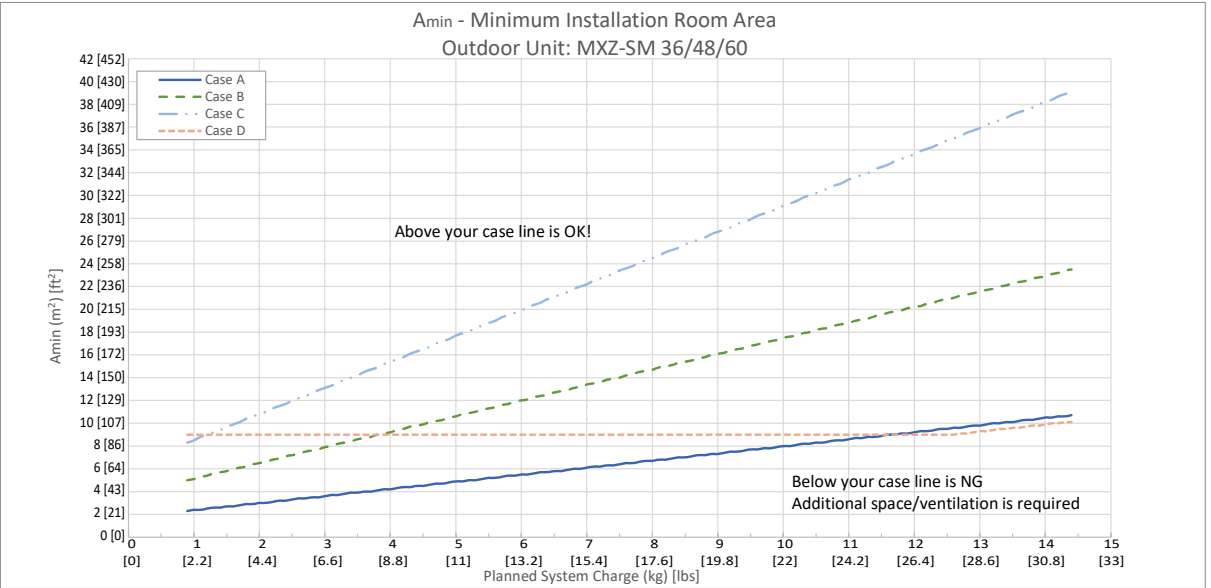

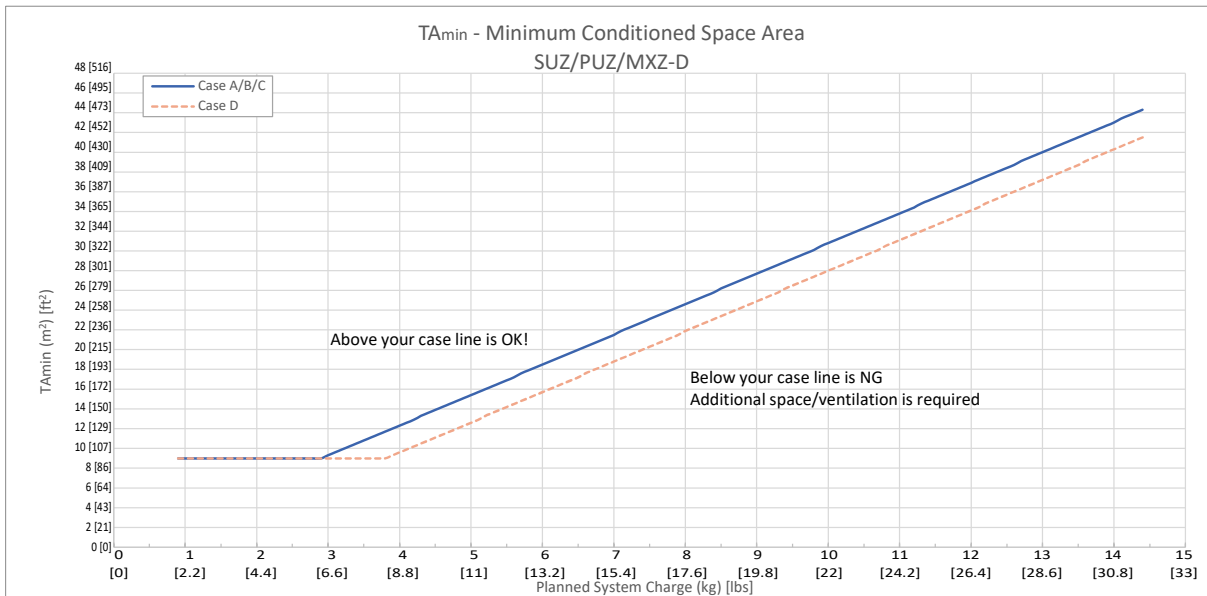

2.3. Handling and service of R454B system



FLAMMABLE REFRIGERANT WARNING

- Follow all national and local regulations and policies regarding refrigerant removal, evacuation, and recovery processes.
- Follow all safety precautions and procedures found in the installation and service manuals.
- Flammable refrigerant systems may only be purged with oxygen-free nitrogen.
 - Never use compressed air or oxygen for purging flammable refrigerant systems.
- Do not place vacuum pump air outlet near potential ignition sources.
- Verify proper ventilation available.

2.3.1. Removal and evacuation of refrigerant R454B



FLAMMABLE REFRIGERANT WARNING

- Verify vacuum pump outlet is secured away from potential ignition sources.
- Verify proper ventilation is available.

1. Safely remove refrigerant following local and national regulations.
2. Evacuate
3. Purge the circuit with inert gas.
4. Evacuate
5. Continuously flush or purge with inert gas when using a flame to solder or de-solder.
6. Open the circuit
7. Recover the refrigerant charge into the correct recovery cylinders if venting is not allowed by local and national codes.

2.3.2. Purging the system with R454B



NOTE

This process might need to be repeated several times.

1. Break the system vacuum with oxygen-free nitrogen.
2. Continue to fill until the working pressure is achieved.
3. Vent to atmosphere.
4. Evacuate the system.
5. Repeat steps until no refrigerant remains in the system, then fill a final time with oxygen-free nitrogen.
6. When purge is complete, vent the system down to atmospheric pressure to enable work to take place.

2.3.3. Charging R454B system

In addition to conventional charging procedures and safety precautions described in the installation and service manuals, read and follow the following precautions:



FLAMMABLE REFRIGERANT WARNING

- Do not allow contamination of different refrigerants to occur when using charging equipment.
- Keep hoses or lines as short as possible to minimize the amount of refrigerant contained in them.
- Keep all cylinders in an appropriate position according to the instructions.
- Ensure that the refrigerating system is properly grounded prior to charging the system with refrigerant.
- Label the system when charging is complete (if not already).
- DO NOT OVERFILL the refrigerant system.
- Pressure test the system prior to re-charging with appropriate purging gas.
- Leak test the system at completion of charge, prior to commissioning, and before leaving the worksite.

2.3.4. Recovery of R454B



FLAMMABLE REFRIGERANT WARNING

- Do not mix refrigerants in recovery units and especially not in cylinders.
- Never heat the compressor body with an open flame or any other ignition sources to accelerate the process.

Verify the following prior to recovering refrigerant from the system:

- Verify that only the proper cylinders required for flammable refrigerant recovery are used and that they are properly labeled.
 - If in doubt, contact manufacturer for consultation.
- Verify the correct number of cylinders needed for total system charge are available.
- Verify cylinders are in good working order with necessary pressure relief and shut-off valves.
- Verify recovery cylinders are empty, properly evacuated, and cooled before recovery.
- Verify calibrated weighing scales are available and in good working order.
- Verify hoses are complete with leak-free disconnect coupling and in good condition.
- Ensure all recovered refrigerant is processed in accordance with local legislation, in proper recovery cylinder, and with appropriate transfer note arranged.
- If compressors or compressor oils are to be removed, verify they are evacuated to an acceptable level to make certain that flammable refrigerant does not remain within the lubricant.
- Verify oil drained from the system is carried out safely.

2.4. Description and testing of leak mitigation functions



NOTE

The refrigerant leak detection system can be tested to verify that leak mitigation actions are functional. These actions serve to slow the leak rate and to disperse any concentrated refrigerant in the ducting.

For systems paired with an MXZ-SM Smart Multi outdoor unit, the unit has a safety-shutoff-valve installed that will close upon a leak detection and the compressor will run for several minutes to collect the refrigerant in the accumulator, then shut off.

The indoor unit fan motor activates to provide circulation airflow.

This process puts stress on system components, so testing should occur only when required, such as during system commissioning, or when advised by Mitsubishi Electric US, Inc. service personnel, or when required by local codes and regulations.

For systems paired with any other outdoor unit (SUZ/PUZ/MXZ *not Smart Multi), leak mitigation actions include automatic cutoff of the outdoor unit compressor and activating the fan motor of the indoor unit for circulation airflow.

2.4.1. Testing procedure

1. Confirm that the system is powered on and in normal operation.
2. Unplug the refrigerant leak sensor cable from the indoor unit control board at the plug connector labeled CNSA.

3. The mitigation actions will be triggered and will continue until the unit is powered off.
4. Power off the system.
5. Reconnect the refrigerant leak sensor cable.
6. Restore power and return the system to normal operation.



FLAMMABLE REFRIGERANT WARNING

The fan will automatically start when refrigerant leak is detected by refrigerant leak sensor. Keep a safe distance from the fan to avoid injury.

2.5. Decommissioning of R454B system



NOTE

LABELING: All equipment that is decommissioned and emptied of refrigerant must have a label stating **FLAMMABLE REFRIGERANT** with the date and signature affixed to the equipment.

Prior to decommissioning, verify the following safety checks:

- Follow all safety precautions and procedures.
- Take oil and refrigerant samples in case analysis is required prior to re-use of recovered refrigerant.
- Verify proper power is available necessary to fully execute procedure.
- Ensure the recovery process is supervised at all times by a trained professional.
- Verify mechanical handling equipment is available, if required, for handling refrigerant cylinders.
- Ensure all personal protective equipment is available and being used correctly.
- Verify recovery equipment and cylinders conform to the appropriate standards.

Follow the steps listed in this procedure to properly decommission the system:

1. Isolate system electrically.
2. Pump down refrigerant system, if possible.
3. If a vacuum is not possible, make a manifold so that refrigerant can be removed from various parts of the system.

4. Verify cylinder is situated on the scales before recovery takes place.
5. Start the recovery machine and operate in accordance with instructions.
 - Do not overfill cylinders (no more than 80 % volume liquid charge).
 - Do not exceed the maximum working pressure of the cylinder, even temporarily.
6. Once cylinders are properly filled and the process complete:
 - Promptly remove the cylinders and the equipment from site.
 - Verify all isolation valves on the equipment are closed.



NOTE

Do not re-use recovered refrigerant in another refrigerant system unless it has been cleaned in accordance with procedure and regulation.


2.6. Disposal of R454B

Recover the refrigerant and recycle it.

If recycling is not possible then it should be incinerated by a licensed facility.

3. Part Names and Functions

Table 1. Indoor unit

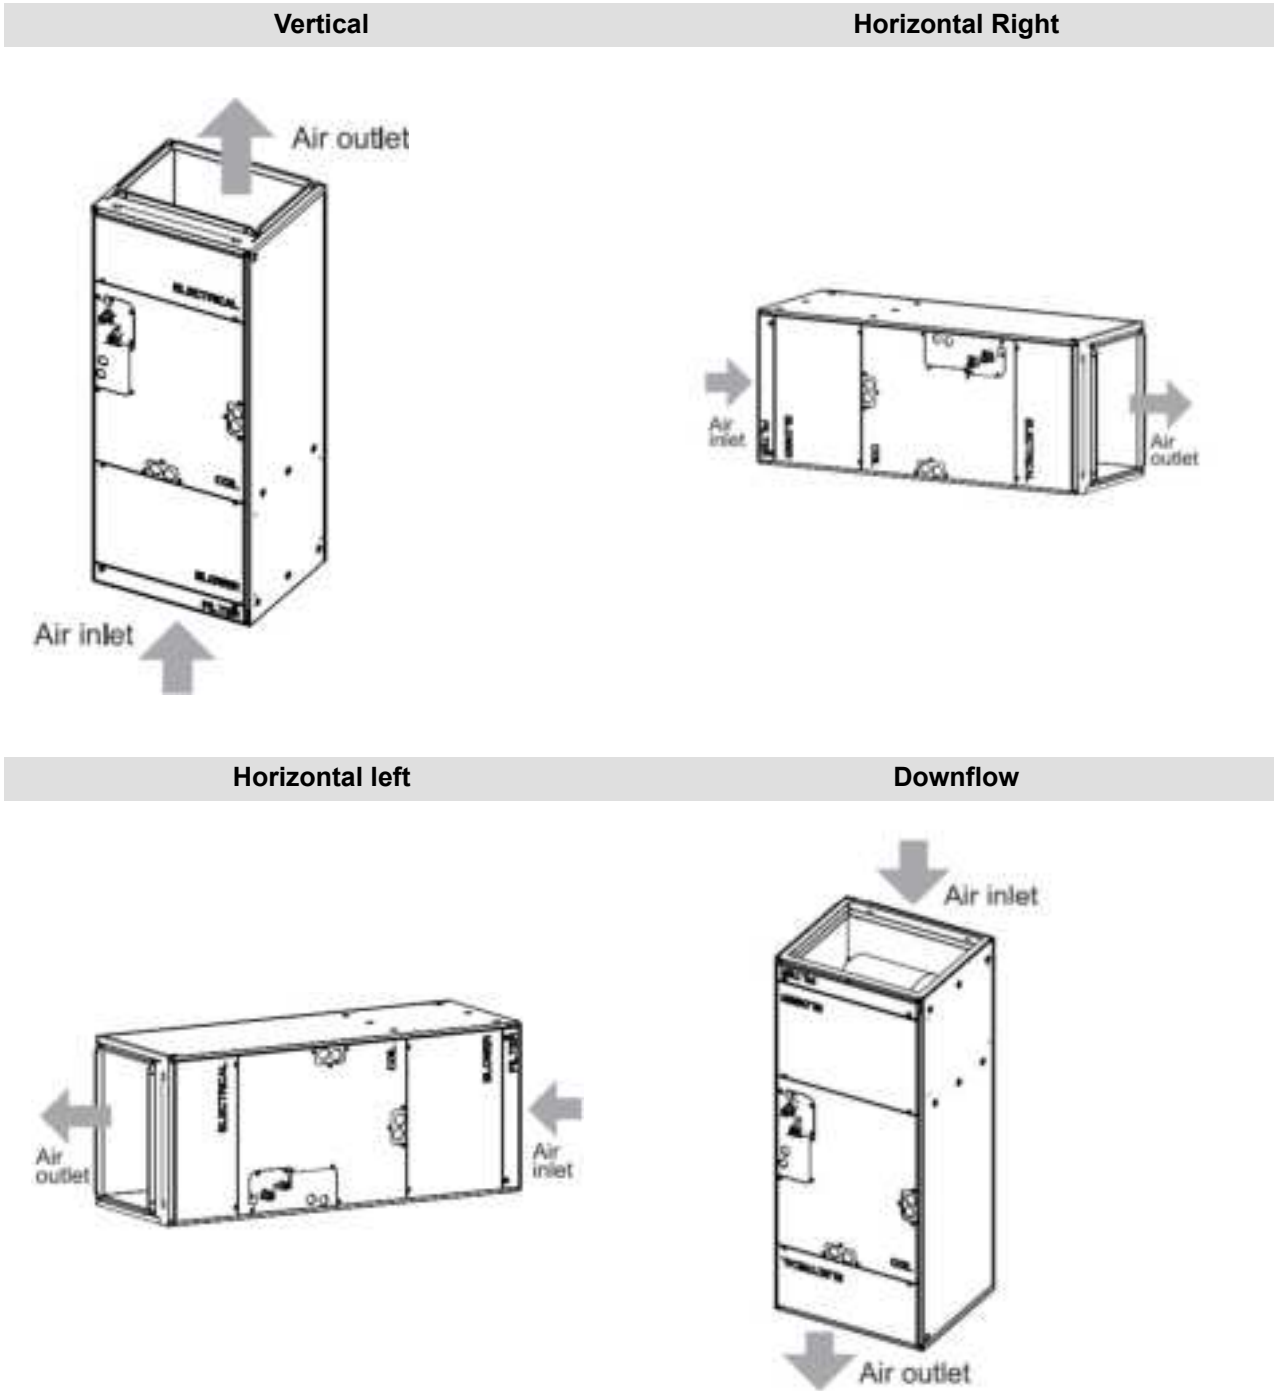

4. Specifications

Model code			12	18
Power source			208/230V, 1-phase, 60Hz	
Cooling / Heating capacity	Btu/h		12,000 / 13,500	18,000 / 20,000
	kW		3.5 / 4.0	5.3 / 5.9
Tonnage			1	1.5
Dimensions	Height	mm [in]	1275 [50-1/4]	
	Width		432 [17]	
	Depth		548 [21-5/8]	
Net weight		kg [lb]	51 [113]	
Fan	Airflow rate (low-mid-high)	CFM	280 - 340 - 400	515 - 625 - 735
	Minimum circulation airflow ^a		400	735
	External static pressure	in. WG [Pa]	0.30 - 0.50 - 0.80 [75 - 125 - 200]	

^aSpecified in UL60335-2-40

Model code			24	30
Power source			208/230V, 1-phase, 60Hz	
Cooling / Heating capacity	Btu/h		24,000 / 27,500	30,000 / 32,000
	kW		7.0 / 7.9	8.8 / 9.4
Tonnage			2	2.5
Dimensions	Height	mm [in]	1378 [54-1/4]	
	Width		534 [21]	
	Depth		548 [21-5/8]	
Net weight		kg [lb]	64 [141]	
Fan	Airflow rate (low-mid-high)	CFM	613 - 744 - 875	
	Minimum circulation airflow ^a		875	
	External static pressure	in. WG [Pa]	0.30 - 0.50 - 0.80 [75 - 125 - 200]	

Model code			36	42	48
Power source			208/230V, 1-phase, 60Hz		
Cooling / Heating capacity		Btu/h	34,000 / 38,000	42,000 / 48,000	48,000 / 51,000
		kW	10.0 / 11.1	12.3 / 14.1	14.1 / 14.9
Tonnage			3	3.5	4
Dimensions	Height	mm [in]	1511 [59-1/2]		
	Width		635 [25]		
	Depth		548 [21-5/8]		
Net weight		kg [lb]	78 [172]		
Fan	Airflow rate (low-mid-high)	CFM	788 - 956 - 1125	1040 - 1262 - 1485	
	Minimum circulation airflow ^a .		1125	1485	
	External static pressure	in. WG [Pa]	0.30 - 0.50 - 0.80 [75 - 125 - 200]		

Model code			60	
Power source			208/230V, 1-phase, 60Hz	
Cooling / Heating capacity		Btu/h	56,000 / 58,000	
		kW	16.4 / 17.0	
Tonnage			5	
Dimensions	Height	mm [in]	1511 [59-1/2]	
	Width		635 [25]	
	Depth		548 [21-5/8]	
Net weight		kg [lb]	80 [176]	
Fan	Airflow rate ^a . (low-mid-high)	CFM	1155-1400-1650 (Cooling mode) 1225-1485-1750 (Heating mode)	
	Minimum circulation airflow ^b		1650	
	External static pressure	in. WG [Pa]	0.30 - 0.50 - 0.80 [75 - 125 - 200]	



^a[→Specified in UL60335-2-40]

^b[→Specified in UL60335-2-40]



5. Fan Performance and Corrected Airflow

Table 2. Model code 12

Vertical, Horizontal right, Horizontal left	Downflow
External static pressure: 75Pa, 0.30 [in. WG], Power source: 208/230 V, 60Hz	

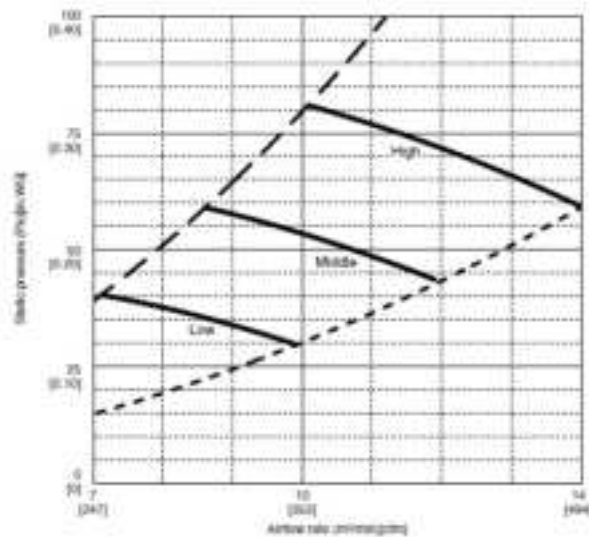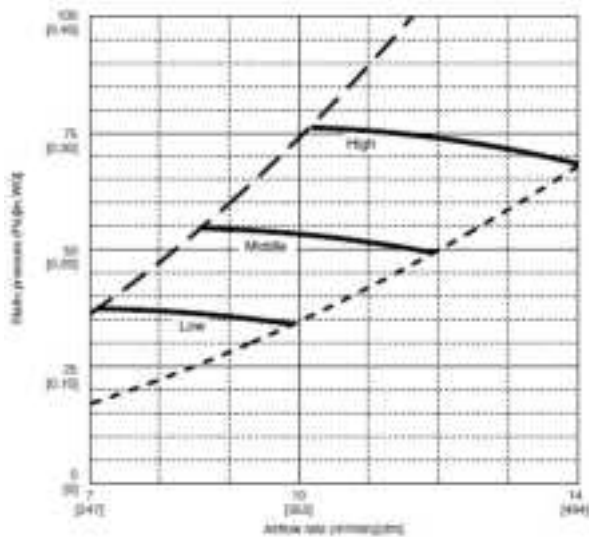

Vertical, Horizontal right, Horizontal left	Downflow
External static pressure: 125Pa, 0.50 [in. WG], Power source: 208/230 V, 60Hz	

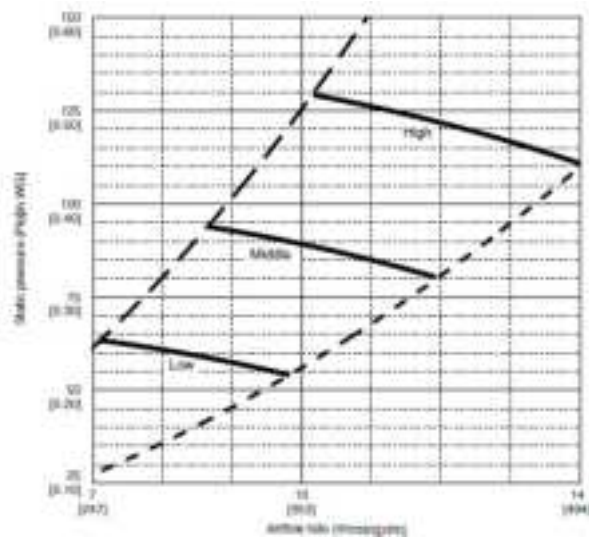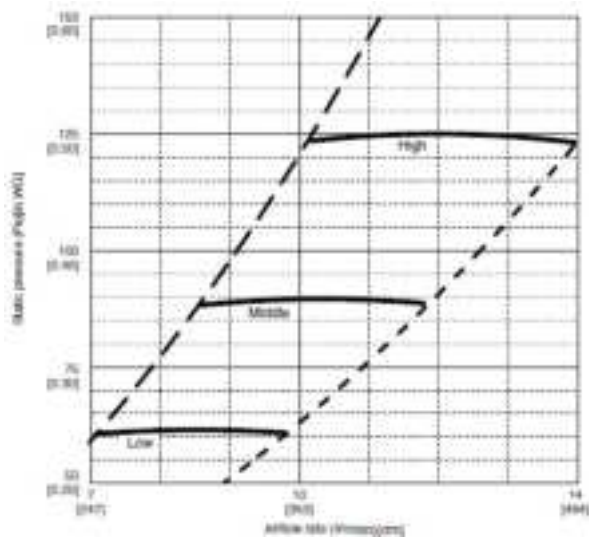

Vertical, Horizontal right, Horizontal left

Downflow

External static pressure: 200Pa, 0.80 [in. WG], Power source: 208/230 V, 60Hz




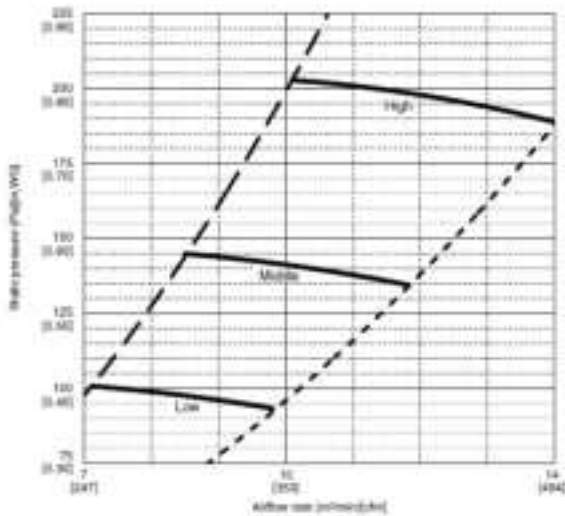


Table 3. Model code 18

Vertical, Horizontal right, Horizontal left

Downflow



External static pressure: 75Pa, 0.30 [in. WG], Power source: 208/230 V, 60Hz

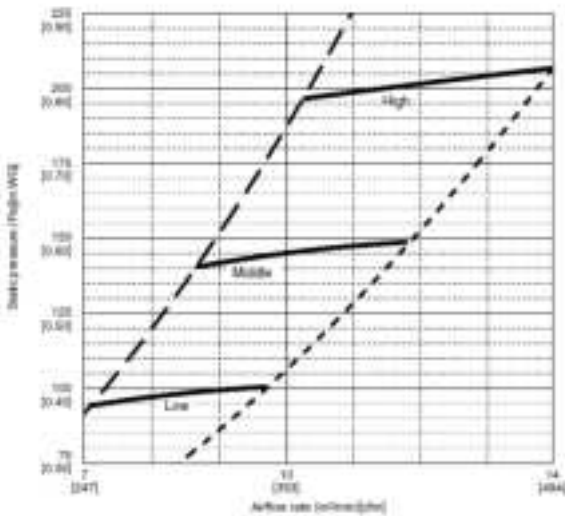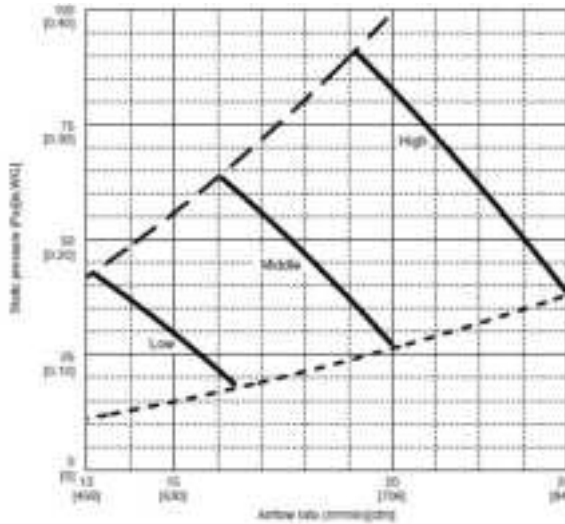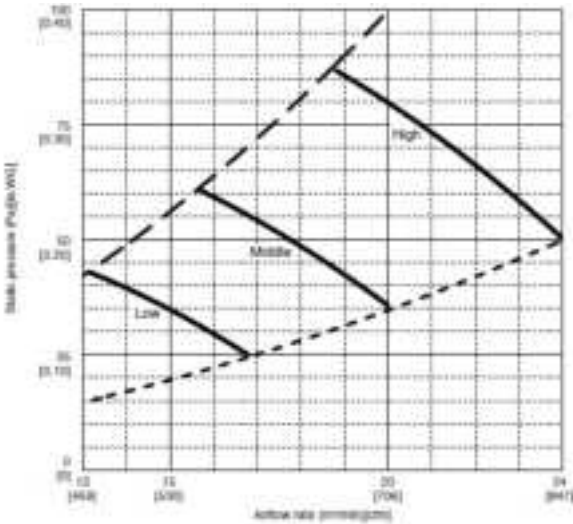

Vertical, Horizontal right, Horizontal left

Downflow

External static pressure: 125Pa, 0.50 [in. WG], Power source: 208/230 V, 60Hz

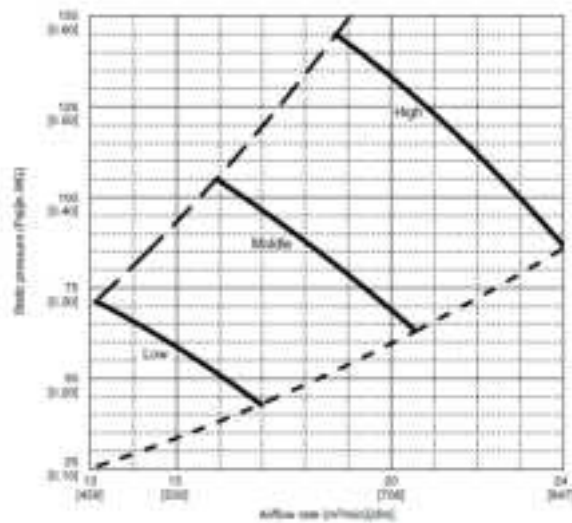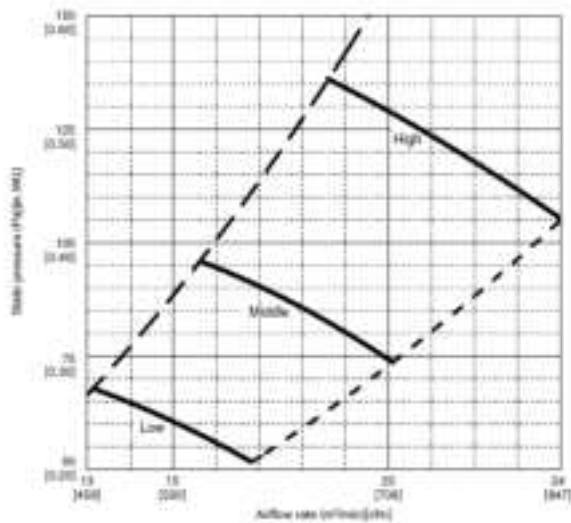

Vertical, Horizontal right, Horizontal left

Downflow

External static pressure: 200Pa, 0.80 [in. WG], Power source: 208/230 V, 60Hz




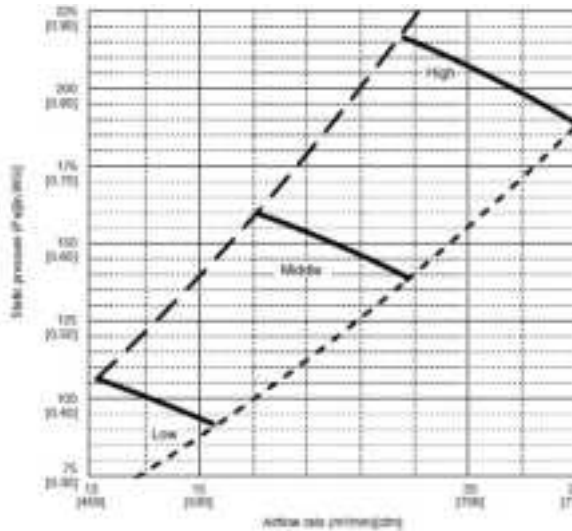


Table 4. Model code 24



Vertical, Horizontal right, Horizontal left Downflow

External static pressure: 75Pa, 0.30 [in. WG], Power source: 208/230 V, 60Hz

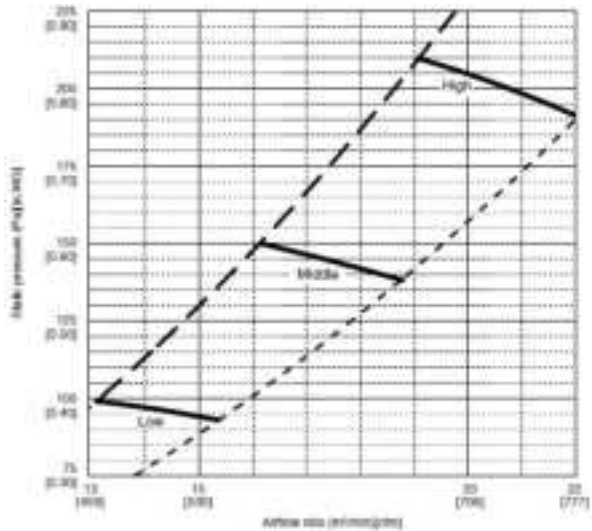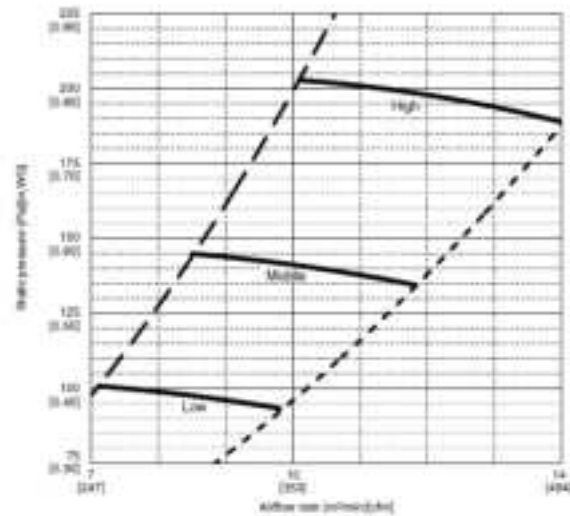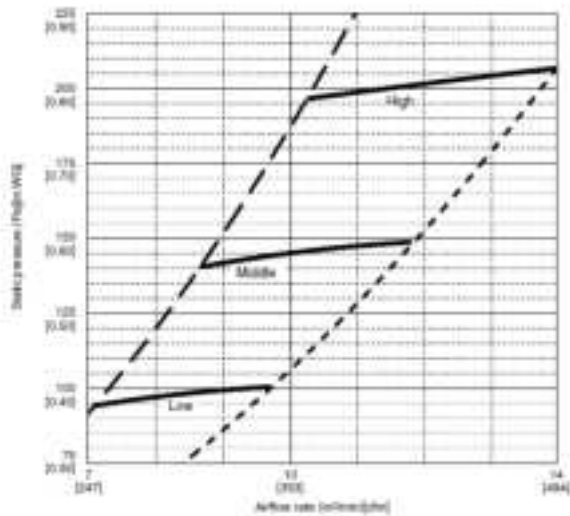

Vertical, Horizontal right, Horizontal left Downflow

External static pressure: 125Pa, 0.50 [in. WG], Power source: 208/230 V, 60Hz

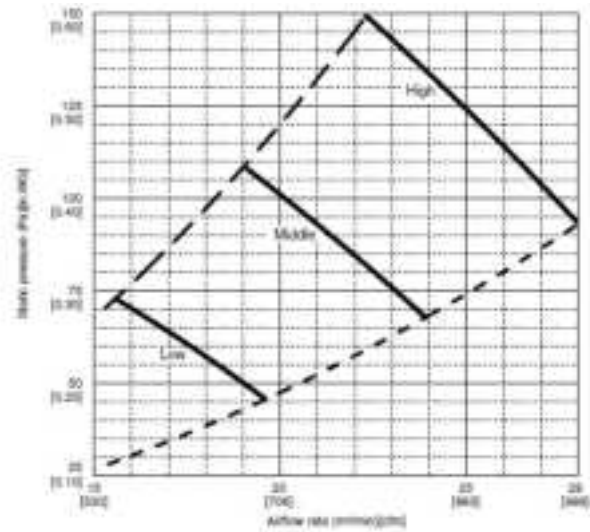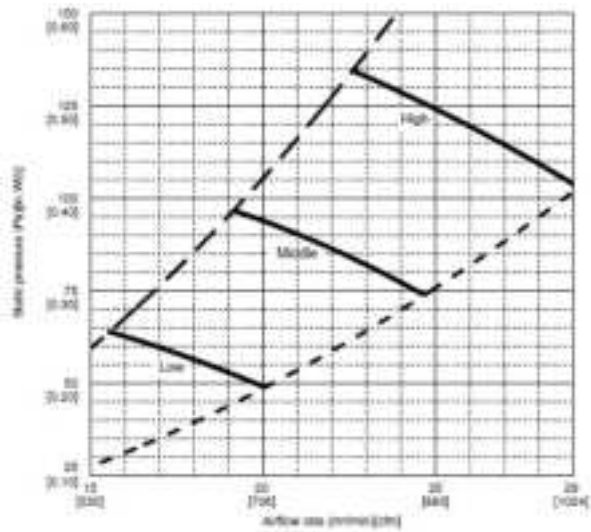

Vertical, Horizontal right, Horizontal left

Downflow

External static pressure: 200Pa, 0.80 [in. WG], Power source: 208/230 V, 60Hz




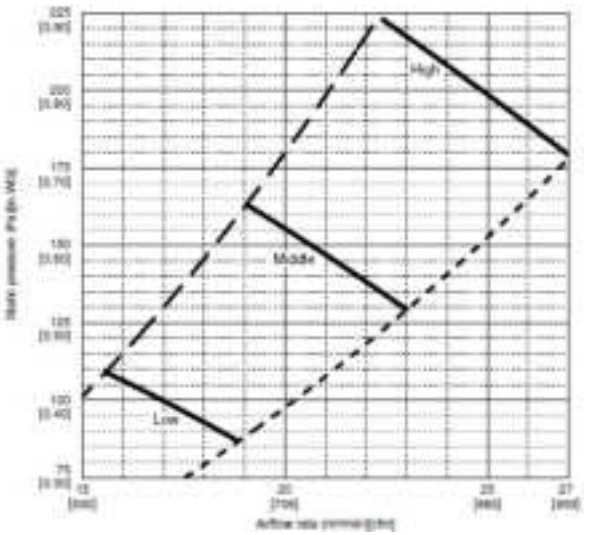


Table 5. Model code 30

Vertical, Horizontal right, Horizontal left

Downflow

External static pressure: 75Pa, 0.30 [in. WG], Power source: 208/230 V, 60Hz

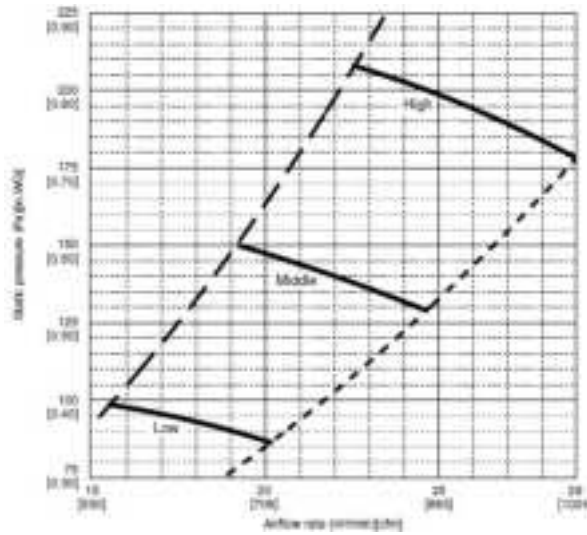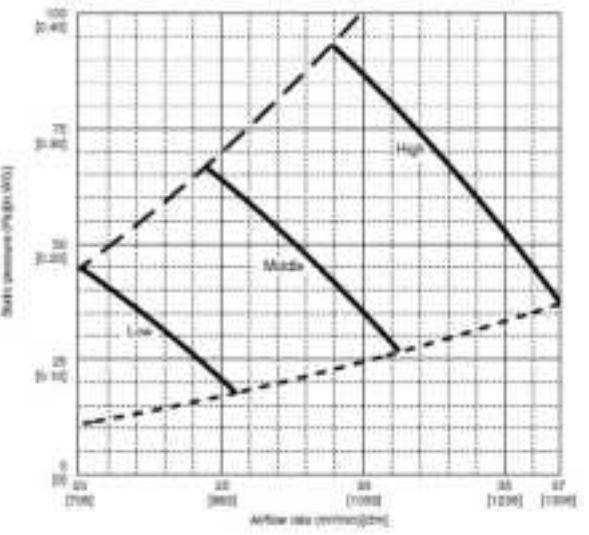
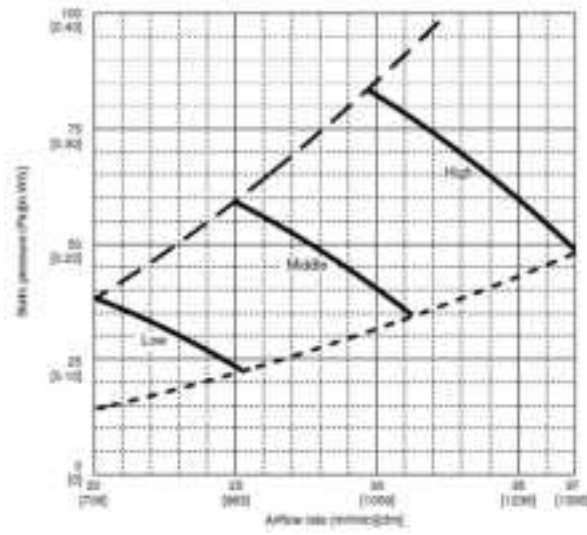


ENGLISH

Vertical, Horizontal right, Horizontal left

Downflow

External static pressure: 125Pa, 0.50 [in. WG], Power source: 208/230 V, 60Hz

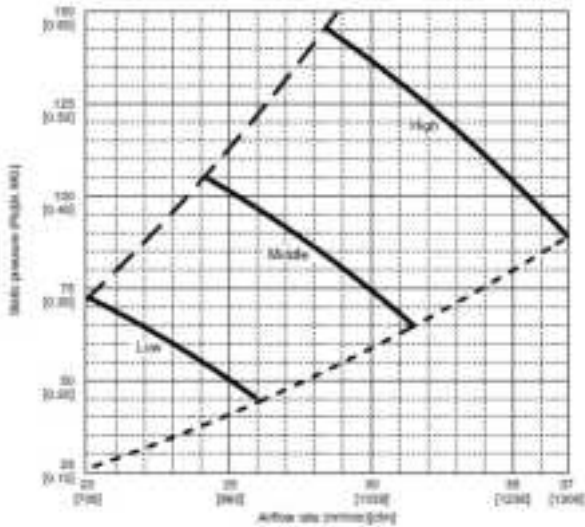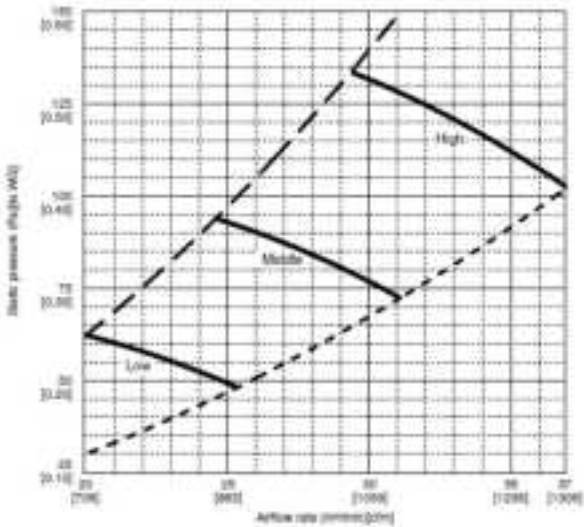

Vertical, Horizontal right, Horizontal left

Downflow

External static pressure: 200Pa, 0.80 [in. WG], Power source: 208/230 V, 60Hz




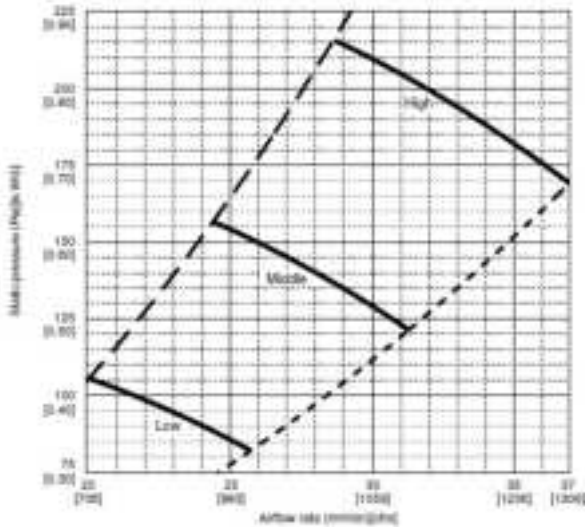


Table 6. Model code 36



Vertical, Horizontal right, Horizontal left Downflow

External static pressure: 75Pa, 0.30 [in. WG], Power source: 208/230 V, 60Hz

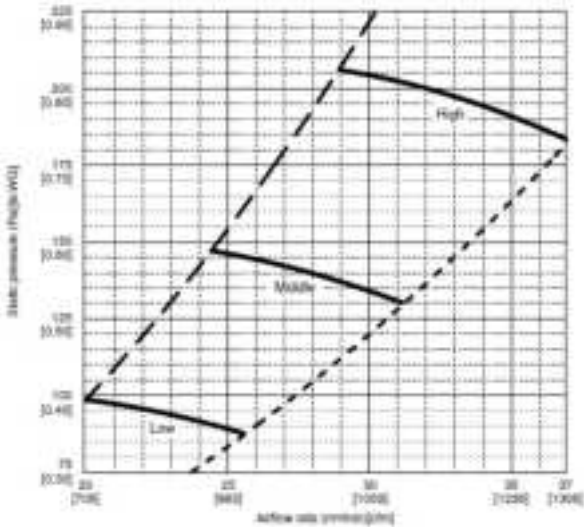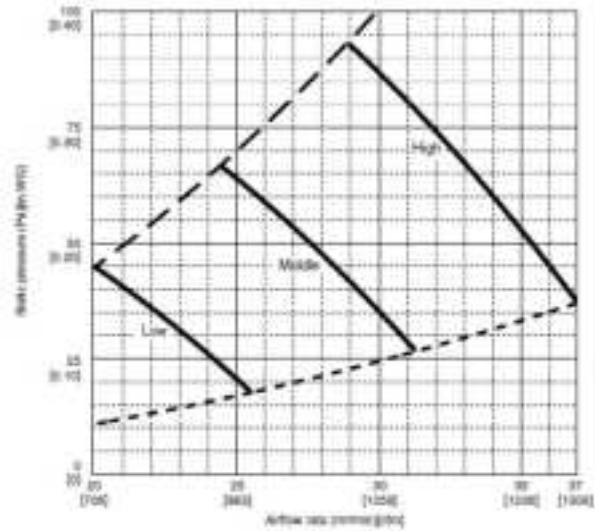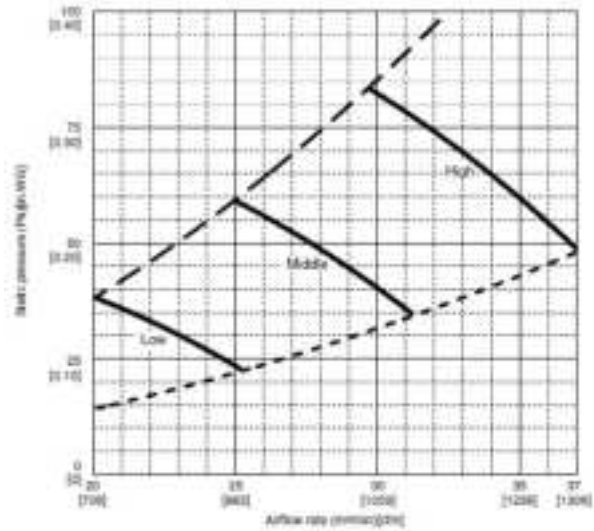

Vertical, Horizontal right, Horizontal left Downflow

External static pressure: 125Pa, 0.50 [in. WG], Power source: 208/230 V, 60Hz

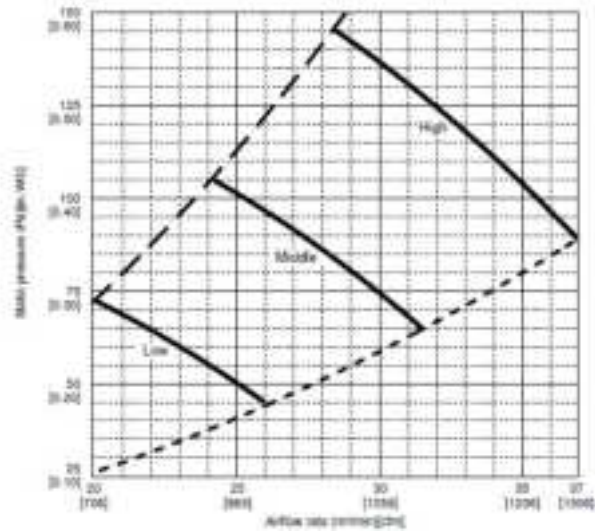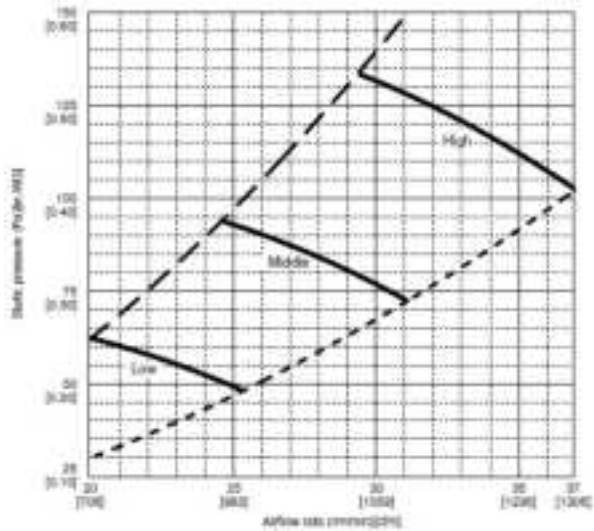

ENGLISH

Vertical, Horizontal right, Horizontal left

Downflow

External static pressure: 200Pa, 0.80 [in. WG], Power source: 208/230 V, 60Hz




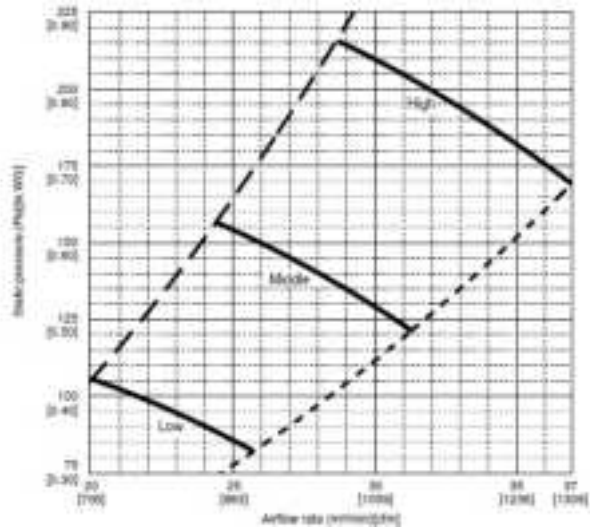


Table 7. Model code 42 & 48

Vertical, Horizontal right, Horizontal left

Downflow



External static pressure: 75Pa, 0.30 [in. WG], Power source: 208/230 V, 60Hz

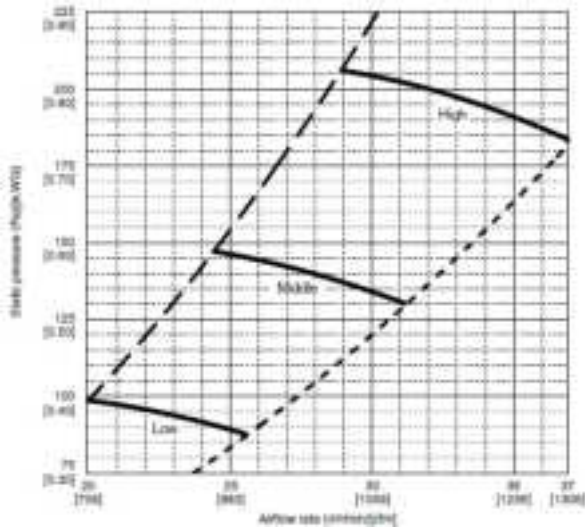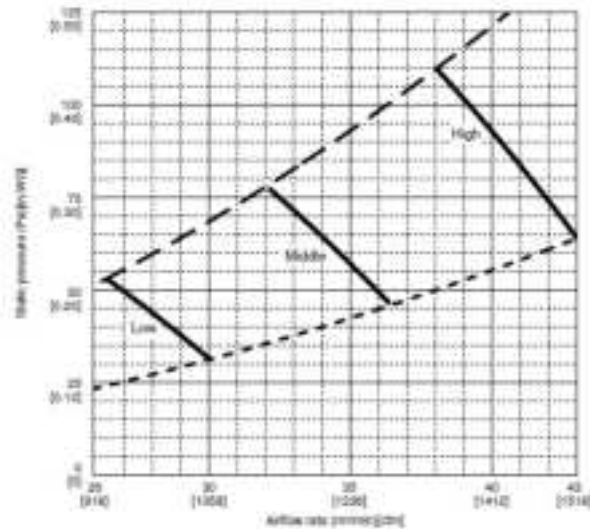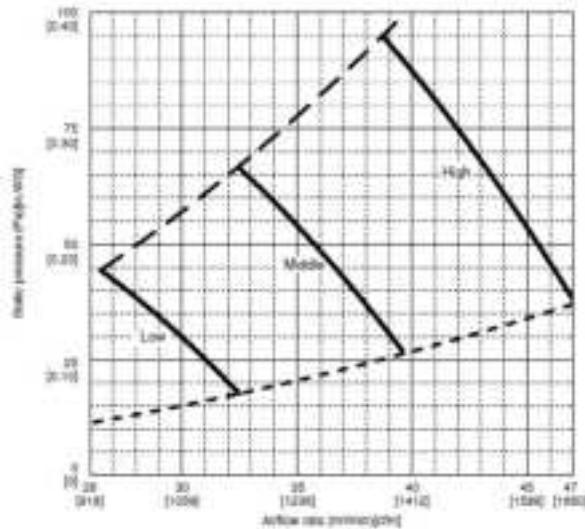

Vertical, Horizontal right, Horizontal left

Downflow

External static pressure: 125Pa, 0.50 [in. WG], Power source: 208/230 V, 60Hz

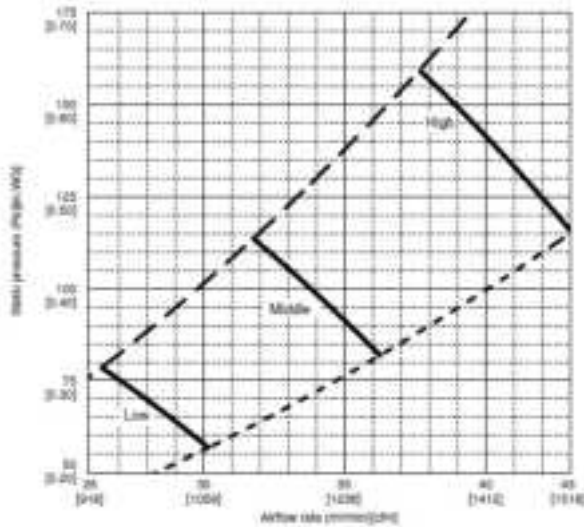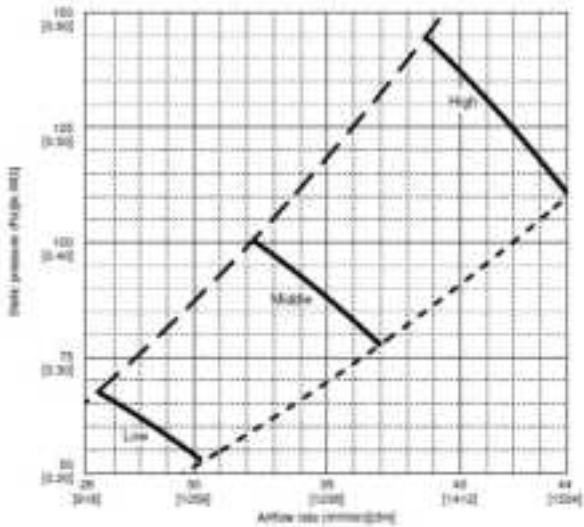

Vertical, Horizontal right, Horizontal left

Downflow

External static pressure: 200Pa, 0.80 [in. WG], Power source: 208/230 V, 60Hz



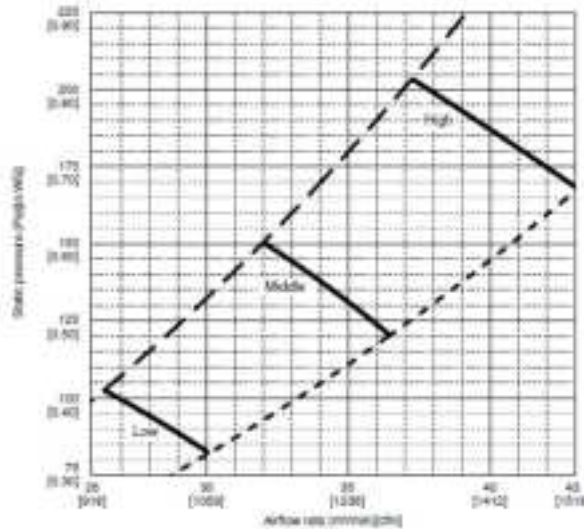


Table 8. Model code 60: External static pressure: 75Pa, 0.30 [in. WG], Power source: 208/230 V, 60Hz

Heating: Vertical, Horizontal right, Horizontal left

Cooling: Vertical, Horizontal right, Horizontal left

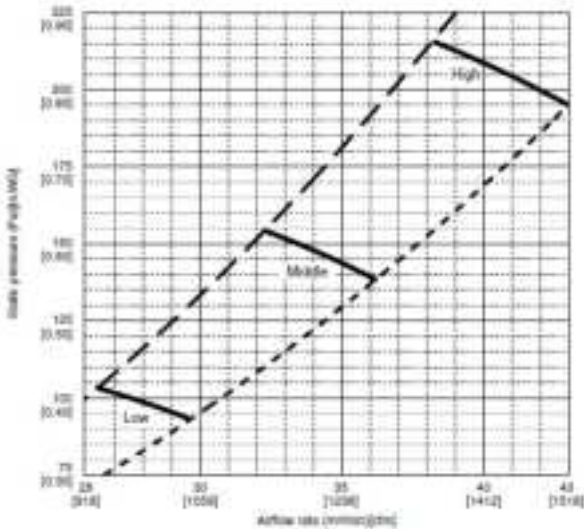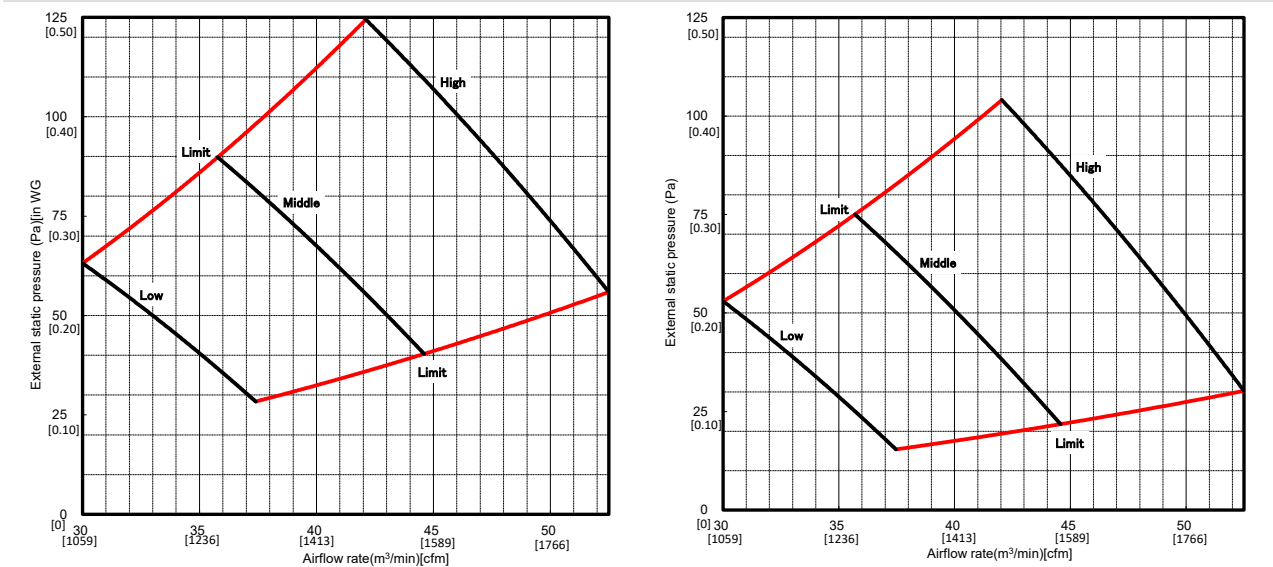

Downflow

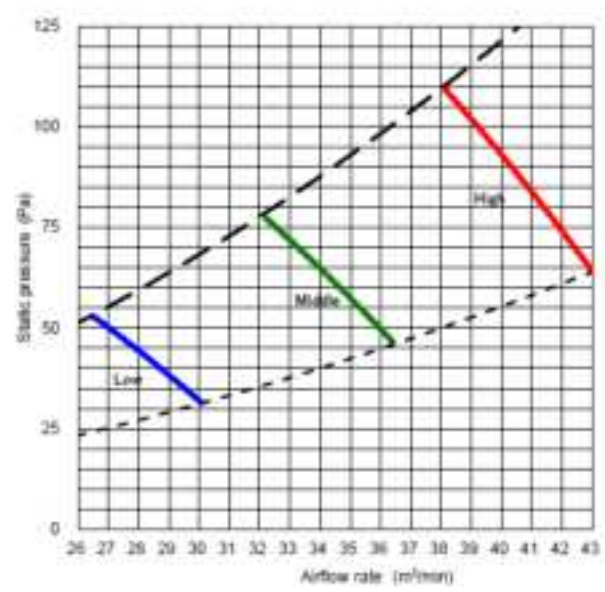


Table 9. Model code 60: External static pressure: 125Pa, 0.50 [in. WG], Power source: 208/230 V, 60Hz




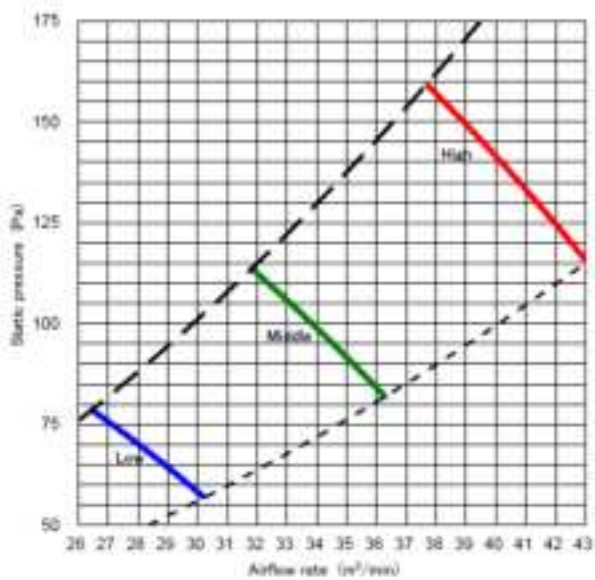


Table 10. Model code 60: External static pressure: 200Pa, 0.80 [in. WG], Power source: 208/230 V, 60Hz

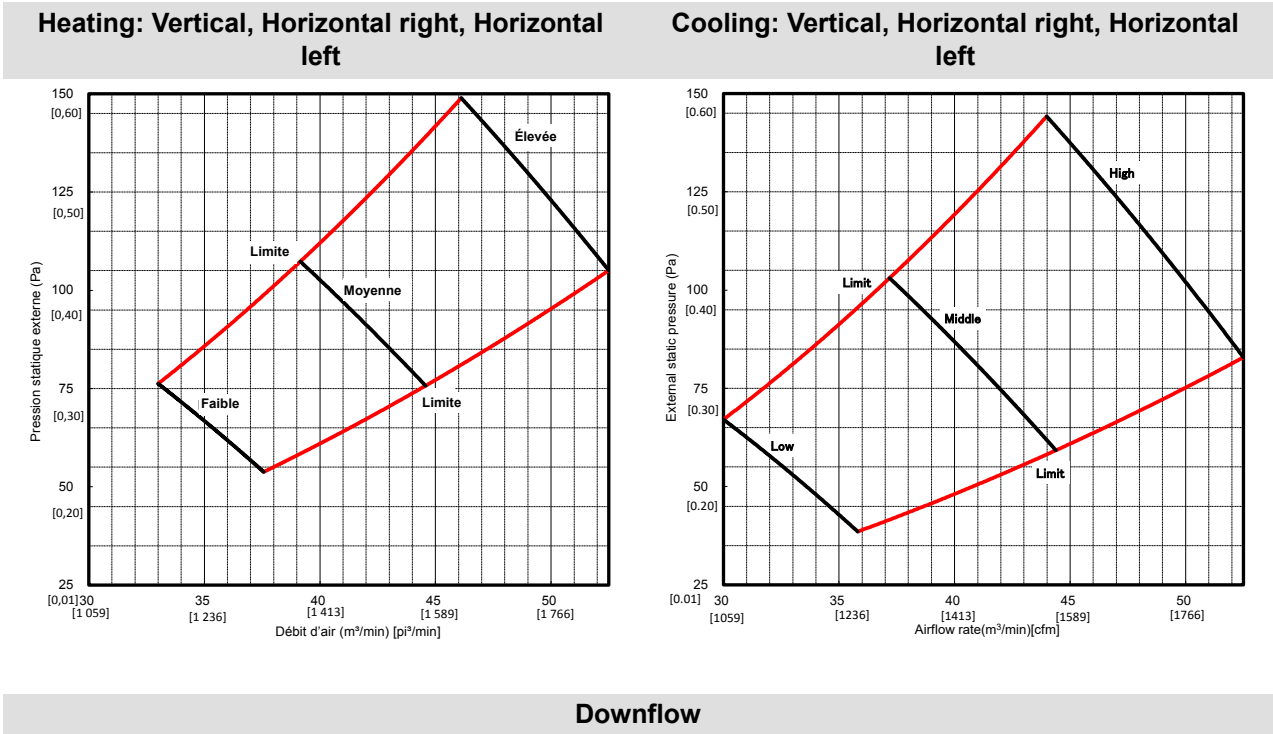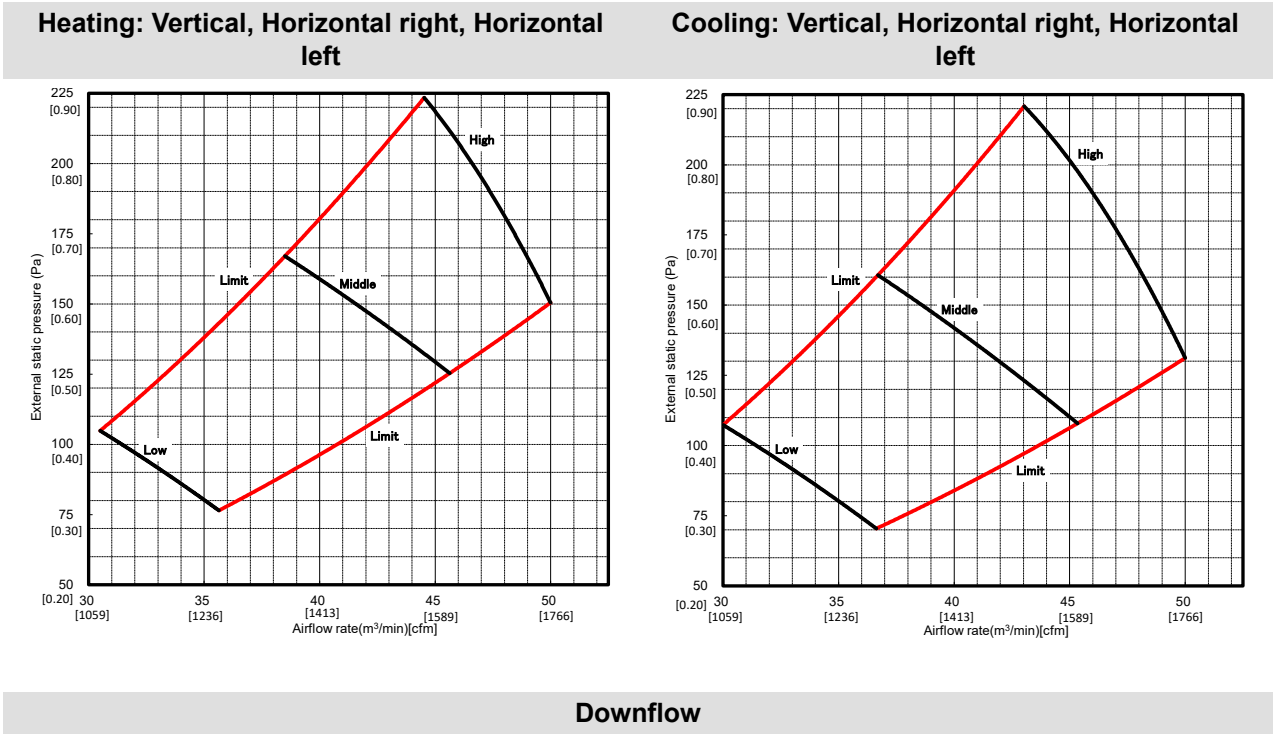


Downflow

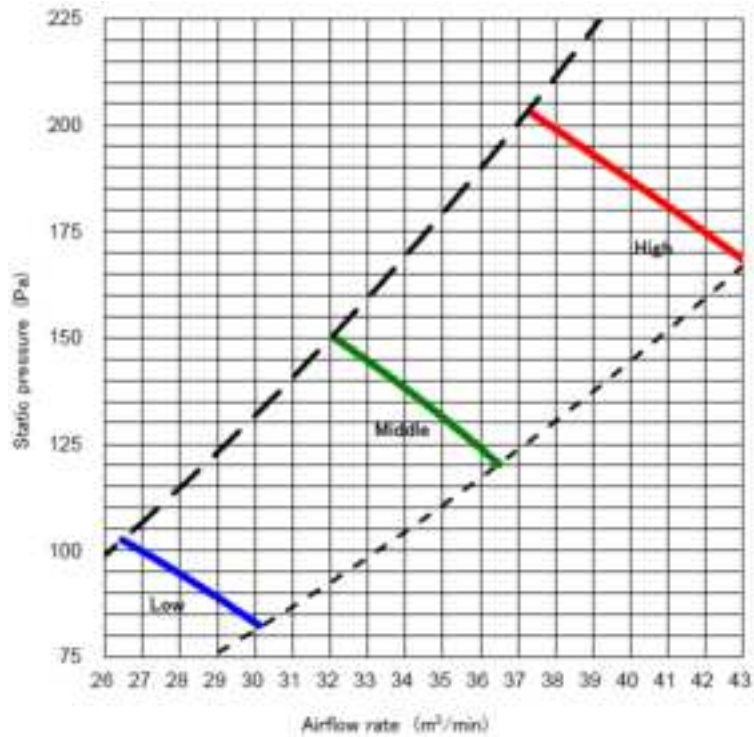


****Downflow Special Configuration: External Static Pressure (MODEL CODE 60 ONLY)**
75, 125, 200 Pa (0.30, 0.50, 0.80 in. WG), Power source: 208/230 V, 60Hz**


External static pressure : 75 - 200 Pa, 0.30 - 0.80 [in.WG]
Power source:208,230V 60Hz

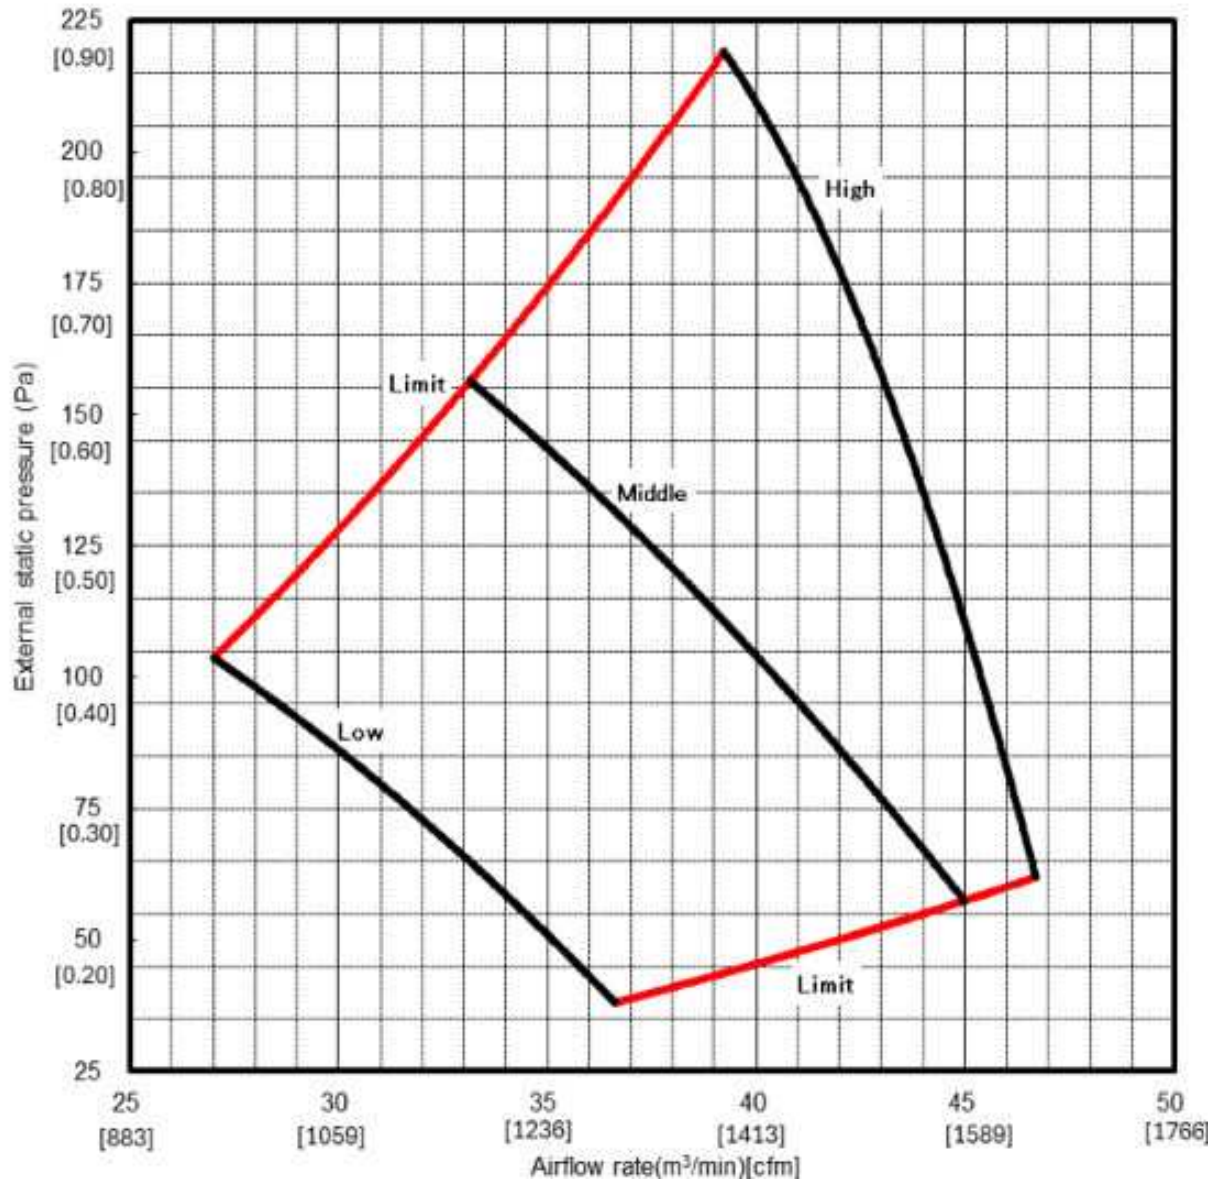

Air filter

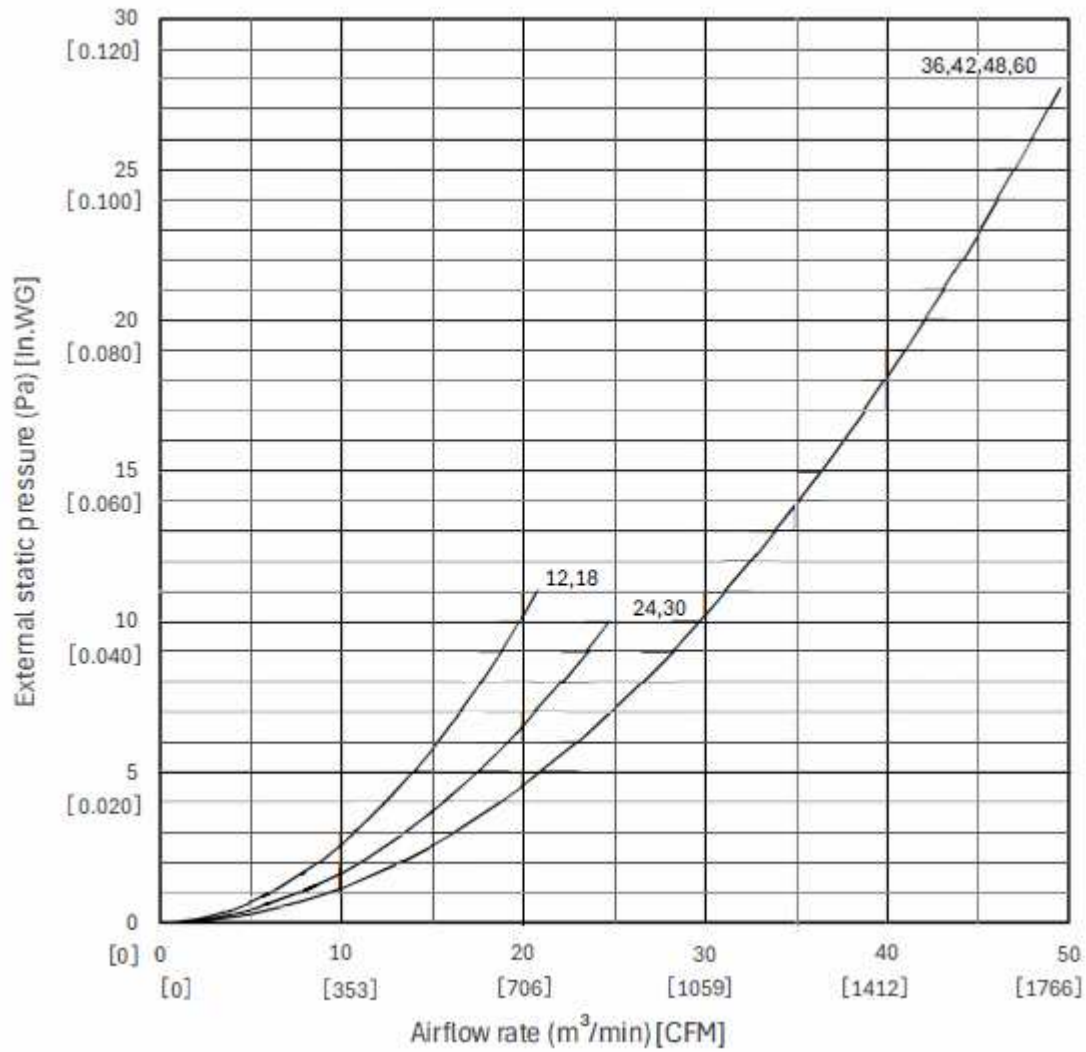


6. Sound pressure level

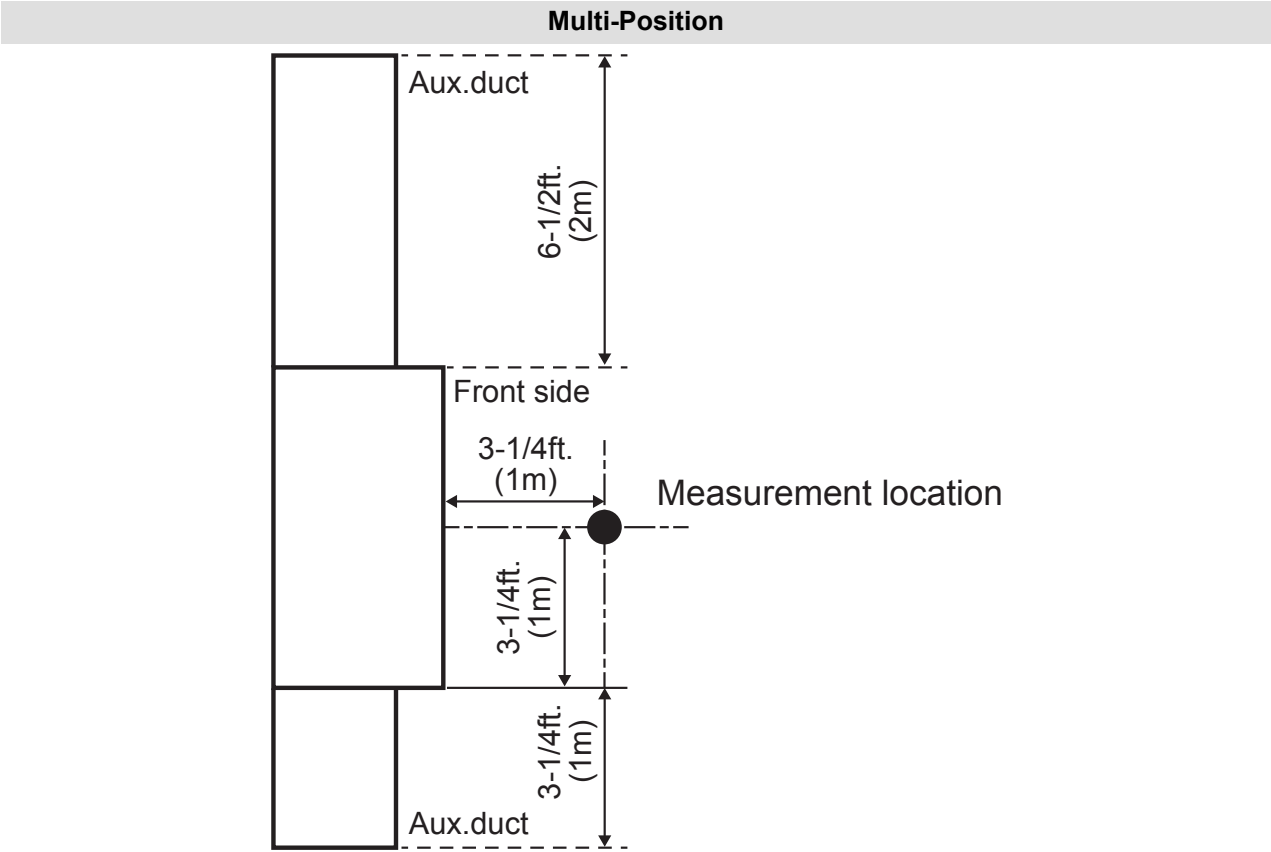


ENGLISH

6.1. NC Curves

Table 11. Model code 12, External static pressure 0.30, 0.50, 0.80 in WG (75, 125, 200 Pa).

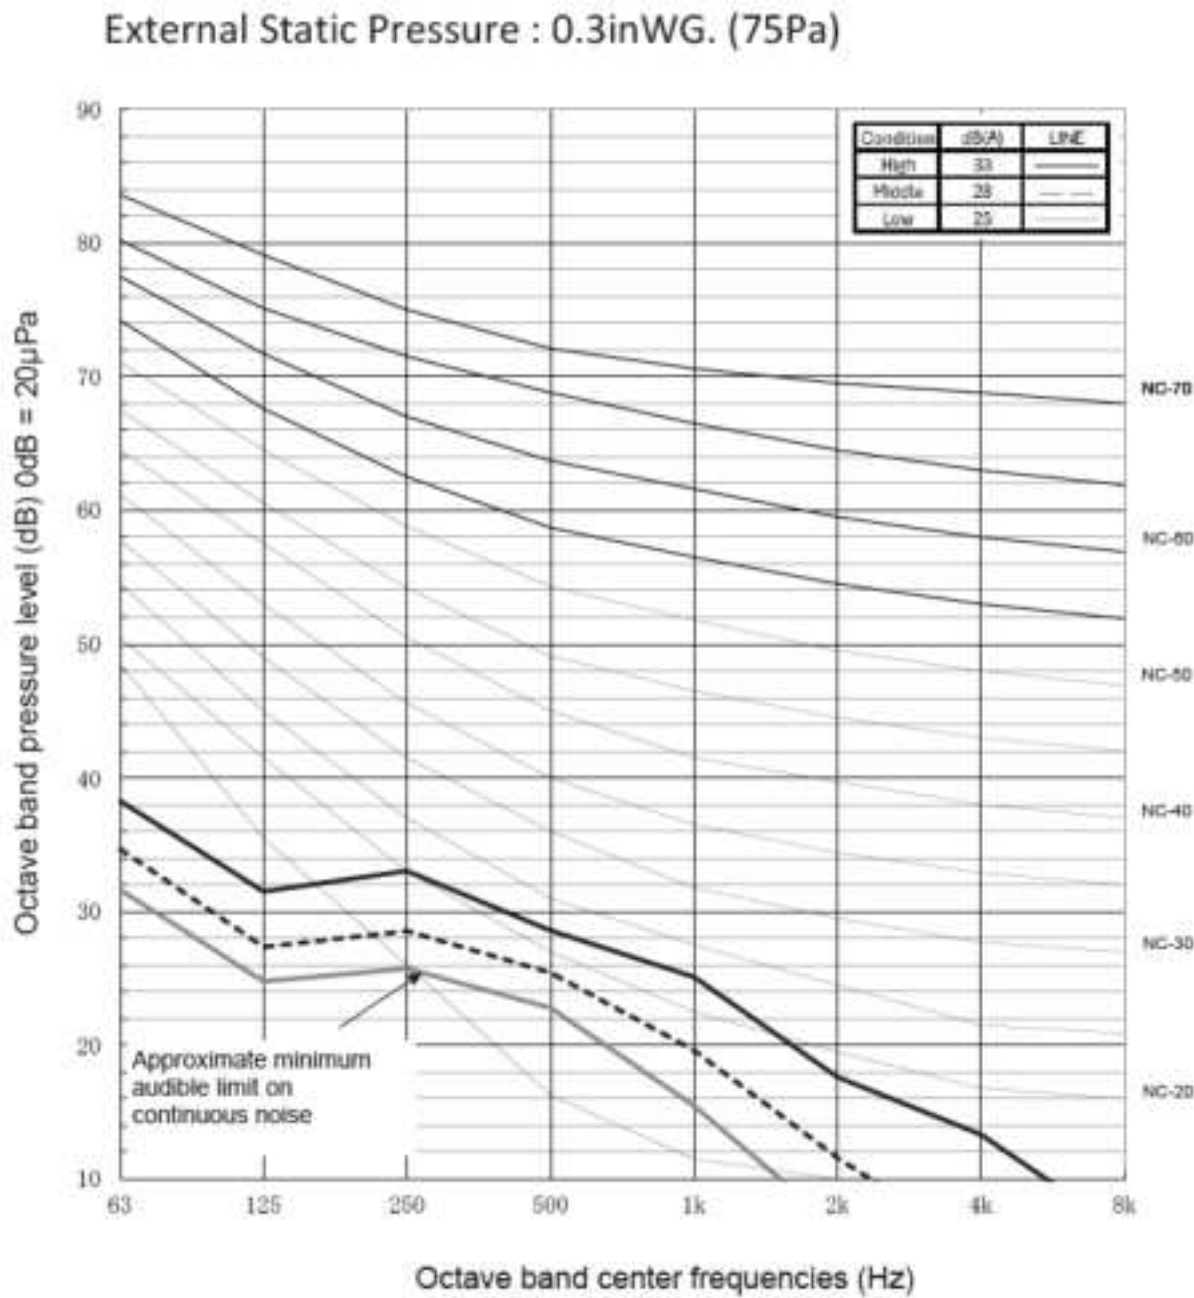

External Static Pressure : 0.5inWG. (125Pa)

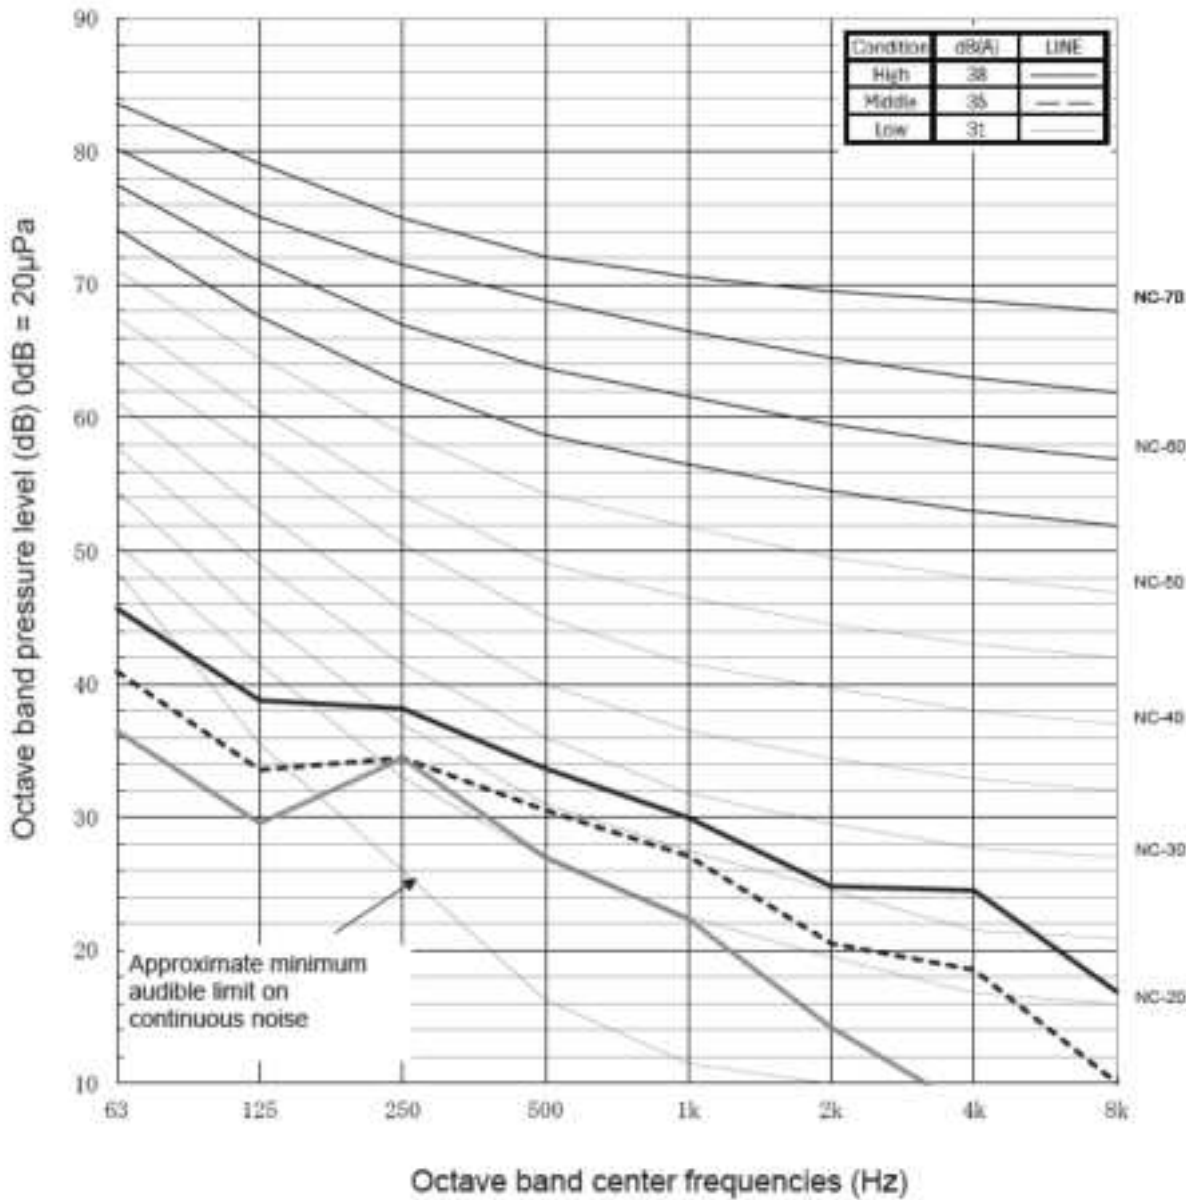

ENGLISH

External Static Pressure : 0.8inWG. (200Pa)




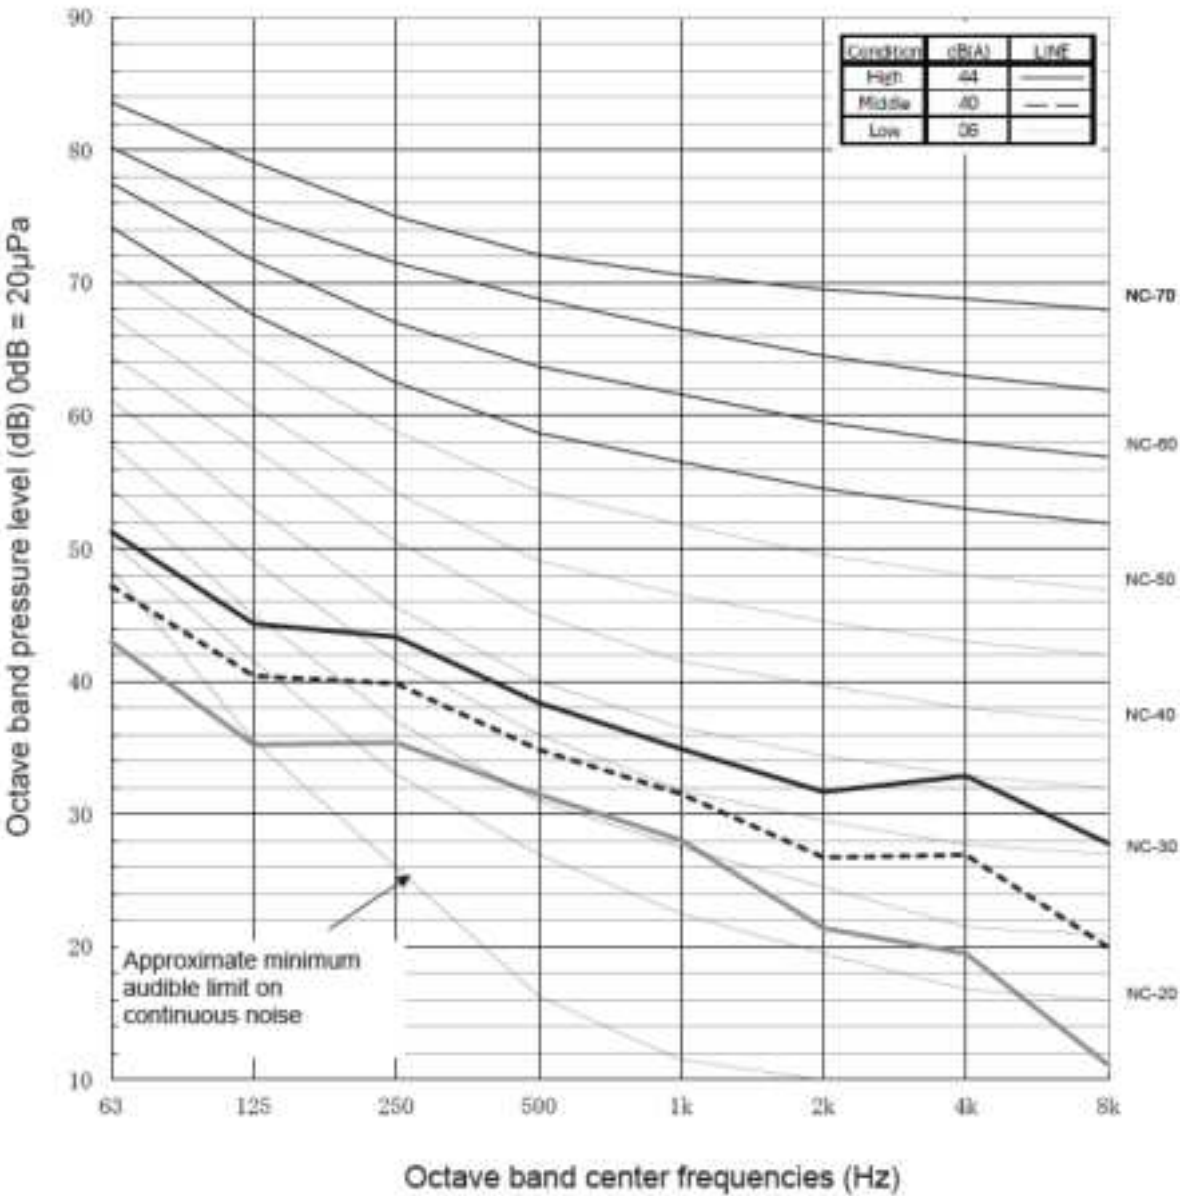


Table 12. Model code 18, External static pressure 0.30, 0.50, 0.80 in WG (75, 125, 200 Pa).

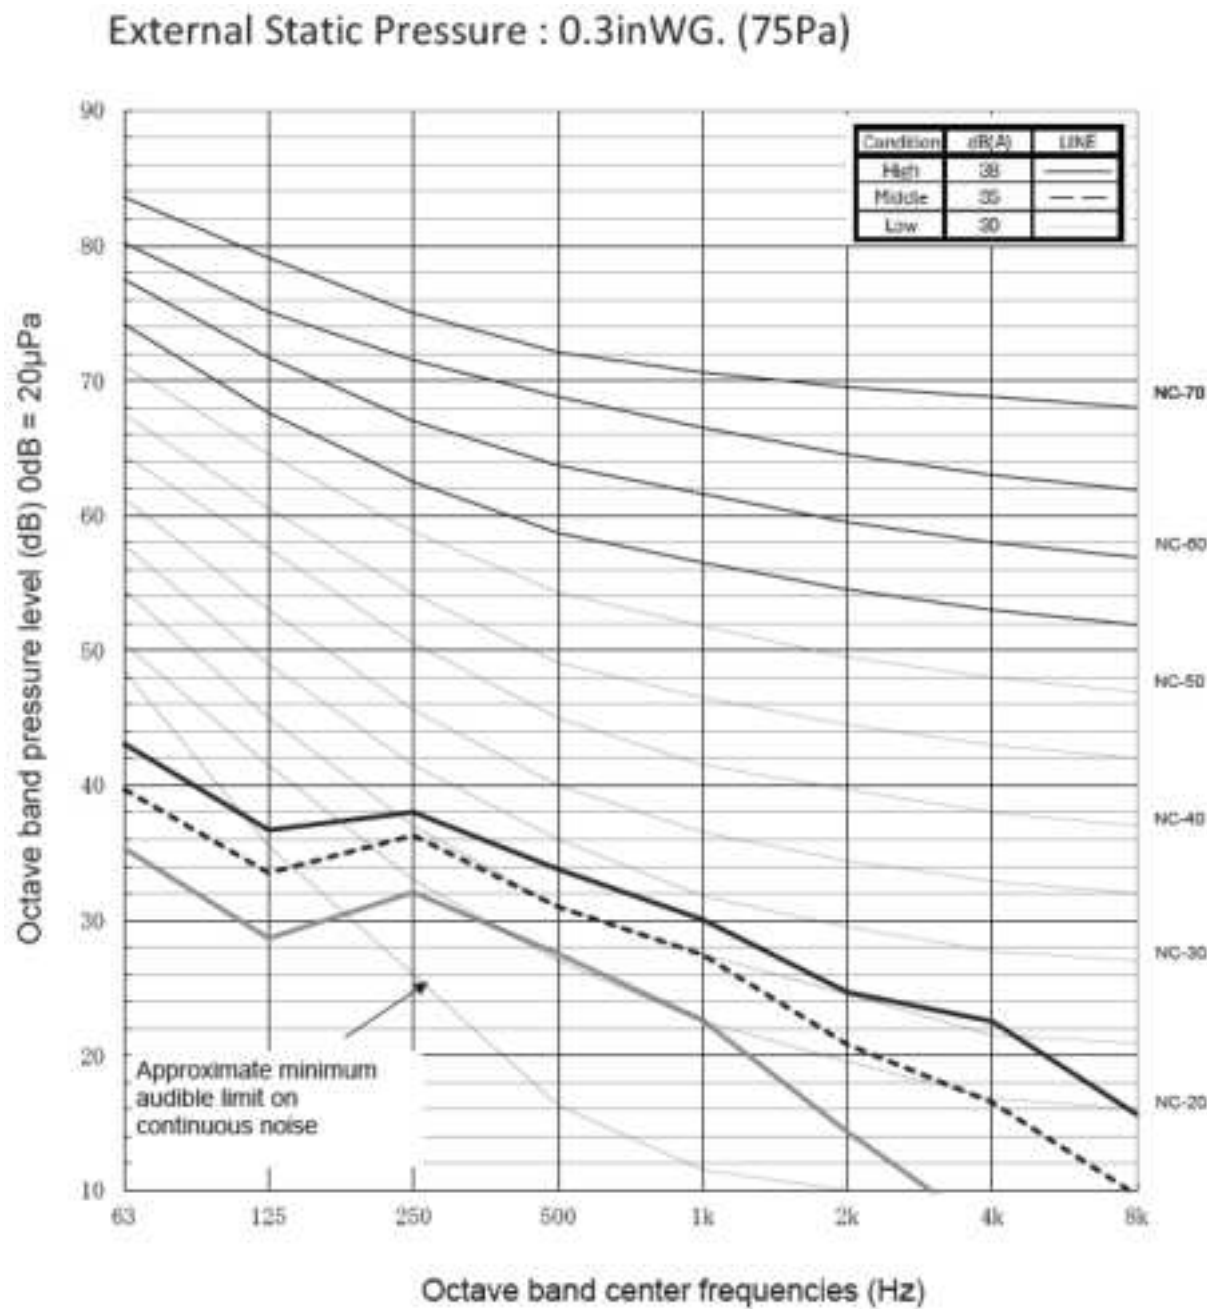

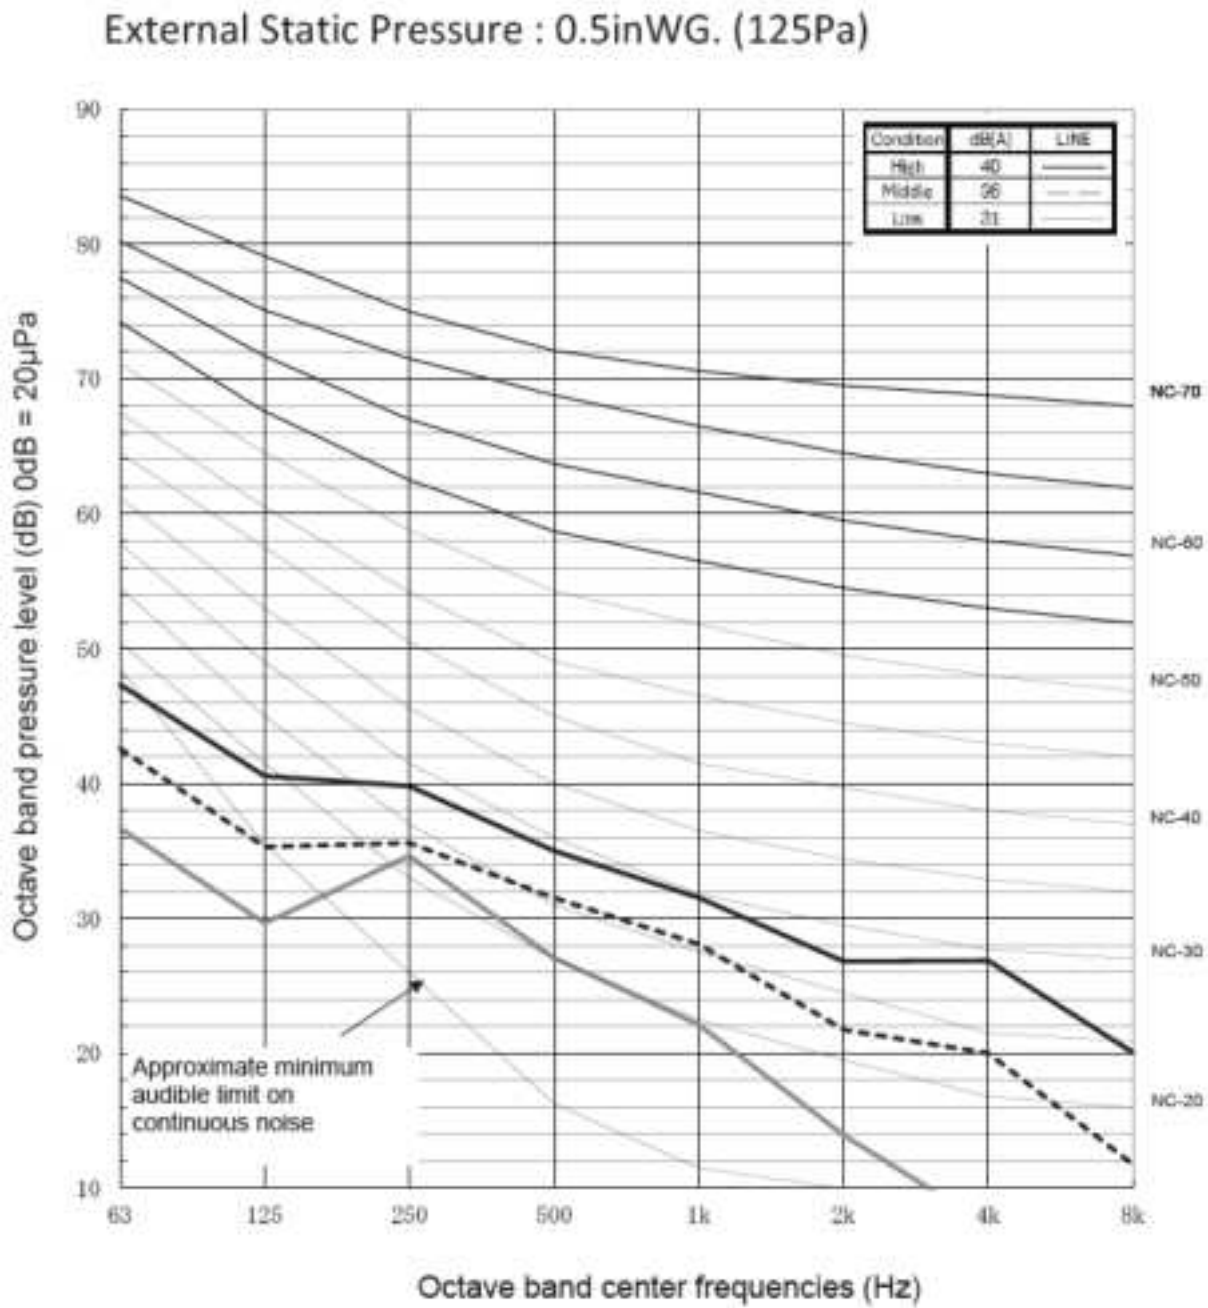



External Static Pressure : 0.8inWG. (200Pa)

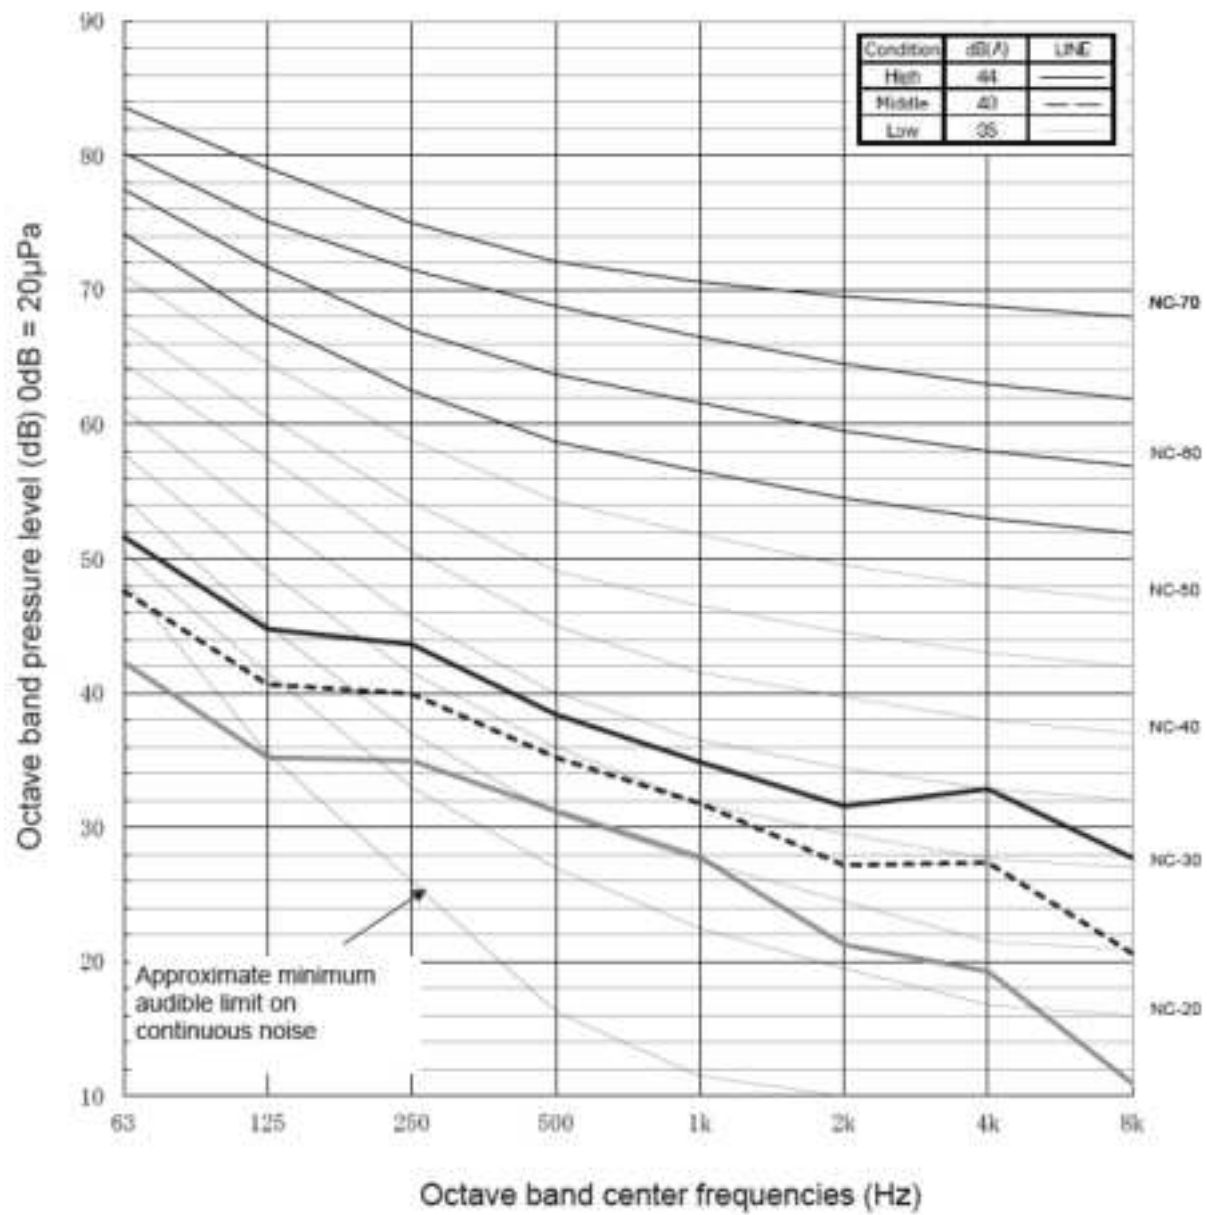

ENGLISH

Table 13. Model code 24, External static pressure 0.30, 0.50, 0.80 in WG (75, 125, 200 Pa).

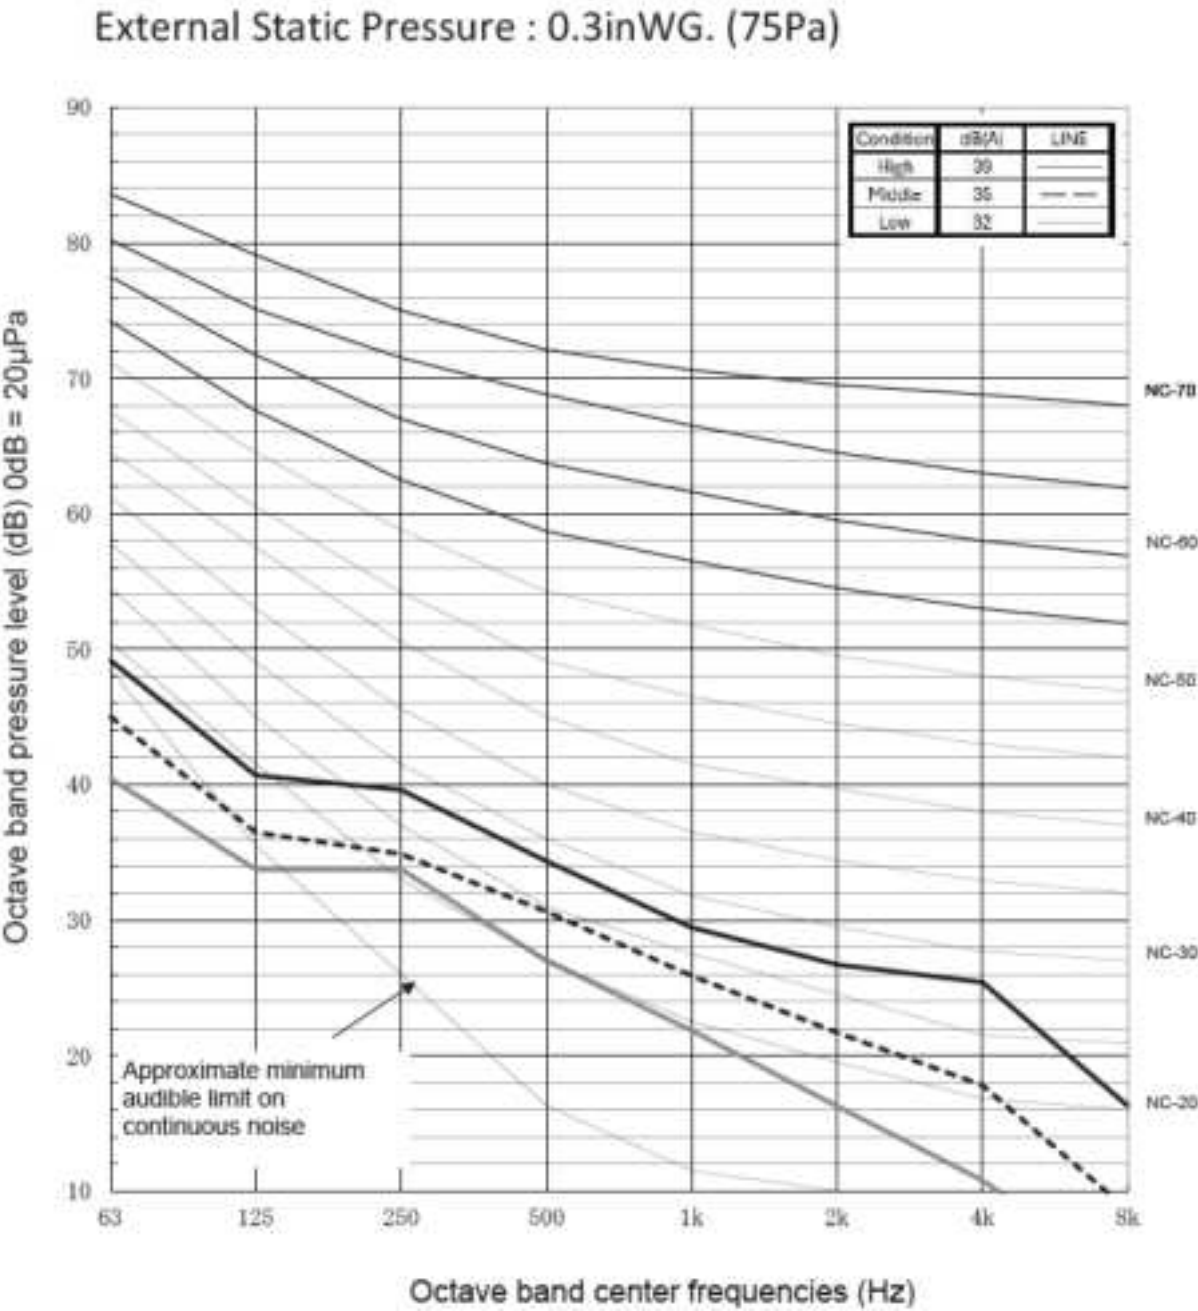

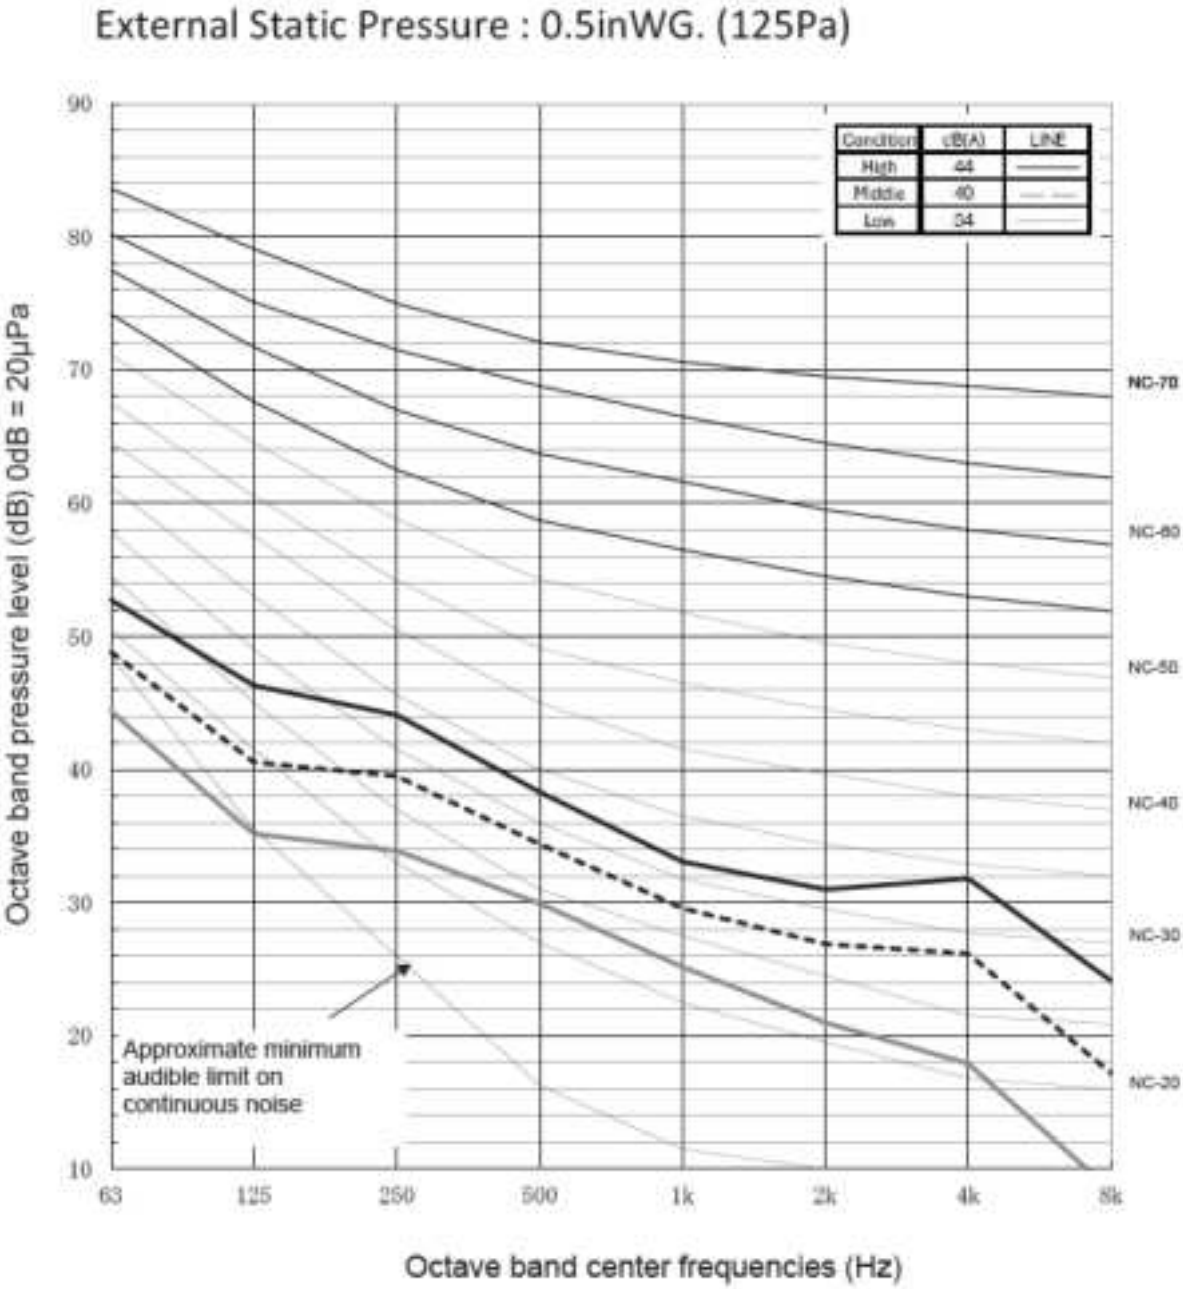

ENGLISH

External Static Pressure : 0.8inWG. (200Pa)




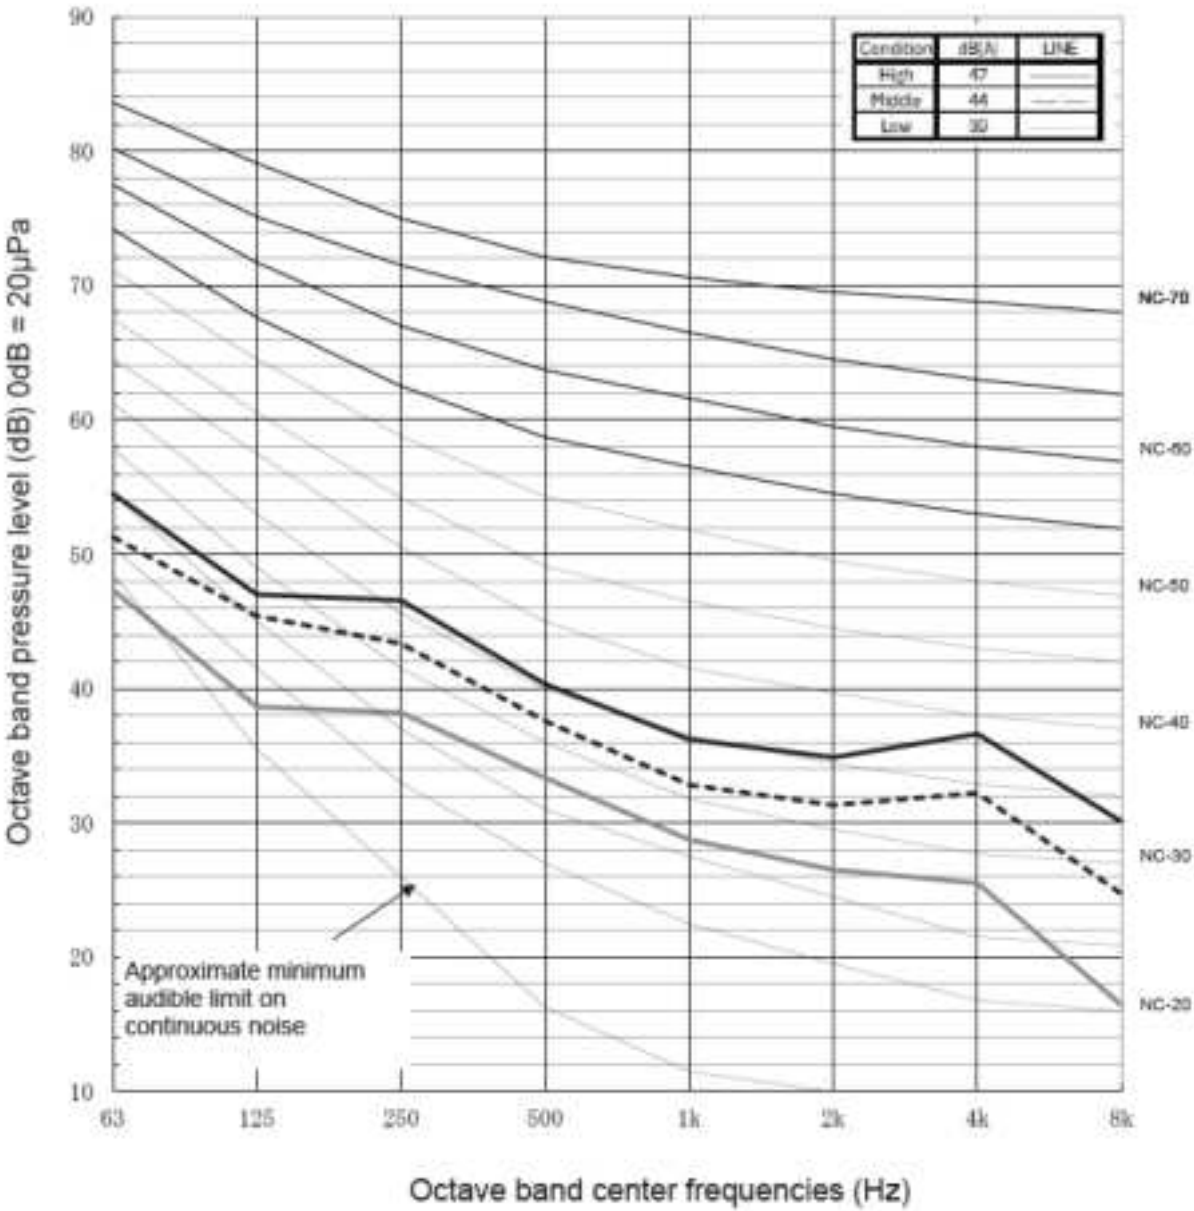


Table 14. Model code 30, External static pressure 0.30, 0.50, 0.80 in WG (75, 125, 200 Pa).

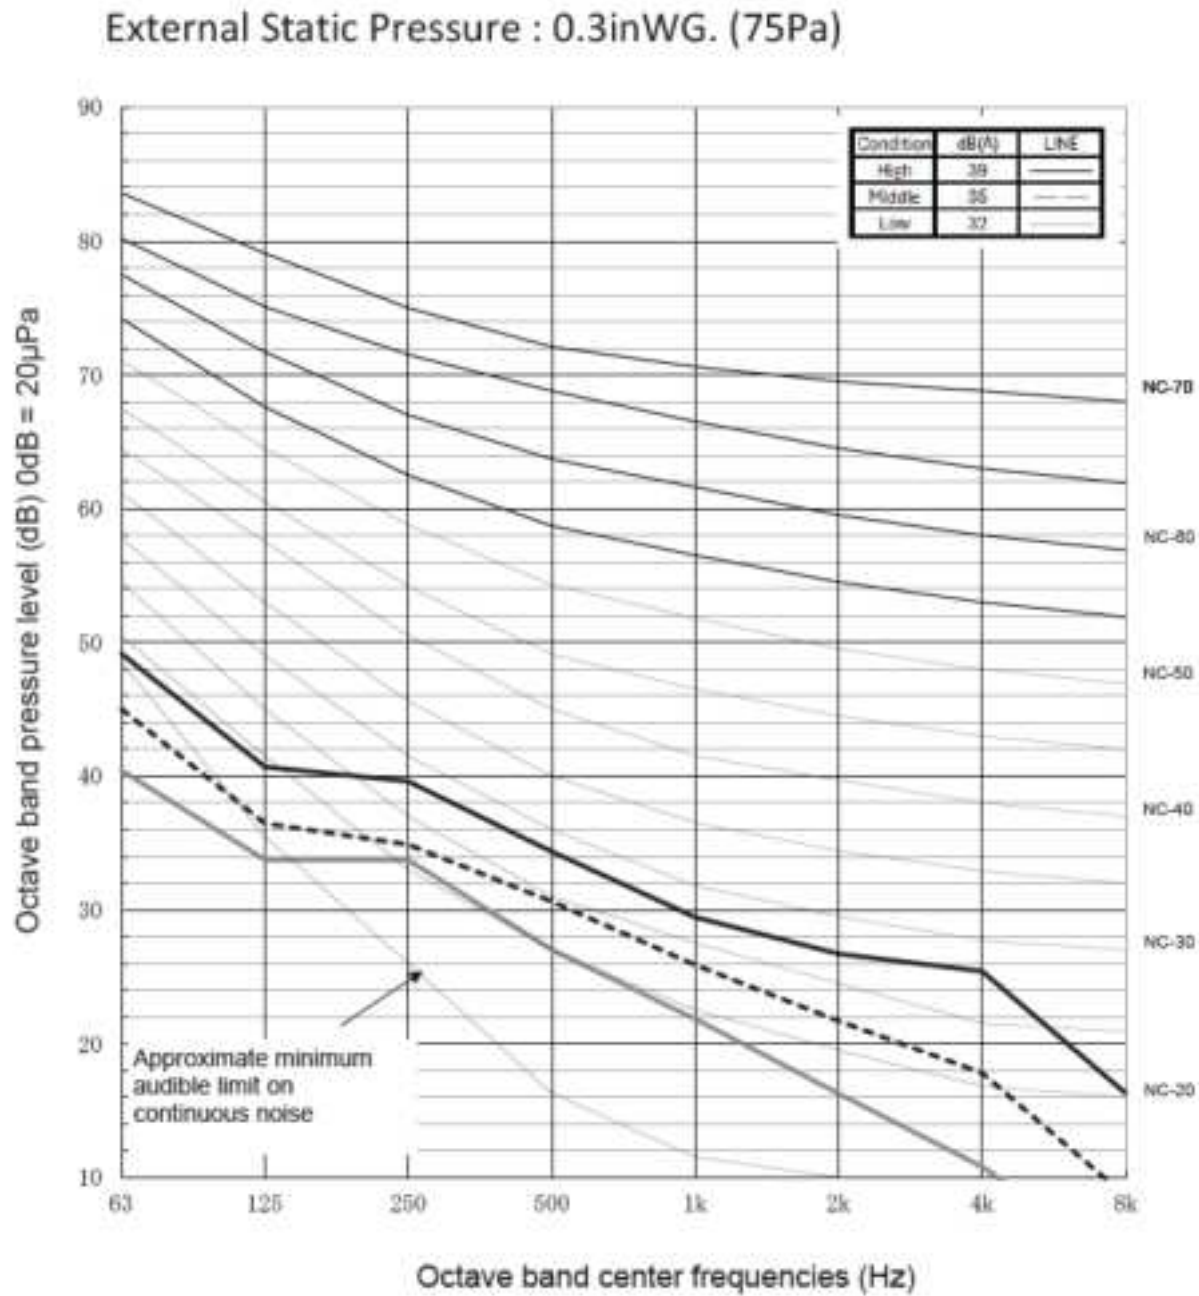

ENGLISH

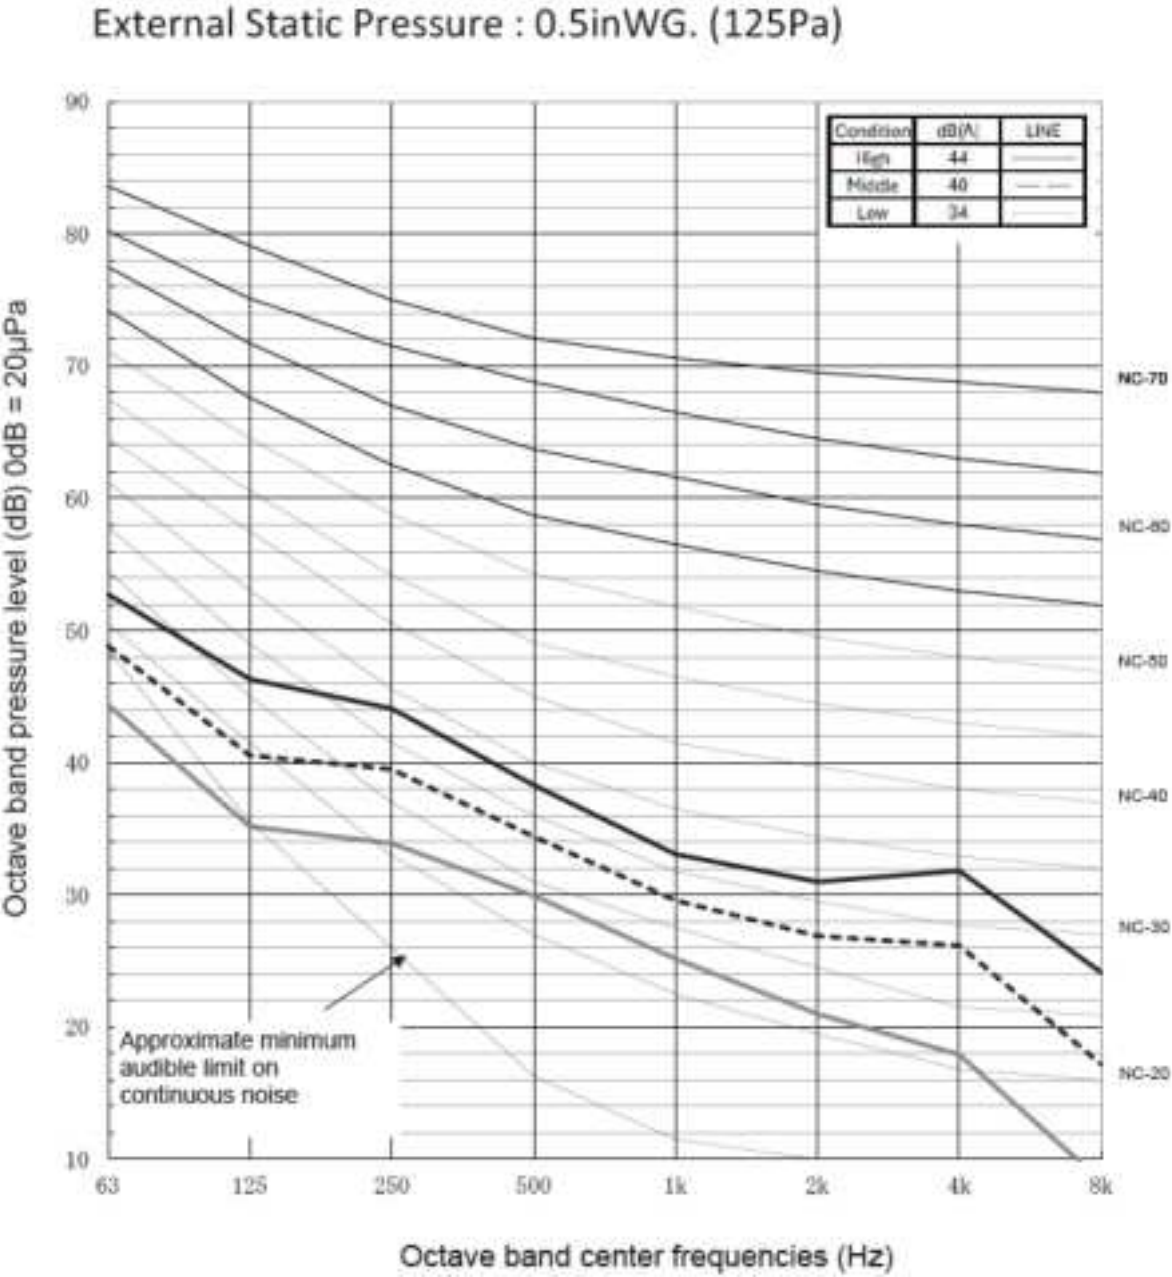


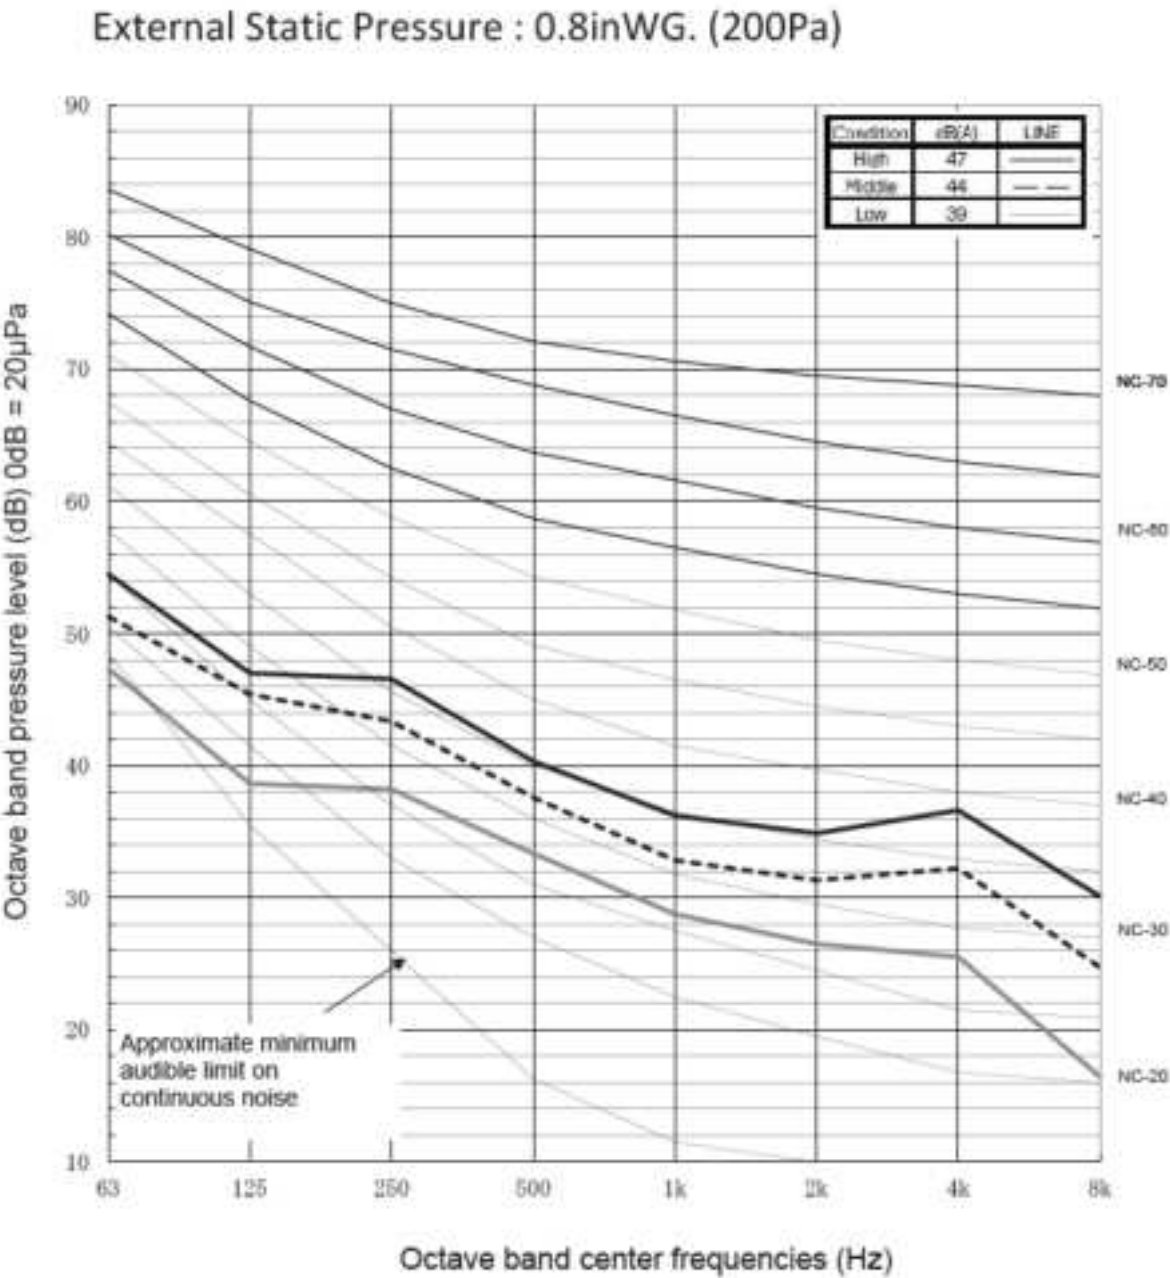


ENGLISH

Table 15. Model code 36, External static pressure 0.30, 0.50, 0.80 in WG (75, 125, 200 Pa).

External Static Pressure : 0.3inWG. (75Pa)

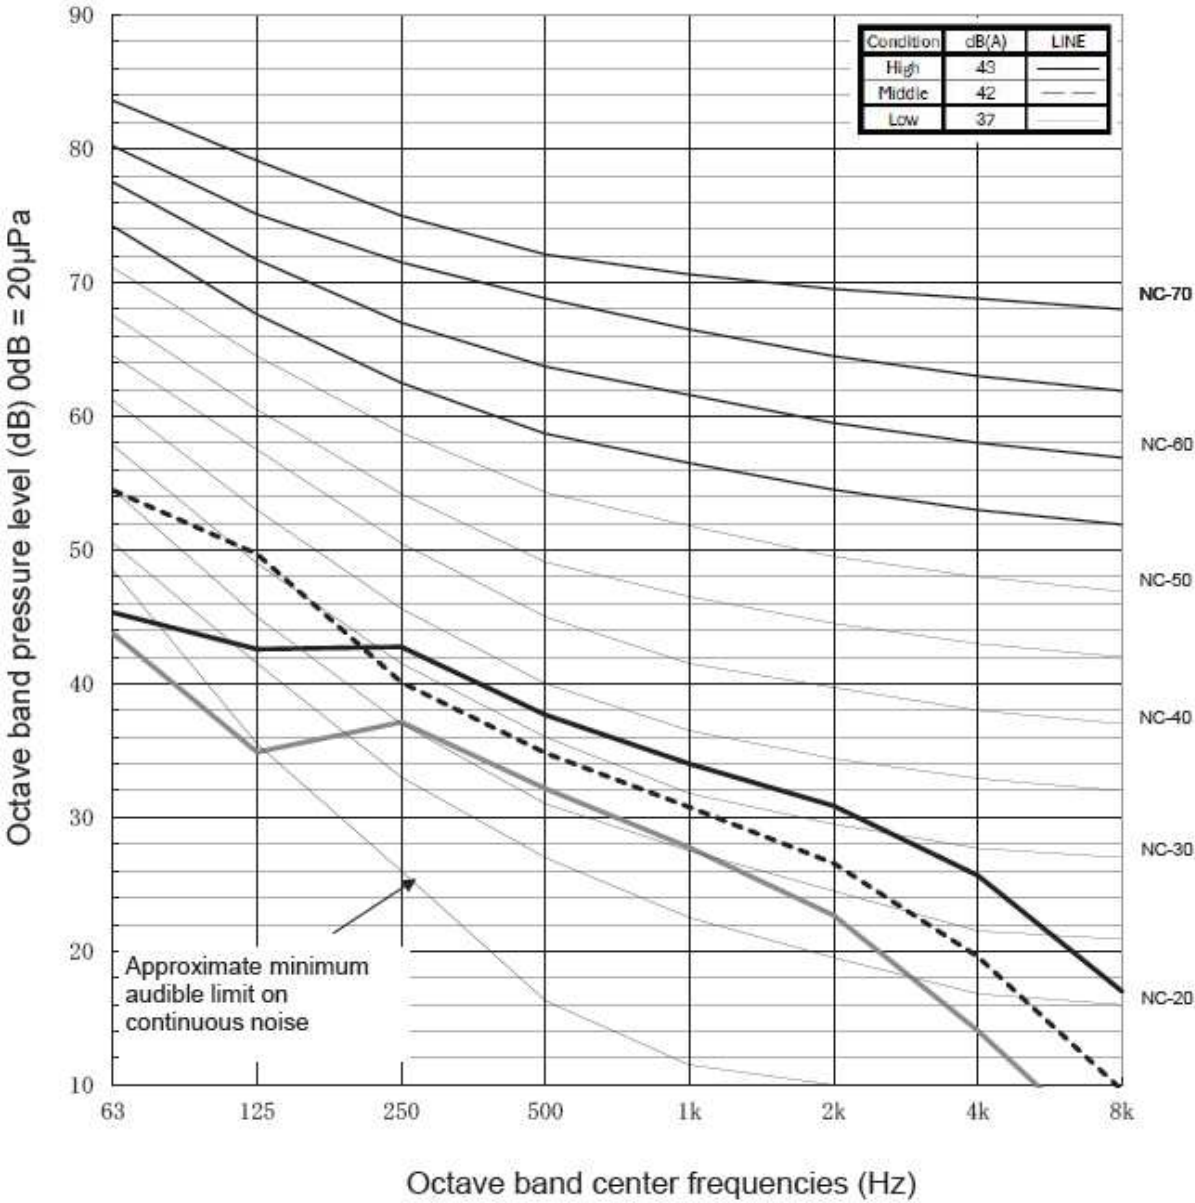

External Static Pressure : 0.5inWG. (125Pa)

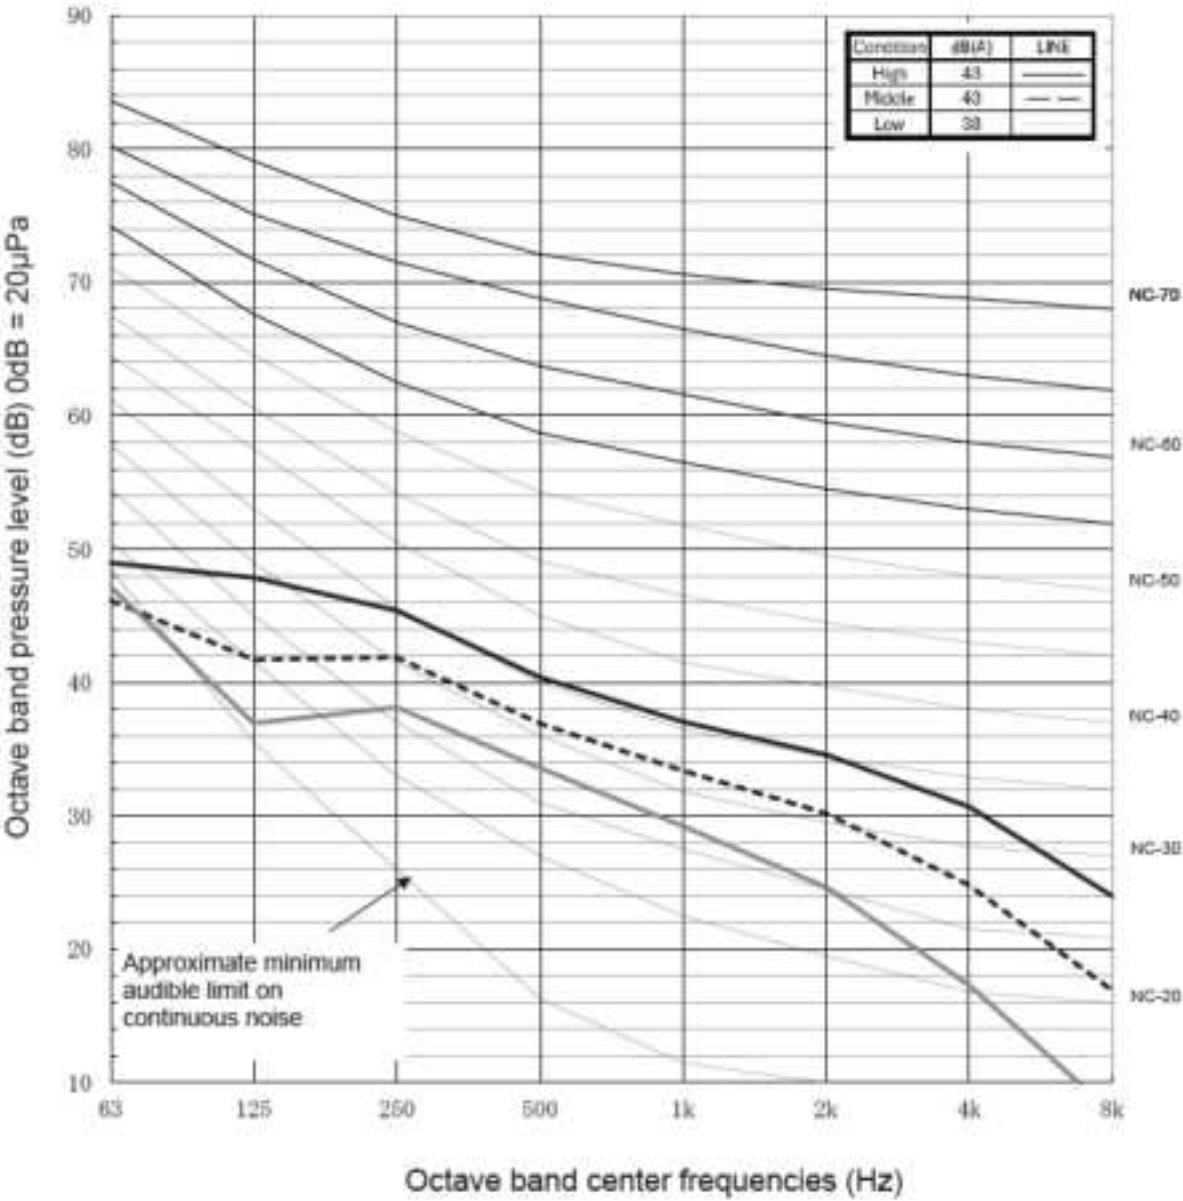

ENGLISH

ENGLISH



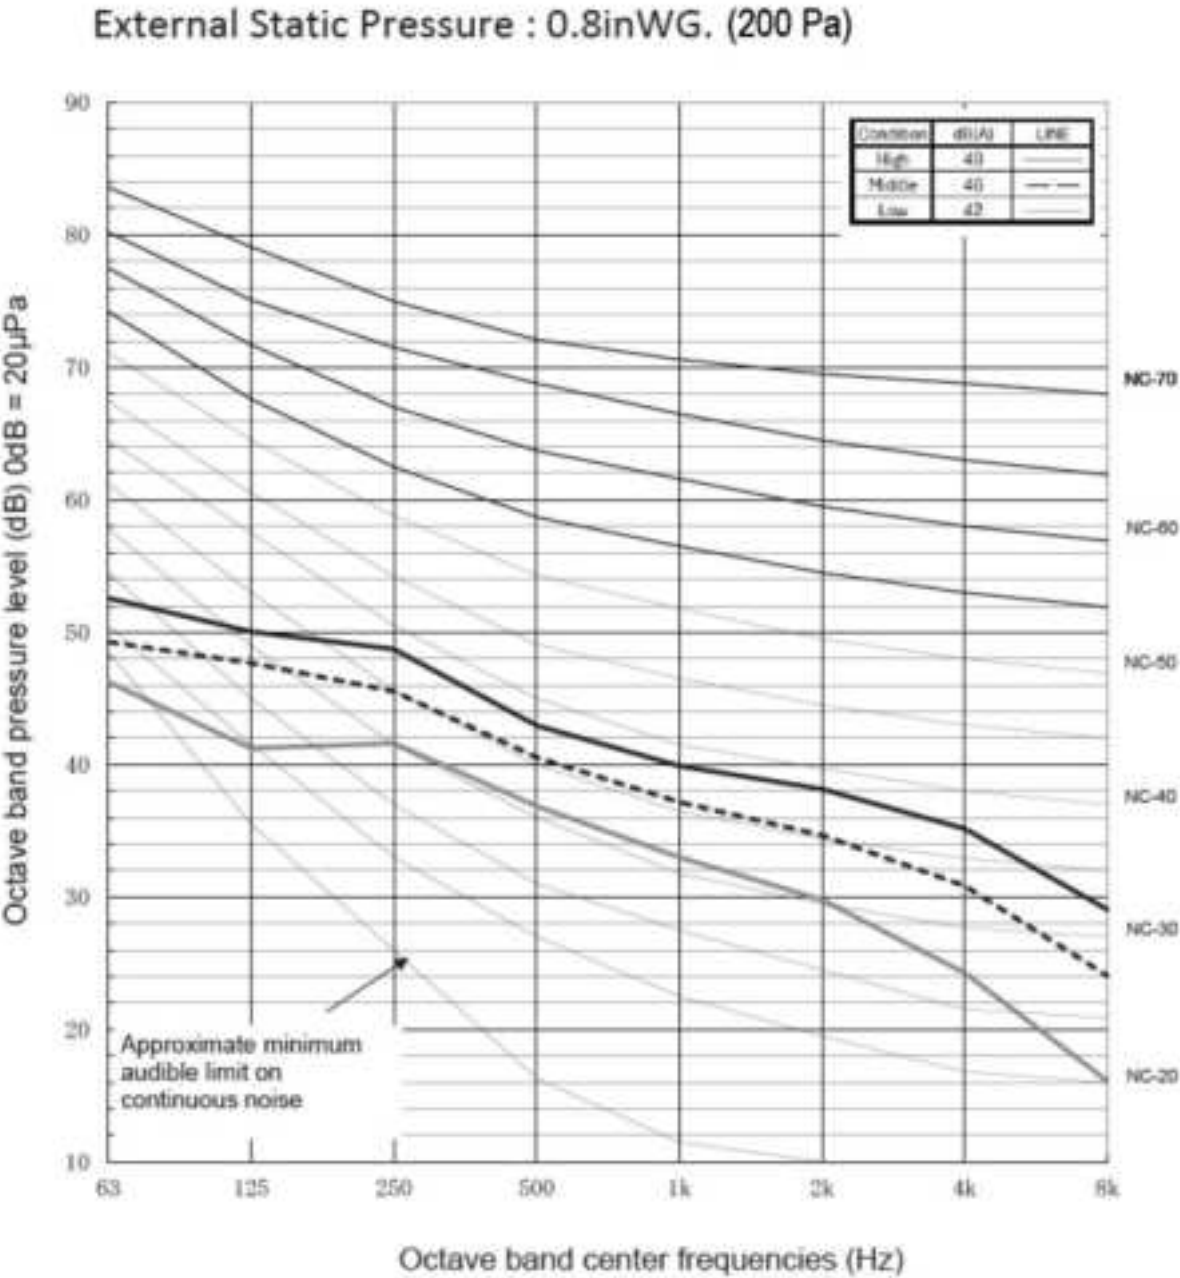



Table 16. Model code 42 & 48, External static pressure 0.30, 0.50, 0.80 in WG (75, 125, 200 Pa).

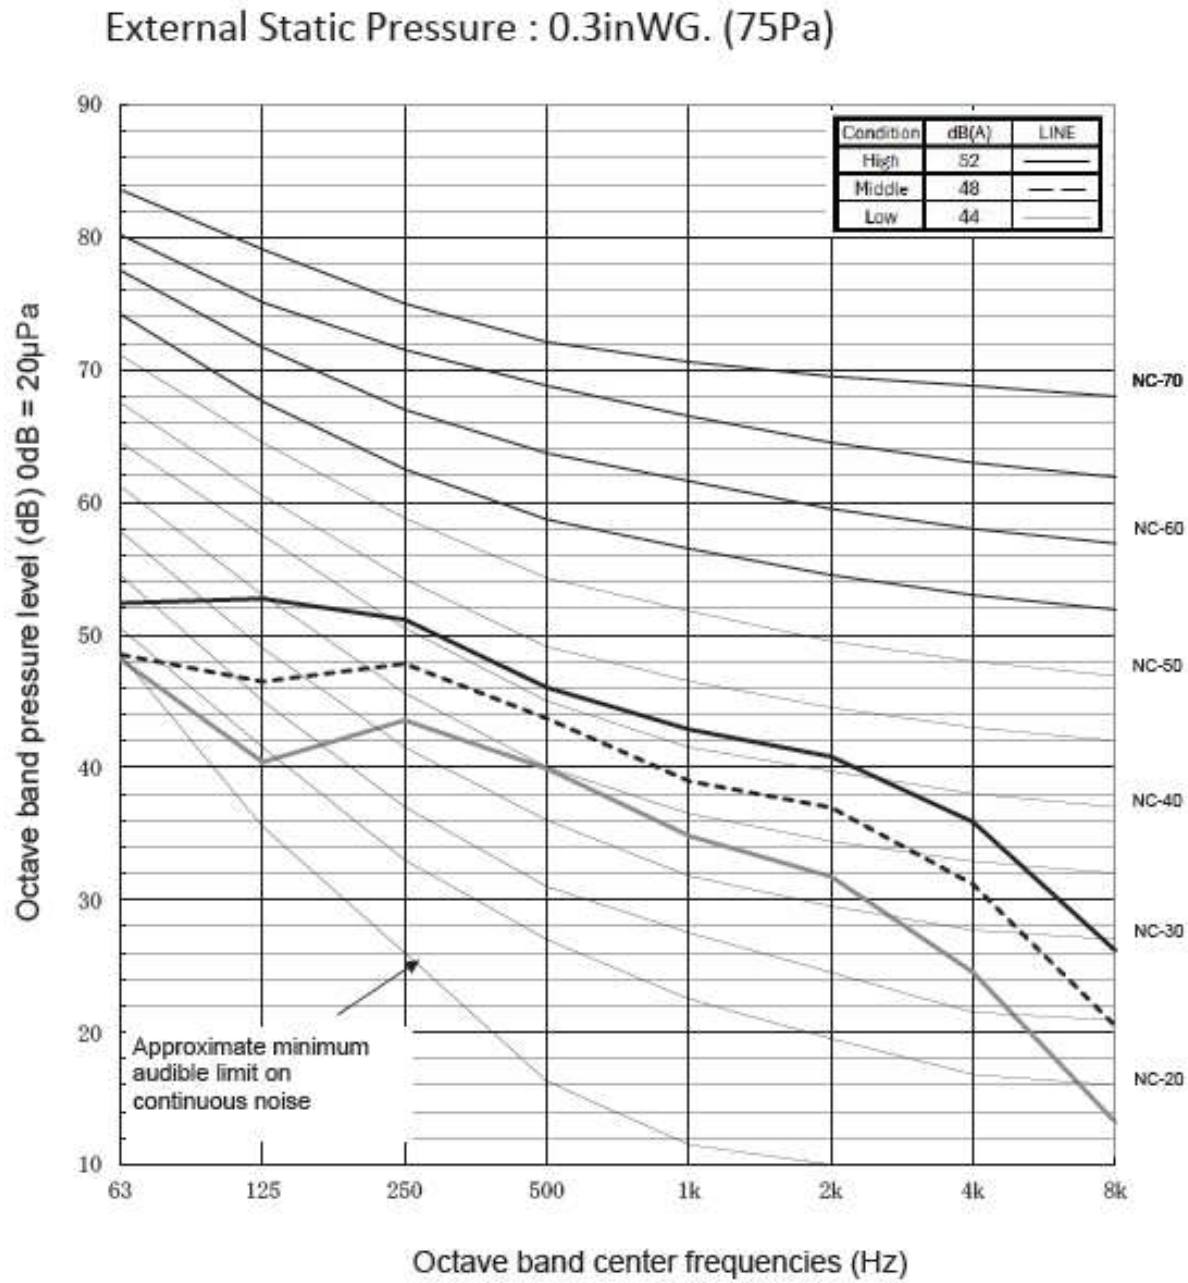

External Static Pressure : 0.5inWG. (125Pa)

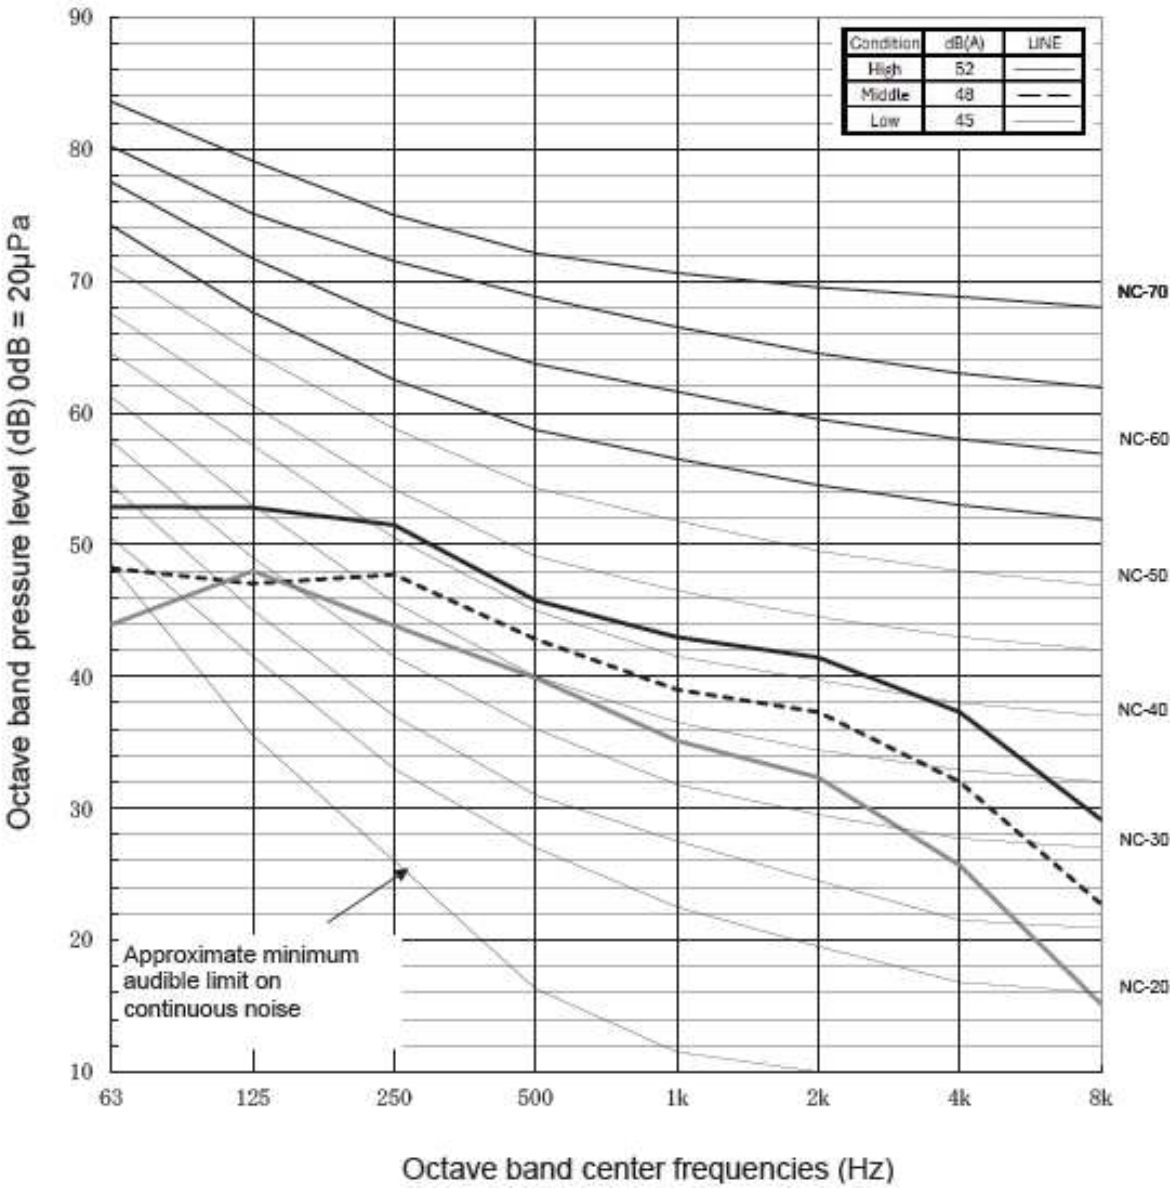


External Static Pressure : 0.8inWG. (200Pa)

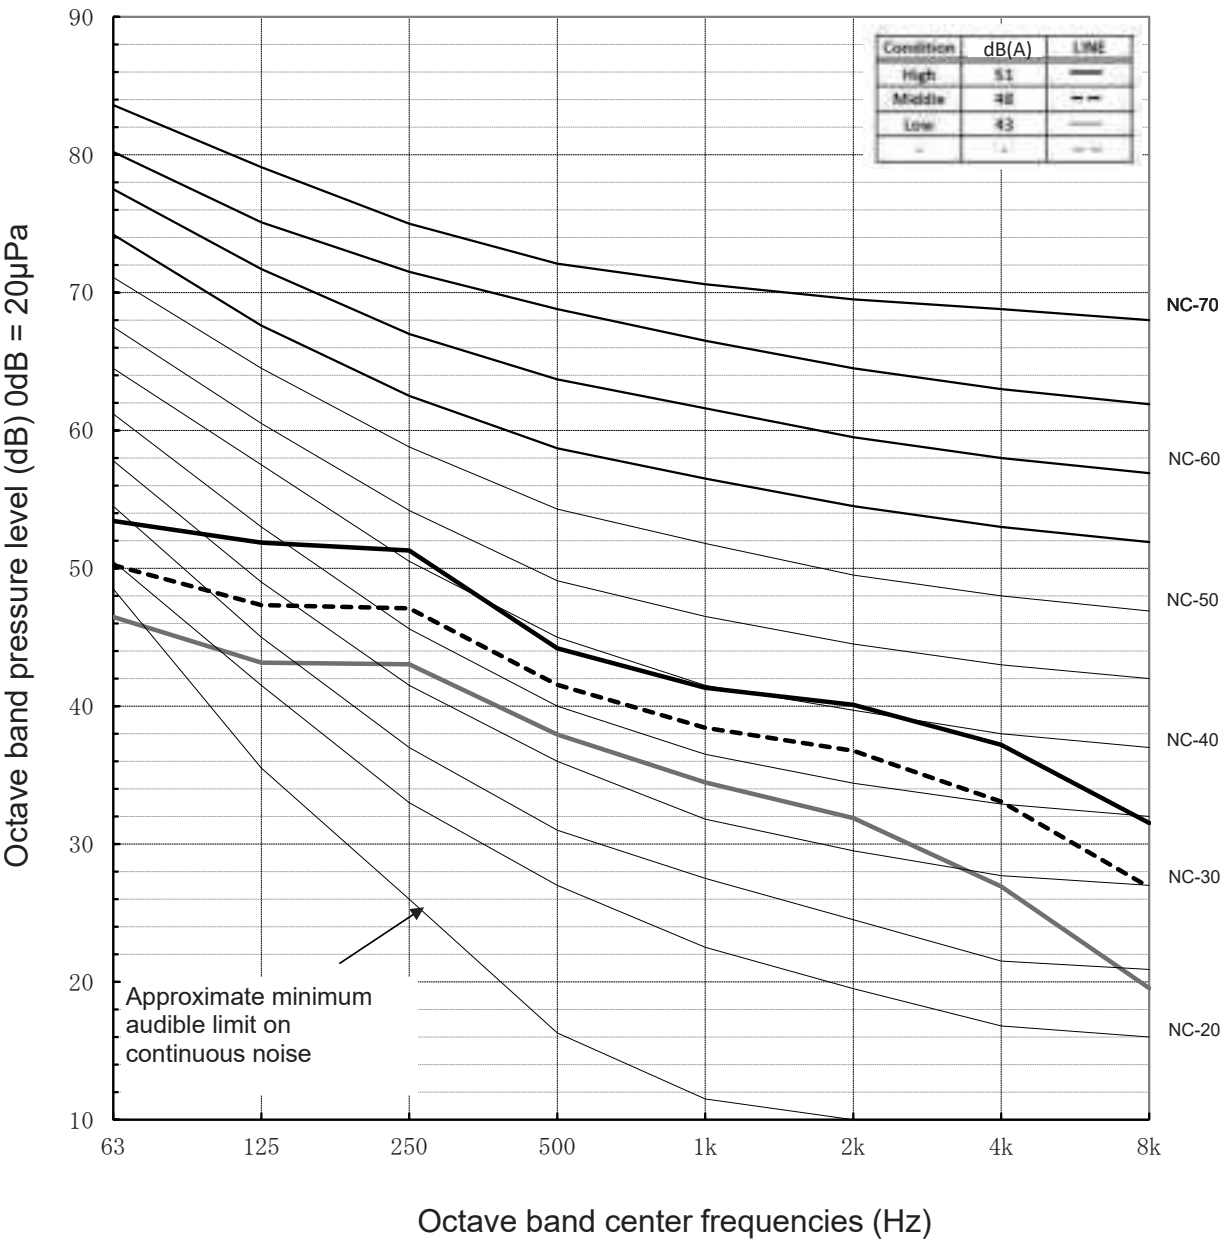


ENGLISH

Table 17. Model code 60, External static pressure 0.30, 0.50, 0.80 in WG (75, 125, 200 Pa).

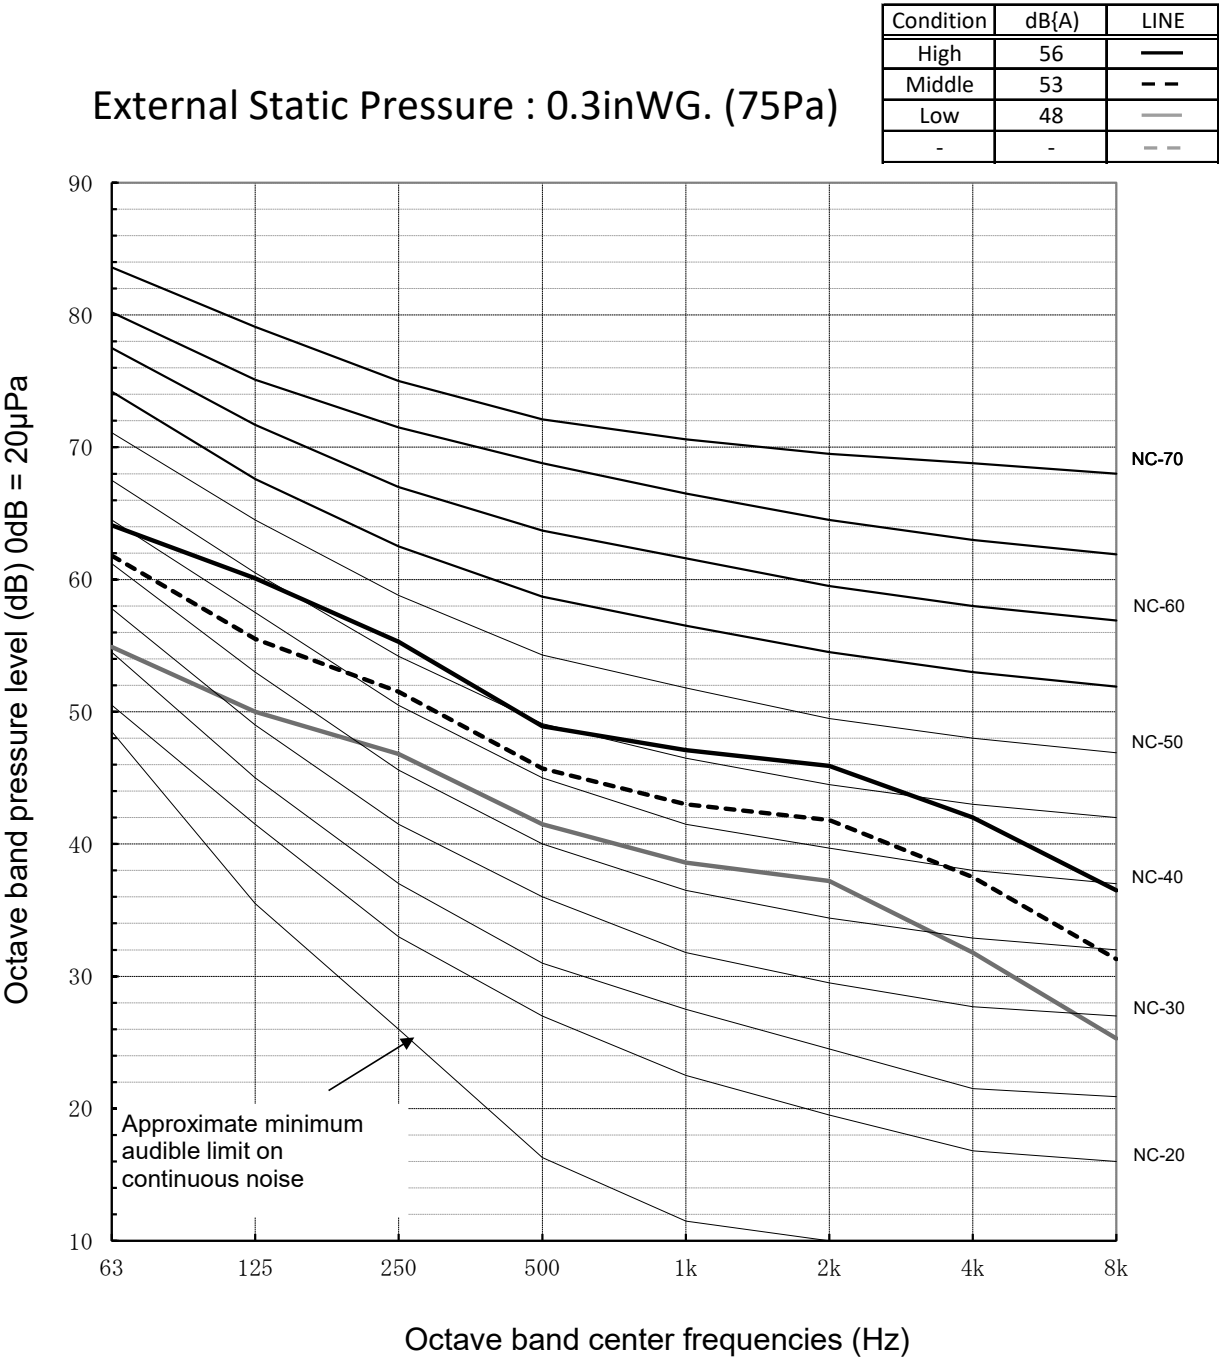

Condition	dB(A)	LINE
High	56	—
Middle	55	- -
Low	48	—
-	-	- -


External Static Pressure : 0.5inWG. (125Pa)

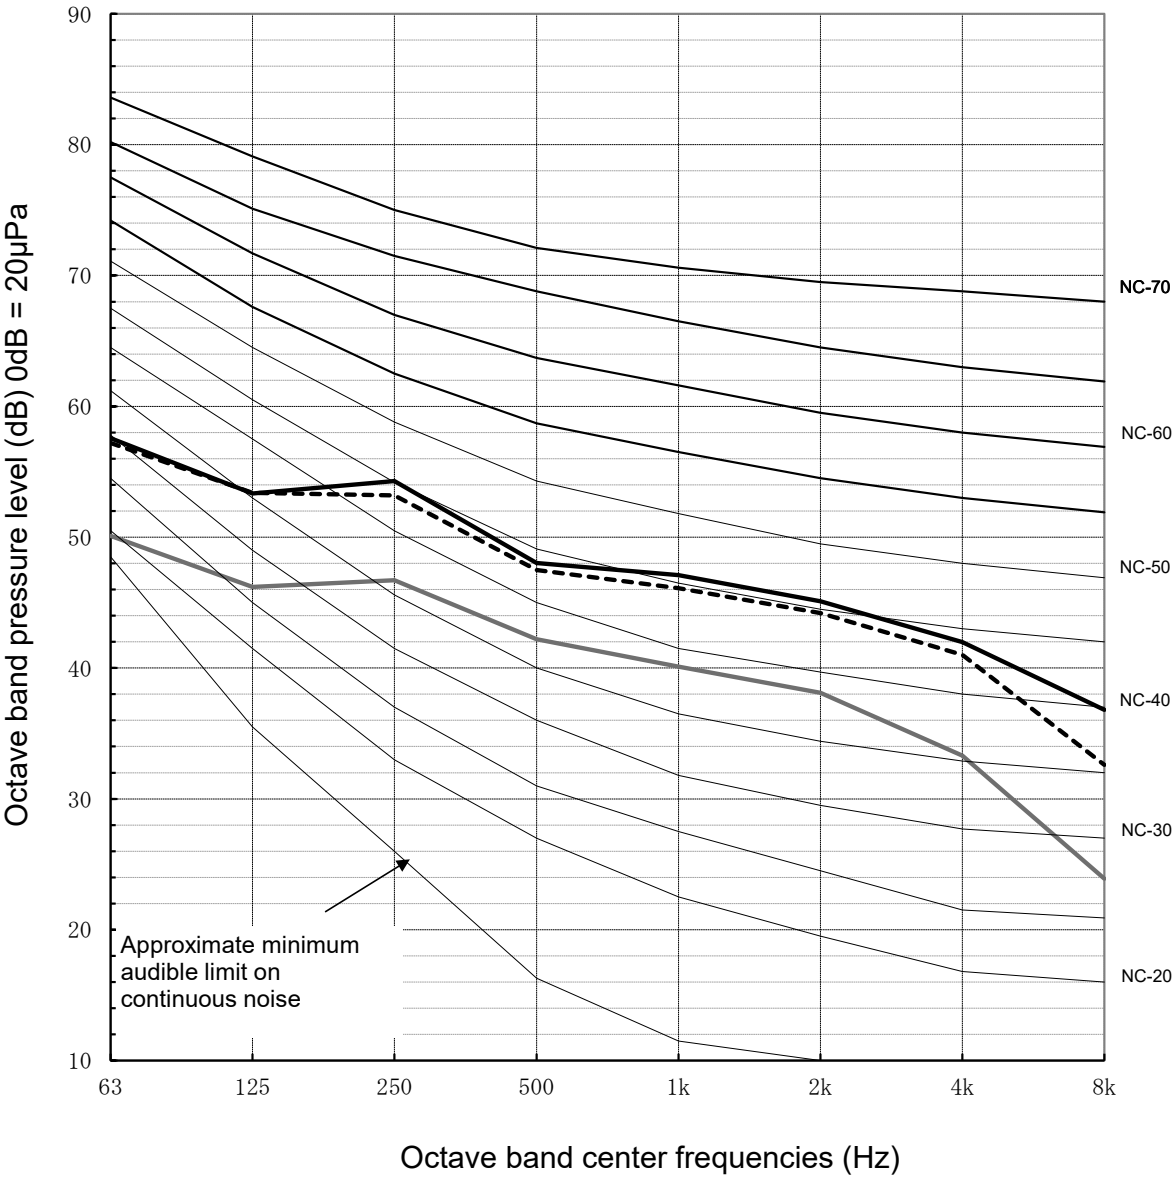

Report Number	US-E2-086
---------------	-----------

ENGLISH

ENGLISH

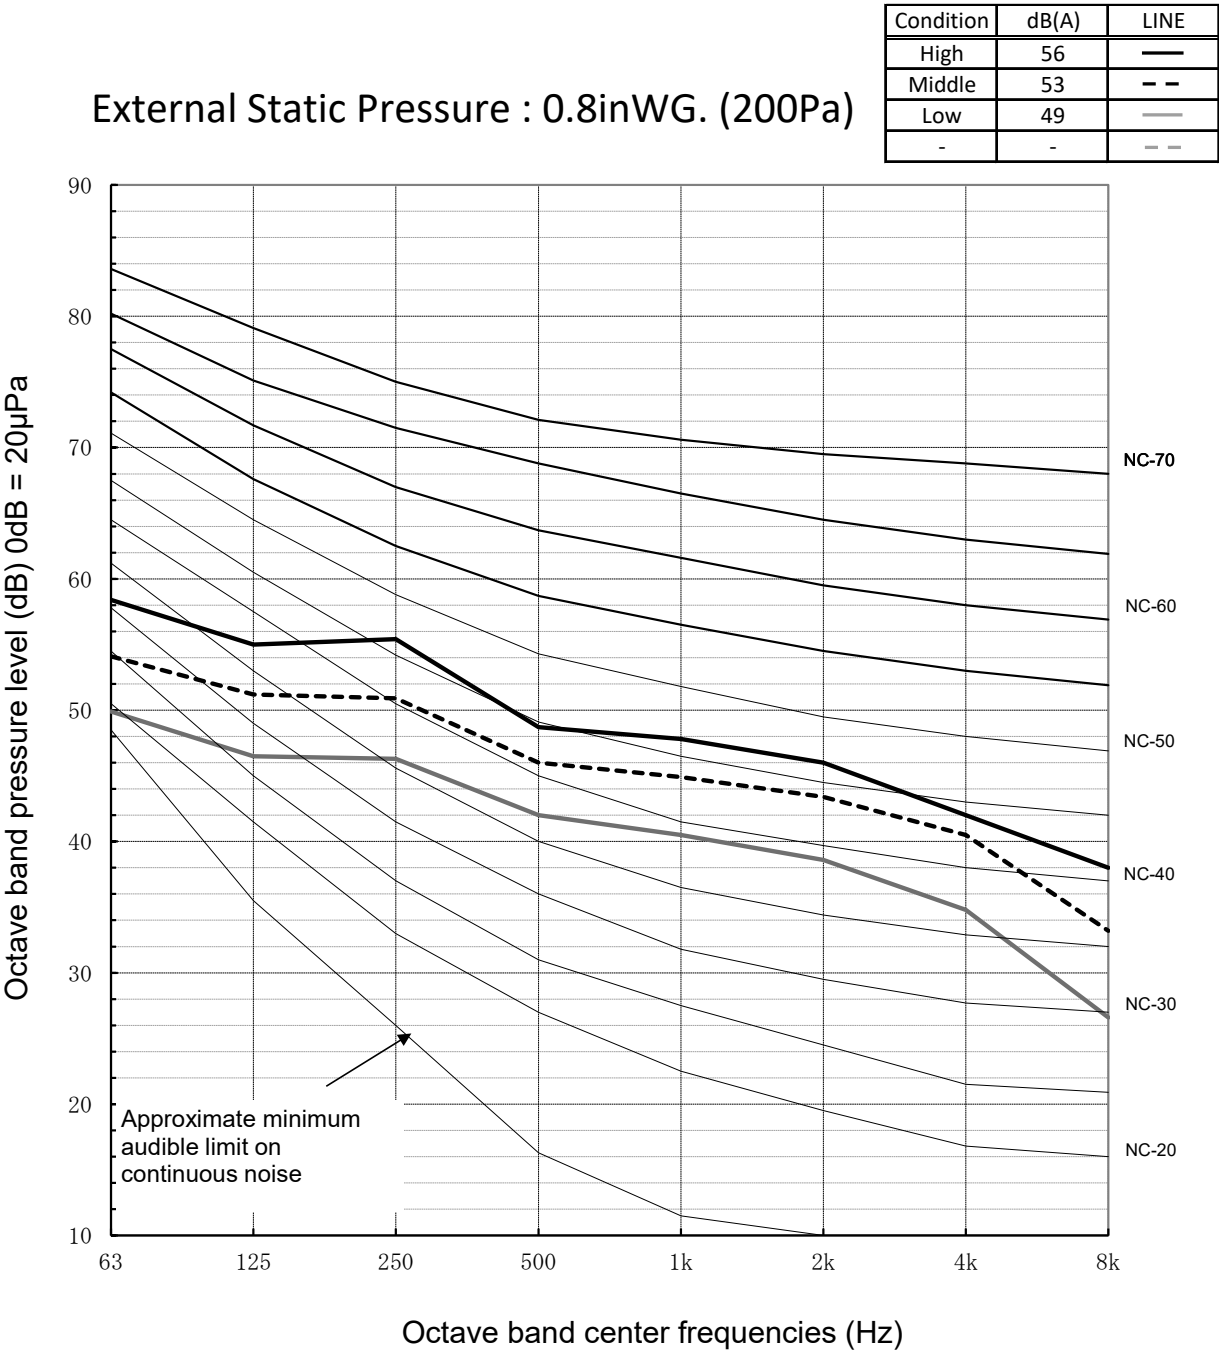


Report Number	US-E2-087
---------------	-----------

7. Dimensions


ENGLISH

Model Code	① Nominal Filter size	Duct Connection
12	508.6X406.4X25.4 (20X16X1)	376X402 (14-13/16X15-7/8)
18		
24	508X508X25.4 (20X20X1)	477X402 (18-13/16X15-7/8)
30		
36	508X609.6X25.4 (20X24X1)	579X402 (22-13/16X15-7/8)
42		
48		
60		

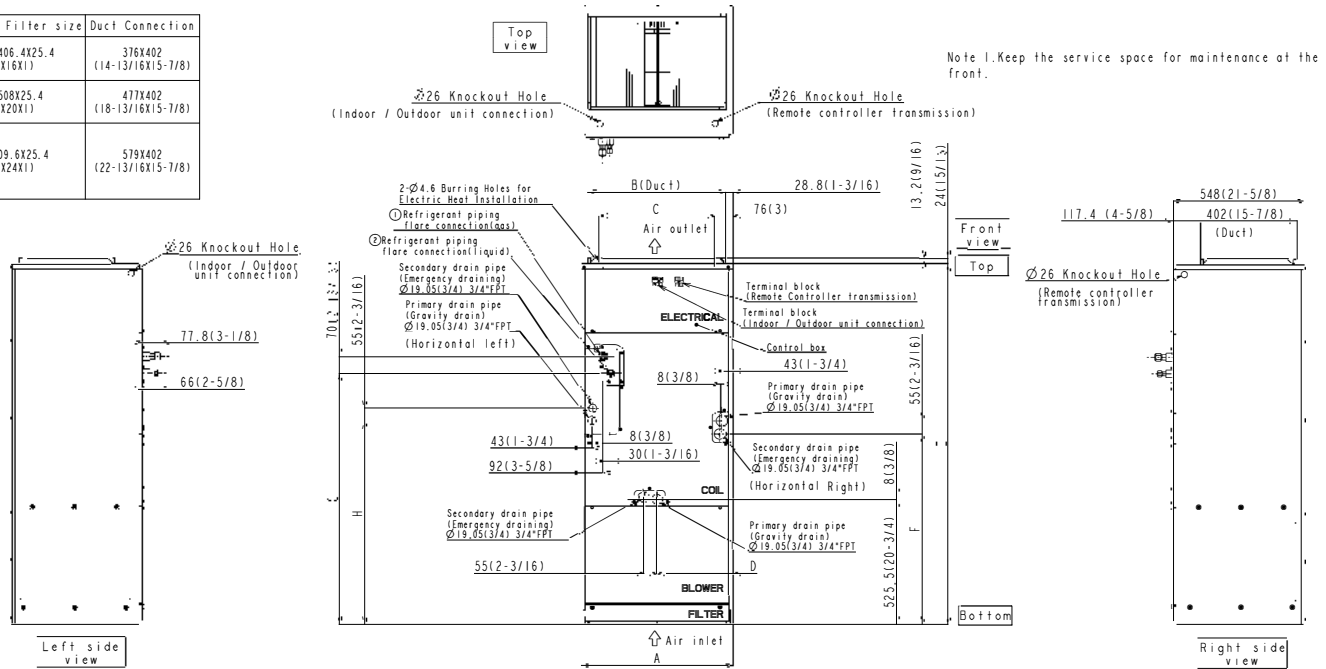

Unit:mm(in.)

Model Code	A	B	C	D	E	F	G	H	J	Gas pipe ①	Liquid pipe ②
12	432 (17)	376 (14-13/16)	281 (11-1/8)	224 (8-7/8)	1275 (50-1/4)	680 (26-13/16)	823 (32-7/16)	735.5 (29)	360 (14-3/16)	Ø12.7 (1/2)	Ø6.35 (1/4)
18											
24	534 (21)	477 (18-13/16)	382.6 (15-1/8)	266.5 (10-1/2)	1378 (54-1/4)	737 (29-1/16)	953.5 (37-9/16)	792 (31-3/16)	461 (18-3/16)	Ø15.88 (5/8)	Ø9.52 (3/8)
30											
36											
42	635 (25)	579 (22-13/16)	484.6 (19-1/8)	317.5 (12-1/2)	1511 (59-1/2)	798.5 (31-7/16)	1053 (41-1/2)	853.5 (33-5/8)	563 (22-3/16)		
48											
60										Ø19.05 (3/4)	

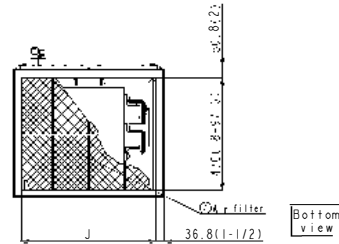


Units:mm(in.)


7.1. Outlines

ENGLISH

Clearance Area

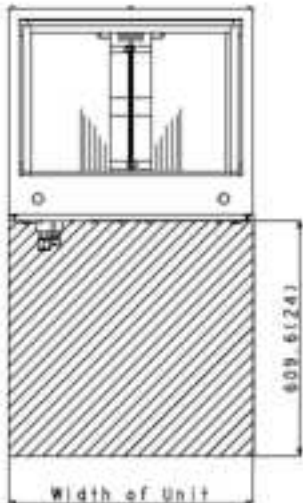


Vertical Installation

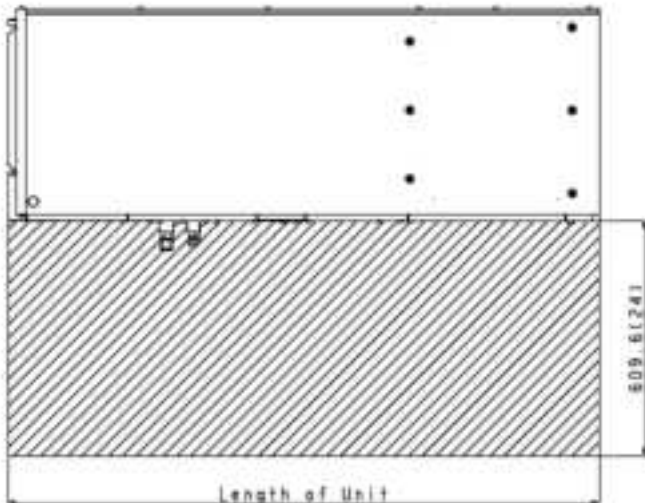


Horizontal Installation

8. Wiring Diagram

PVA-AA12, 18, 24, 20, 36, 42NL

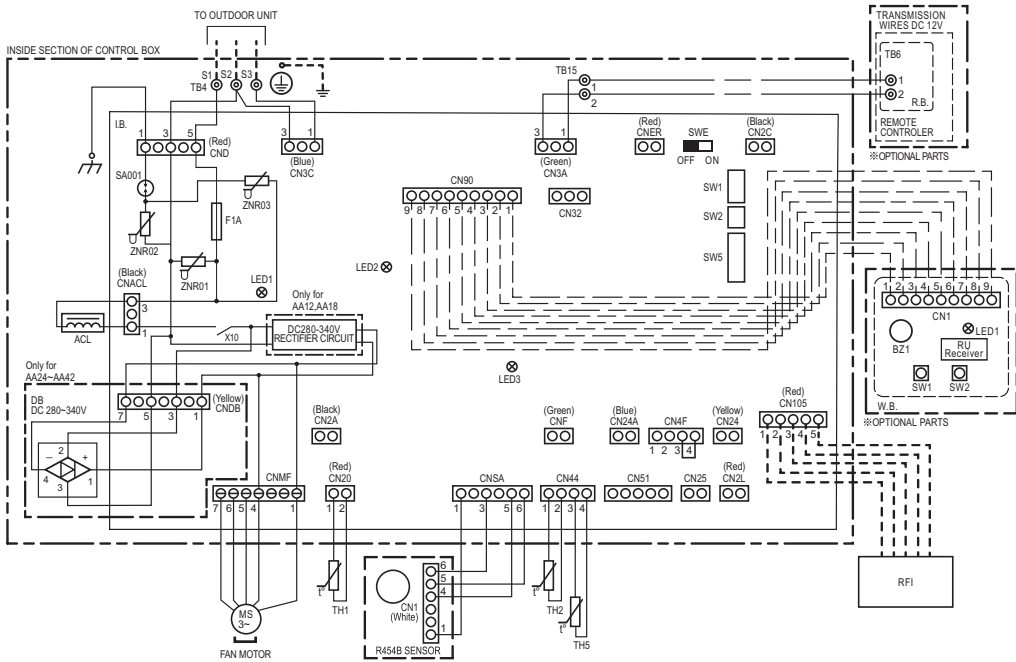


PVA-AA48NL

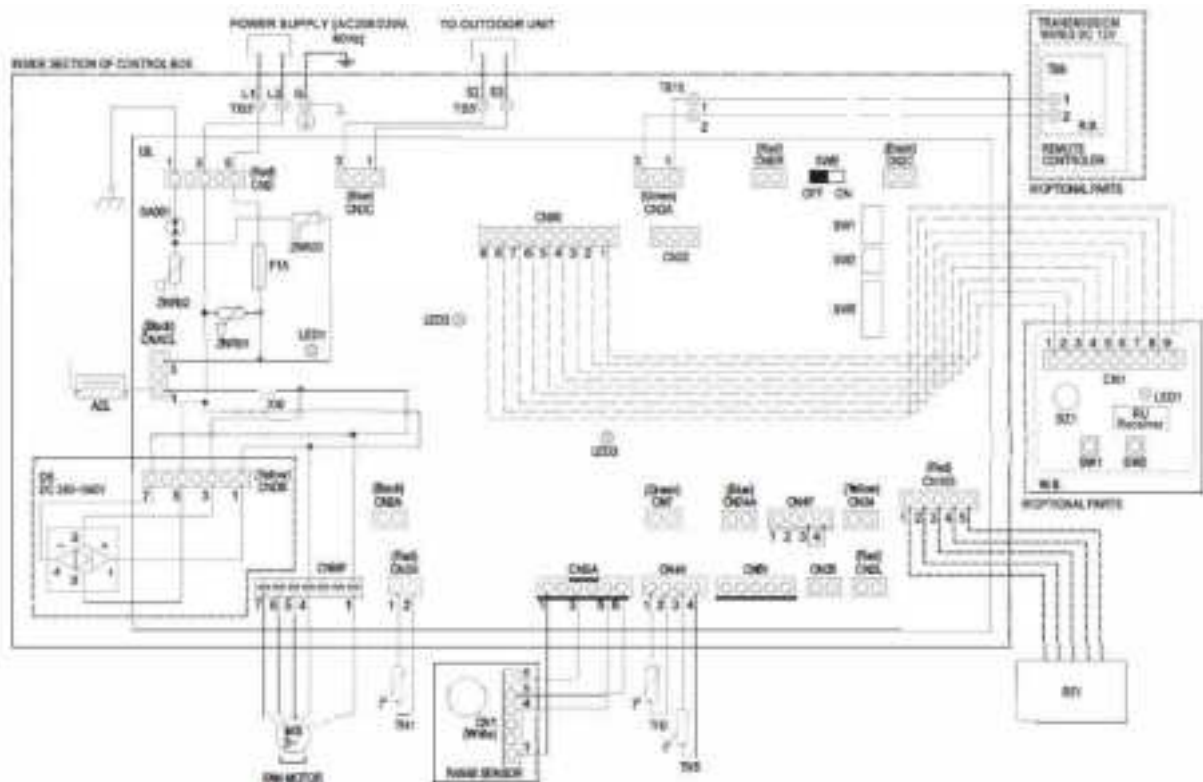


SYMBOL EXPLANATION

SYMBOL	NAME	SYMBOL	NAME	SYMBOL	NAME
I.B.	INDOOR CONTROLLER BOARD	I.B.	INDOOR CONTROLLER BOARD	OPTIONAL PARTS	
CN24	CONNECTOR (HEATER CONTROL 1ST)	SW1	SWITCH (FOR MODEL SELECTION)	W.B.	IR WIRELESS REMOTE CONTROLLER BOARD
CN24A	CONNECTOR (HEATER CONTROL 2ND)	SW2	SWITCH (FOR CAPACITY CODE)	RU	RECEIVING UNIT
CN25	CONNECTOR (HUMIDITY OUTPUT)	SW5	SWITCH (FOR MODE SELECTION)	BZ1	BUZZER
CN2A	CONNECTOR (0-10V ANALOG INPUT)	SWE	CONNECTOR (EMERGENCY OPERATION)	LED1	LED(RUN INDICATOR)
CN2C	CONNECTOR (ERV OUTPUT)	F1A	FUSE AC250V 6.3A	SW1	SWITCH(HEATING ON/OFF)
CN2L	CONNECTOR (LOSSNAY)	ZNR01, 02, 03	VARISTOR	SW2	SWITCH(COOLING ON/OFF)
CN32	CONNECTOR (REMOTE SWITCH)	SA001	ARRESTOR	R.B.	WIRED REMOTE CONTROLLER BOARD
CN51	CONNECTOR (CENTRALLY CONTROL)	X10	AUX. RELAY	TB6	TERMINAL BLOCK (REMOTE CONTROLLER TRANSMISSION LINE)
CN90	CONNECTOR (WIRELESS)	TH1	INTAKE AIR TEMP. THERMISTOR		
CN105	CONNECTOR (RADIO FREQUENCY)	TH2	PIPE TEMP. THERMISTOR/LIQUID		
CNER	CONNECTOR (ERV INPUT)	TH5	COND./EVA.TEMP. THERMISTOR		
CNF	CONNECTOR (HUMIDITY INPUT)	ACL	AC REACTOR (POWER FACTOR IMPROVEMENT)		
CNDB	CONNECTOR (DIODE BRIDGE)	DB	DIODE BRIDGE		
LED1	LED(POWER SUPPLY)	TB3	TERMINAL BLOCK (POWER SUPPLY)		
LED2	LED(REMOTE CONTROLLER SUPPLY)	TB5	TERMINAL BLOCK (INDOOR/OUTDOOR CONNECTING LINE)		
LED3	LED(TRANSMISSION INDOOR-OUTDOOR)	TB15	TERMINAL BLOCK (REMOTE CONTROLLER TRANSMISSION LINE)		
RF1	RADIO FREQUENCY INTERFACE FOR RF THERMOSTAT				

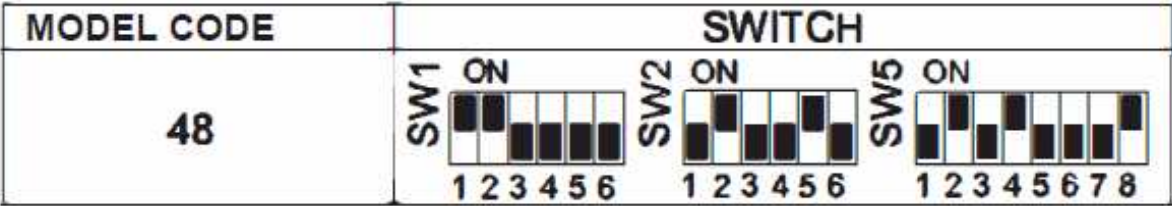

PVA-AA60NL

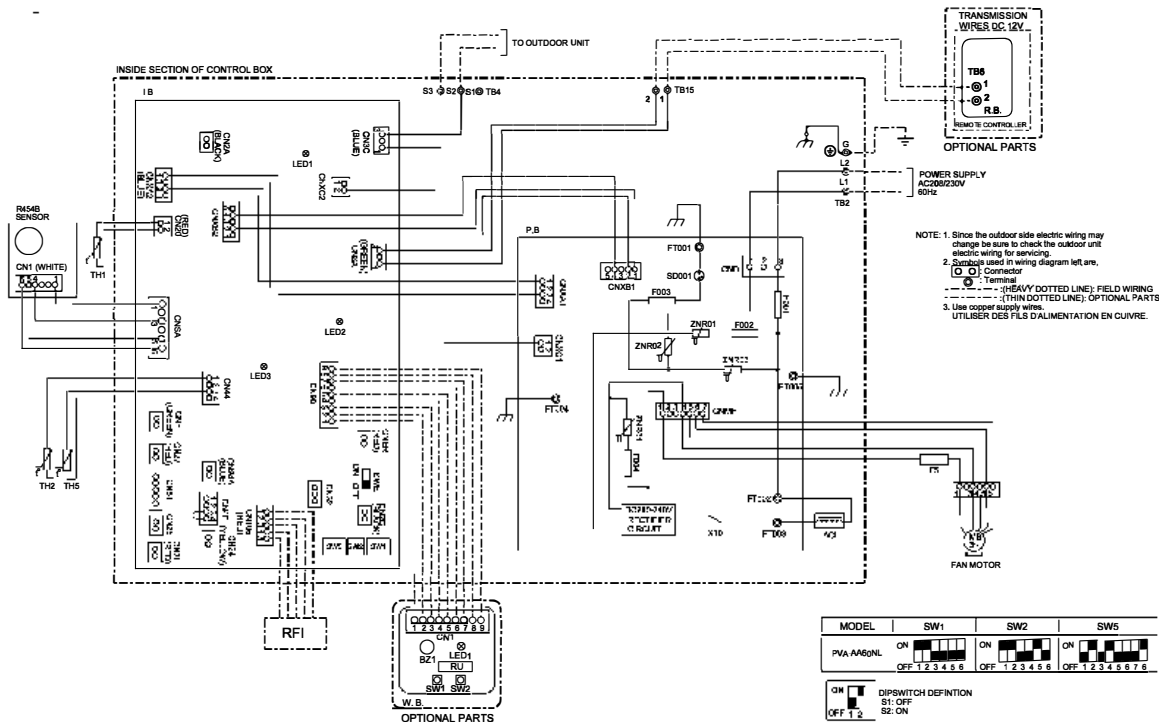

SYMBOL	NAME	SYMBOL	NAME	SYMBOL	NAME
I.B.	INDOOR UNIT (PVA-AA60NL)	I.B.	INDOOR UNIT (PVA-AA60NL)	W.B.	WIRELESS REMOTE CONTROLLER BOARD
SW1	SWITCH (FOR MODEL SELECTION)	CN105	CONNECTOR (RADIO FREQUENCY)	RU	RECEIVING UNIT
SW2	SWITCH (FOR CAPACITY CODE)	CN1	CONNECTOR (IR/IR INPUT)	BZ1	BELL
SW5	SWITCH (FOR MODE SELECTION)	LED1	LED (POWER SUPPLY)	LED1	LED (POWER INDICATOR)
SWE	CONNECTOR (EMERGENCY OPERATION)	LED3	LED (REMOTE CONTROLLER SUPPLY)	SW1	SWITCH (HEATING ON/OFF)
CN2A	CONNECTOR (HEATER CONTROL 1ST)	LED3	LED (REMOTE CONTROLLER SUPPLY)	SW2	SWITCH (COOLING ON/OFF)
CN2MA	CONNECTOR (HEATER CONTROL 2ND)	P.B.	POWER FACTOR IMPROVEMENT	R.B.	WIRELESS REMOTE CONTROLLER BOARD
CN2S	CONNECTOR (HUMIDITY OUTPUT)	S0001	DIODE	TB5	TERMINAL BLOCK (REMOTE CONTROLLER TRANSMISSION LINE)
CN2A	CONNECTOR (IR/IR INPUT)	F001	FUSE (250V/1A)		
CN2C	CONNECTOR (IR/IR INPUT)	F002	FUSE (250V/1A)		
CN2L	CONNECTOR (LOSSY)	F003	FUSE (250V/1A)		
CN32	CONNECTOR (REMOTE SWITCH)	F004	FUSE (250V/1A)		
CN51	CONNECTOR (CENTRAL CONTROL)				
CN60	CONNECTOR (WIRELESS)				

Manipulation Details

1. Performing a test run for fan

1. To perform a test run for the fan, turn on the SWE on the control board while the indoor unit is being powered.


Make sure to turn off the SWE after completing a drainage test or test run.

Note) The use for the state of SWE-ON must not be kept more than 10 hours.

2. Operation of LED for indoor circuit board service

Symbol	LED operation under normal state
LED1	At applying main power source → Lighting
LED2	At receiving MA transmission power source → Lighting
LED3	At transmitting indoor-outdoor unit → Flashing

9. Refrigerant System Diagram

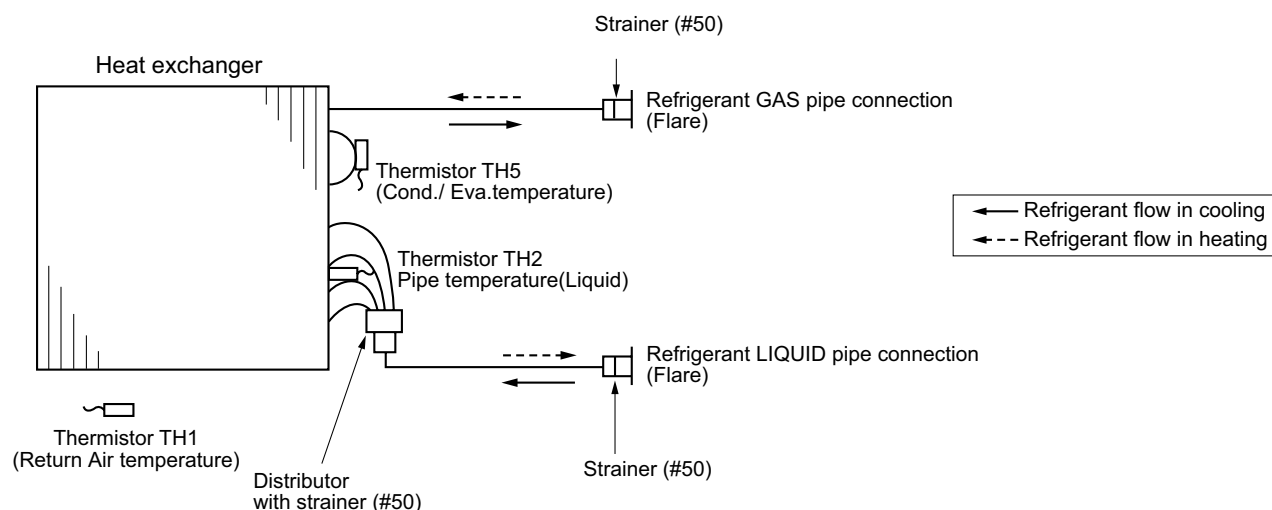

10. Heater Control

10.1. Control specifications and function setting

- Table 18. Function table: shows the mode setting for the field-installed heater.

Mode (function) no.		Mode	Heater Operation in Error	Heater Operation in defrost	Fan Control when Heater ON ¹
11	23				
1	1	No Heater Present ²			
2	1	Heater Available	OFF	OFF	High
		Disable Heater during Defrost and Error			
2	2	Heater Available	ON	ON	High
		Enable heater and fan during Defrost and Error ³			

¹While the heater is on, the fan will operate at high speed regardless of the fan setting on the remote controller.

²Factory setting

³The heater will not operate if the following errors are active. In these cases, the error must be corrected, and the system restarted in order to recover heater function:

- Remote controller communication error (E4, E5)

- M-NET communication error (A0-A8)
- Air intake sensor error (P1)

Installers are strongly advised never to physically uninstall a wired controller while the system is running. In addition to the safety concerns, this practice can also trigger a remote controller communication error.



IMPORTANT

If the system detects an error that could potentially create a safety hazard, **the heater will not operate.**



CAUTION

If a heater is installed in a duct, do not use Panel Heater Connector. By doing so, the fan will turn off when the heater is on, which may result in fire.



NOTE

When using the SPTB1 accessory, take special care when restarting power to the system to ensure that both the indoor unit and outdoor unit are powered up at the same time to avoid triggering a communication error.

- **Table 19. Heater control table: shows how the field-installed heater is controlled.**

Key

- EH1: Electric heater
- EH2: Electric heater
- To: Set point temperature
- T_{RA} : Return air temperature
- X: Time delay (Selectable. Default is 24 min. Selectable to 14, 19, or 29 min)

Mode Change	Condition							
	$(T_o - T_{RA}) > 2.7^\circ\text{F}$ [1.5°C]	AND	T_{RA} has not increased by 0.9°F [0.5°C] i $\underline{X}$ min	EH1 ON for > 7 mi	AND	$(T_o - T_{RA}) > 2.7^\circ\text{F}$ [1.5°C]	AND	T_{RA} has not increased by 0.9°F [0.5°C] in 7 min
EH1 ON	○	AND	○					
EH2 ON				○	AND	○	AND	○
EH1 OFF								○
EH2 OFF								○


- **Table 20. Time delay selection table: shows how the time delay is selected**

Request Code ¹	Action ²
390	Monitor Time Delay Setting
391	Set Time Delay to <u>14</u> minutes
392	Set Time Delay to <u>19</u> minutes
393	Set Time Delay to <u>24</u> minutes ³
394	Set Time Delay to <u>29</u> minutes

¹Time delay can only be selected with MA controller. If use of a non-MA controller is desired, the time delay must first be selected with the MA controller. Then the non-MA controller can be attached and used.

²All delay times are approximate.

³The default time delay setting is 24 minutes.

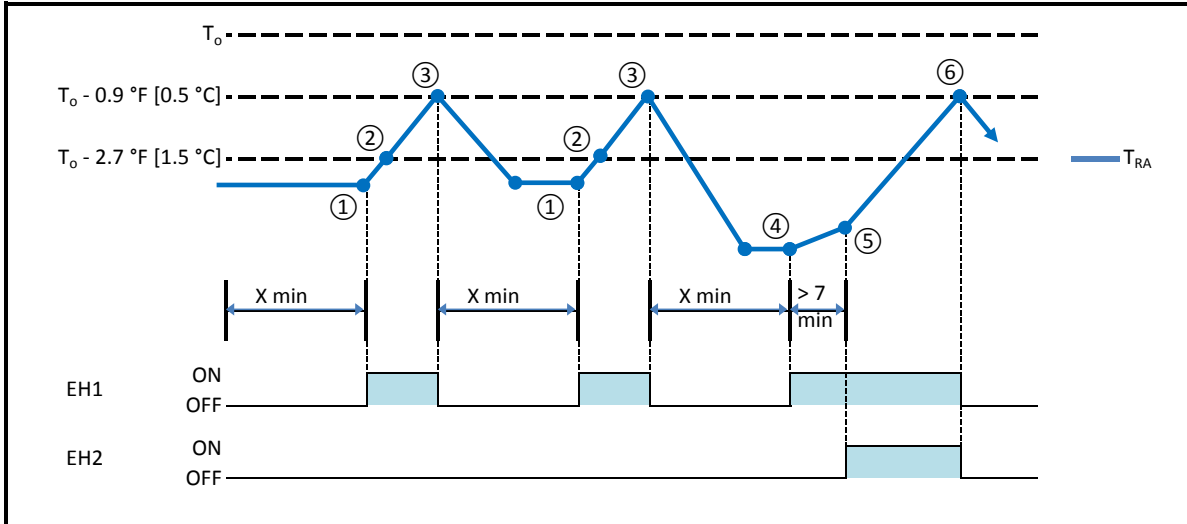• **Table 21. Heater operation example: shows example of heater operation.**

Step	Condition			Result
①	$(T_o - T_{RA}) > 2.7\text{ }^{\circ}\text{F}$ [$1.5\text{ }^{\circ}\text{C}$]	AND	T_{RA} has not increased by $0.9\text{ }^{\circ}\text{F}$ [$0.5\text{ }^{\circ}\text{C}$] in $X\text{ min}$	EH1 ON
②	$(T_o - T_{RA}) < 2.7\text{ }^{\circ}\text{F}$ [$1.5\text{ }^{\circ}\text{C}$]	AND	T_{RA} increasing faster than $0.9\text{ }^{\circ}\text{F}$ [$0.5\text{ }^{\circ}\text{C}$] in 7 min	EH2 not ON
③	$(T_o - T_{RA}) < 0.9\text{ }^{\circ}\text{F}$ [$0.5\text{ }^{\circ}\text{C}$]			EH1 OFF
④	$(T_o - T_{RA}) > 2.7\text{ }^{\circ}\text{F}$ [$1.5\text{ }^{\circ}\text{C}$]	AND	T_{RA} has not increased by $0.9\text{ }^{\circ}\text{F}$ [$0.5\text{ }^{\circ}\text{C}$] in $X\text{ min}$	EH1 ON
⑤	$(T_o - T_{RA}) > 2.7\text{ }^{\circ}\text{F}$ [$1.5\text{ }^{\circ}\text{C}$]	AND	T_{RA} not increasing faster than $0.9\text{ }^{\circ}\text{F}$ [$0.5\text{ }^{\circ}\text{C}$] in 7 min	EH2 ON
⑥	$(T_o - T_{RA}) < 0.9\text{ }^{\circ}\text{F}$ [$0.5\text{ }^{\circ}\text{C}$]			EH1 OFF EH2 OFF

10.2. Fan control

By setting Mode No. 23 in the Function Table in section 9-1 and using CN4Y from the CN24RELAY-KIT-CM3 kit, the following patterns of fan control will become possible.

Table 22. Fan Control Patterns

CN4Y for FAN control (CN24RELAY-KIT-CM3)	Mode (function) No. 23	Heater operation in DEFROST and ERROR ¹	Fan mode in DEFROST and ERROR	Fan (all other modes)
Enabled	1 ²	OFF	STOP	Set (heater ON)
	2	ON	STOP	High (heater ON) ³

¹The heater will not operate if the following errors are active. In these cases, the error must be corrected, and the system restarted in order to recover heater function:

- Remote controller communication error (E4, E5)
- M-NET communication error (A0-A8)
- Air intake sensor error (P1)

Installers are strongly advised never to physically uninstall a wired controller while the system is running. In addition to the safety concerns, this practice can also trigger a remote controller communication error.



IMPORTANT

If the system detects an error that could potentially create a safety hazard, **the heater will not operate.**



CAUTION

If a heater is installed in a duct, do not use Panel Heater Connector. By doing so, the fan will turn off when the heater is on, which may result in fire.



NOTE

When using the SPTB1 accessory, take special care when restarting power to the system to ensure that both the indoor unit and outdoor unit are powered up at the same time to avoid triggering a communication error.

²Factory setting

³While the heater is on, the fan will operate at high speed regardless of the fan setting on the remote controller.

Table 23. Fan Speed Setting¹

Mode	Setting		Mode No.	Setting
	Heating Thermo-OFF	DEFROST or ERROR		
Fan Control	Very Low	Very Low	25	1 2
	STOP	Remote Controller Setting	25	2
	Remote Controller Setting	Remote Controller Setting	25	3

¹Refer to Installation Manual for function settings.²Factory setting

10.3. CN24RELAY-KIT-CM3 (Optional Parts) installation

The following section describes installation of the External Heater Adapter that connects to PVA-AA-NL series indoor unit. This products is the special wiring parts to drive an electric heater with the air conditioner.

(1) Parts list

- Check that the following parts are included in the package.


- External output cable.....
.. 2 in total
Two types of cables with different connectors are included.
- Panel heater connector.....
..... 3 in total
White: 3
- Relay

(2) Connection to the indoor unit

- Use the cables that fit the connectors on the indoor unit control board.
- External output cable
This cable is used to connect a relay circuit for an interlocked operation with either an electric or a panel heater.
Select the heater output pattern (1st = CN24 or 2nd = CN24A) to use, and connect the cable to the connector on the indoor unit control board that corresponds to the selection.
 - Panel heater connector


This connector is used to perform an interlocked operation with a panel heater. Depending on the indoor unit control board specification, connect the cable to CN2Y as appropriate.

CN2Y for
FAN control
(CN24RELAY-
KIT-CM3)

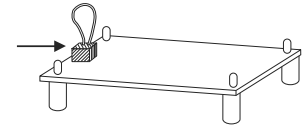


3) Wiring

- A basic connection method is shown below.

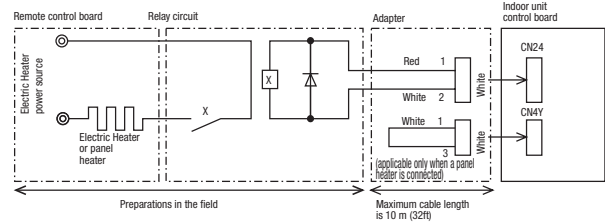

- The length of the electrical wiring for the CN24RELAY-KIT-CM3 is 2 meters (6-1/2 ft.)
- To extend this length, use sheathed 2-core cable. Control cable type: CVV, CVS, CPEV or equivalent.
Cable size: 0.5 mm² ~ 1.25 mm² (16 to 22 AWG)
Don't extend the cable more than 10 meters (32ft)

Table 24. Recommended circuit

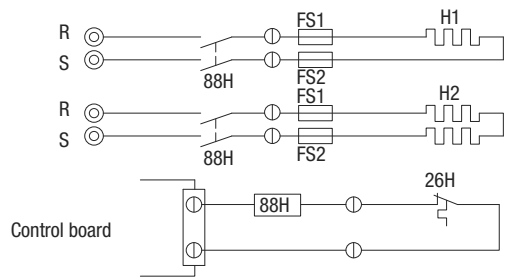

CN24 or CN24a

1-phase power supply, 208V, 230V, 60Hz


KEY

- FS1, 2: Thermal fuse
- H1, H2: Heater
- 26H: Overheat protection thermostat
- 88H: Electromagnetic

(4) Wiring restrictions

- Keep the length of the cable connecting to the circuit board of the indoor unit shorter than 10 meters (32 ft).
- Longer than 10 meters (32 ft) could cause improper operation.
- Use a transit relay when extending wiring such as remote wiring.

11. Humidifier

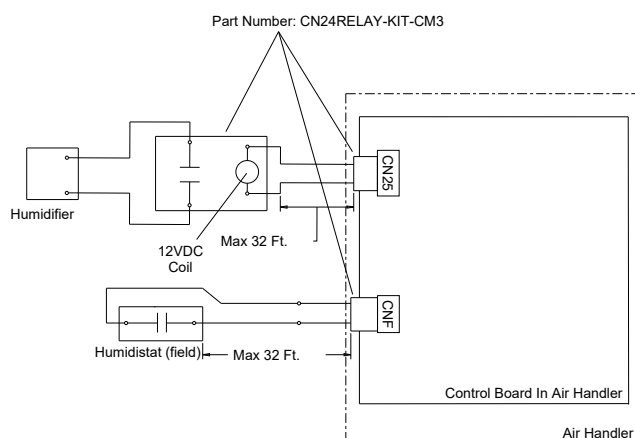

Humidifier Control (CN25 Output is ON)

Sequence of operation:

1. The humidistat closes CNF
2. The fan starts on high
3. CN25 provides 12VDC to turn on the Humidifier (do not exceed 1 Watt draw per relay)
4. When the Humidistat opens, the fan continues to run for 30 seconds to clear the ductwork of moist air
5. If defrost starts during humidifier operation, CN25 de-energizes

Humidistat:

- Non-Voltage a-contact input
- Contact rating voltage ≥ 15 VDC
- Contact Rating Current ≥ 0.1 A
- Minimum Applicable Load ≤ 1 mA at DC

Mode (function) No.		Humidistat Output	Condition	CN25 Output	Fan Speed
13	16	CNF Input	(No Defrost/No Error)		
2	1 ^a .	OFF	Heat operation & Thermo OFF	OFF	RC ^b . Setting
			Heat operation & Thermo ON		
		ON	Heat operation & Thermo OFF	OFF	RC Setting
			Heat operation & Thermo ON	ON	High
	2	OFF	Heat operation & Thermo OFF	OFF	RC Setting
			Heat operation & Thermo ON		
		ON	Heat operation & Thermo OFF	ON	High
			Heat operation & Thermo ON		
1 ^a .	-	-	No humidifier operation	OFF	RC Setting

The fan continues to run for 30 seconds after the humidifier stops.



CAUTION

If a heater is installed in a duct, do not use Panel Heater Connector. By doing so, the fan will turn off when the heater is on, which may result in fire.




NOTE

When using the SPTB1 accessory, take special care when restarting power to the system to ensure that both the indoor unit and outdoor unit are powered up at the same time to avoid triggering a communication error.

^aFactory setting

^bRemote controller

12. ERV (Energy Recovery Ventilation)

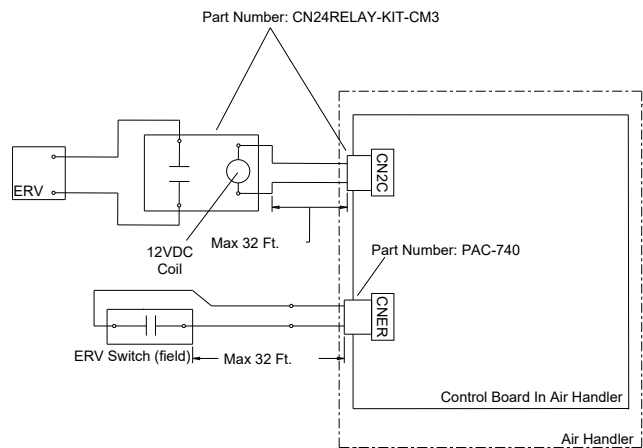

ERV Control

Sequence of operation:

1. The ERV demand switch closes CNER
2. 12 VDC is provided to CN2C to turn on ERV
3. If the unit goes into defrost, CN2C stops 12 VDC output

ERV Switch:

- Non-Voltage a-contact input
- Contact rating voltage ≥ 15 VDC
- Contact rating current ≥ 0.1 A
- Minimum applicable load ≤ 1 mA at DC

ERV output CNER input	Function Mode 26	Condition	Fan speed	CN2C output (=Fan output)
OFF	-	Cool/Heat/Fan operation	RC ^a setting	ON
		Defrost	STOP	OFF
		STOP	STOP	OFF
ON	1 ^b	Cool/Heat/Fan operation	RC setting	ON
		Defrost	STOP	OFF
		STOP	STOP	OFF
	2	Cool/Heat/Fan operation	RC setting	ON
		Defrost	STOP	OFF
		STOP	RC setting ^{c,d}	ON

^a Remote controller

^b Factory setting

^c If ERV control is effective when STOP, IDU doesn't report fan status or PB error (Fan motor error).

^d When fan speed setting by RC is "Auto", Fan speed is fixed to "HIGH".

13. Troubleshooting

13.1. Cautions on troubleshooting



CAUTION

(1) Before troubleshooting, check the following:

1. Check the power supply voltage.
2. Check the indoor/outdoor connecting wire for miswiring.


**CAUTION**

(2) Take care of the following during servicing.

1. Before servicing the air conditioner, be sure to turn off the remote controller first to stop the main unit, and then turn off the breaker.
2. When removing the indoor controller board, hold the edge of the board with care NOT to apply stress on the components.
3. When connecting or disconnecting the connectors, hold the housing of the connector. DO NOT pull the lead wires.



Lead wires

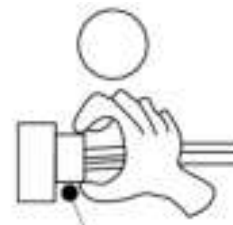

Housing point

13.2. Self-check

Refer to the installation manual that comes with each remote controller for details.

Remote controller	[Output pattern A] Errors detected by indoor unit
Check code on the LCD	Symptom
P1	Intake sensor error
P2 / P9	Pipe (liquid or 2-phase pipe) sensor error
E6 / E7	Indoor / outdoor unit communication error
P4	Float switch connector open error
P5	Drain pump error
P6	Freezing / overheating safeguard operation
EE	Communication error between indoor and outdoor units
P8	Pipe temperature error
E4, E5	Remote controller signal communication error
PB	Fan motor error
Fb	Indoor unit control system error (memory error, etc.)
FL	Refrigerant leak detected
FH	Refrigerant leak sensor error ^a
PL	Refrigerant circuit abnormal
E0, E3	(NO sound) Remote controller transmission error
E1, E2	(NO sound) Remote controller control board error

^aThe refrigerant leak sensor is not properly connected OR replacement of refrigerant leak sensor is required due to end of life or failure. See the sub-section *Service note: servicing and replacing the refrigerant leak sensor* found in chapter *Mount positions* for basic information about the refrigerant leak sensor location and replacement. A complete procedure can be found in the Indoor Unit service manual.

Remote controller	[Output pattern B] Errors detected by unit other than indoor unit (outdoor unit, etc.)
Check code on the LCD	Symptom
E9	Indoor/outdoor unit communication error (transmitting error) (outdoor unit)
UP	Compressor overcurrent interruption
U3 / U4	Open/short of outdoor unit thermistors
UF	Compressor overcurrent interruption (when compressor locked)
U2	Abnormal high discharging temperature / 49C worked / insufficient refrigerant
U1 / Ud	Abnormal high pressure (63H worked) / overheating safeguard operation
U5	Abnormal temperature of heat sink
U8	Outdoor unit fan protection stop
U6	Compressor overcurrent interruption / abnormal of power module
U7	Abnormality of super heat due to low discharge temperature
U9 / UH	Abnormality such as overvoltage, voltage shortage, abnormal and synchronous signal to main circuit / current sensor error
FL	Refrigerant leakage or Refrigerant leak sensor error caused by other rooms
Others	Other errors (refer to the technical manual for the outdoor unit)

If the unit cannot be operated properly after the above test run has been performed, use this table to remove the cause:			
Symptom			Cause
Remote controller		LED 1, 2 (PCB in outdoor unit)	
PLEASE WAIT	For about 2 minutes following power-on	After LED 1, 2 are lit → LED 2 is turned off Only LED 1 is lit (correct operation)	For about 2 minutes after power-on, operation of the remote controller is not possible due to system start-up. (correct operation)
PLEASE WAIT → Error code	After about 2 minutes has expired following power-on	Only LED 1 is lit → LED 1, 2 blink.	- Connector for the outdoor unit's protection device is not connected. - Reverse or open phase wiring for the outdoor unit's power terminal block (L1, L2, L3)
Display messages do not appear even when operation switch is turned ON (operation lamp does not light up).		Only LED 1 is lit → LED 1, 2 blinks twice LED 2 blinks once	- Incorrect wiring between indoor and outdoor units (incorrect polarity of S1, S2, S3) - Remote controller wire short
Operation is not possible for about 30 seconds after cancellation of function selection. (correct operation)			

Description of LED 1, 2, and 3 on the indoor controller	
LED 1: power for microcomputer	Indicates whether control power is supplied. Make sure that this LED is always lit.
LED 2: power for remote controller	Indicates whether power is supplied to the remote controller. This LED lights only in the case of the indoor unit which is connected to the outdoor unit refrigerant address "0".
LED 3: communication between indoor and outdoor units	Indicates state of communication between the indoor and outdoor units. Make sure that this LED is always blinking.

13.2.1. Auto restart function

Indoor unit control board

This model is equipped with the AUTO RESTART FUNCTION.

When the indoor unit is controlled with the remote controller, the operation mode, set temperature, and the fan speed are memorized by the indoor unit control board.

The AUTO RESTART FUNCTION will restart the unit within a time delay of 5 to 10 minutes after power is restored.

Set the AUTO RESTART FUNCTION using the remote controller. (Mode no. 01)

13.2.2. Function table

Mode	Settings	Mode (function) No.	Setting no.	Default setting
Power failure auto restart	Not available	01	1	1
	Available		2	
Indoor temperature detect	Indoor unit operating average	02	1	1
	Indoor unit's internal sensor		2	
	Remote controller's internal sensor		3	
LOSSNAY connectivity	Not supported	03	1	1
	Supported (indoor unit is not equipped with outdoor air intake)		2	
	Supported (indoor unit is equipped with outdoor air intake)		3	
Power voltage	240V (230V)	04	1	1
	220V (208V)		2	
Filter sign	100 Hr	07	1	3
	2500 Hr		2	
	No filter sign indicator		3	
External static pressure	See section 14.4 of the installation manual	08	1	2
			2	
			3	
		10	1	1
			2	
Heater control	Heater not present	11	1	1
	Heater present ^a		2	
Humidifier	Humidifier not present	13	1	1
	Humidifier present		2	
Humidifier control	Heat mode & Thermo ON	16	1	1
	Heat mode		2	
Defrost on/off cycle settings ^b	Standard	17	1	1
	High for humid winter climates		2	
Heater control defrost and error	Disable heater during defrost and error	23	1	1
	Enable heater and fan during defrost and error ^c		2	
Fan speed thermo off (heating)	Extra low	25	1	1
	Stop		2	
	RC Setting		3	
Fan speed thermo off (cooling)	RC setting	27	1	1
	Stop		2	

^aWhile the heater is on, the fan will operate at high speed regardless of the fan setting on the remote controller.

^bOnly operational with PUZ

^cThe heater will not operate if the following errors are active. In these cases, the error must be corrected, and the system restarted in order to recover heater function:

- Remote controller communication error (E4, E5)
- M-NET communication error (A0-A8)
- Air intake sensor error (P1)

Installers are strongly advised never to physically uninstall a wired controller while the system is running. In addition to the safety concerns, this practice can also trigger a remote controller communication error.



IMPORTANT

If the system detects an error that could potentially create a safety hazard, the heater will not operate.



CAUTION

If a heater is installed in a duct, do not use Panel Heater Connector. By doing so, the fan will turn off when the heater is on, which may result in fire.



NOTE

When using the SPTB1 accessory, take special care when restarting power to the system to ensure that both the indoor unit and outdoor unit are powered up at the same time to avoid triggering a communication error.

13.3. Self-diagnosis action table

Error Code	Abnormal point and detection method	Cause	Countermeasure
P1	Room temperature thermistor (TH1) - The unit is in three-minute resume prevention mode if short/open of thermistor is detected. Abnormal if the unit does not reset normally after three minutes. (The unit returns to normal operation, if it has normally reset.) - Constantly detected during cooling, drying and heating operation Short: 90 °C [194 °F] or more Open: -40 °C [-40 °F] or less	- Defective thermistor characteristics - Contact failure of connector (CN20) on the indoor controller board (Insert failure) - Breaking of wire or contact failure of thermistor wiring - Defective indoor controller board	1–3. Check resistance value of thermistor. 0 °C [32 °F].....15.0kΩ 10 °C [50 °F].....9.6kΩ 20 °C [68 °F].....6.3kΩ 30 °C [86 °F].....4.3kΩ 40 °C [104 °F]...3.0kΩ If you put force on (draw or bend) the lead wire with measuring resistance value of thermistor breaking of wire or contact failure can be detected. 2. Check contact failure of connector (CN20) on the indoor controller board. Refer to 12-5. Turn the power on again and check restart after inserting connector again. 4. Check room temperature display on remote controller. Replace indoor controller board if there is abnormal difference with actual room temperature. Turn the power off, and on again to operate after check.

Error Code	Abnormal point and detection method	Cause	Countermeasure
P2	Pipe temperature thermistor/Liquid (TH2) 1. The unit is in three-minute resume prevention mode if short/open of thermistor is detected. Abnormal if the unit does not reset normally after three minutes. (The unit returns to normal operation, if it has normally reset.) 2. Constantly detected during cooling, drying, and heating (except defrosting) operation. Short: 90 °C [194 °F] or more Open: -40 °C [-40 °F] or less	1. Defective thermistor characteristics 2. Contact failure of connector (CN44) on the indoor controller board (Insert failure) 3. Breaking of wire or contact failure of thermistor wiring 4. Defective refrigerant circuit is causing thermistor temperature of 90 °C [194 °F] or more or -40 °C [-40 °F] or less. 5 Defective indoor controller board	1–3. Check resistance value of thermistor. For characteristics, refer to (P1) above. 2. Check contact failure of connector (CN44) on the indoor controller board. Refer to 12-5. Turn the power on again and check restart after inserting connector again. 4. Check pipe <liquid> temperature with remote controller in test run mode. If pipe<liquid> temperature is extremely low (in cooling mode) or high (in heating mode), refrigerant circuit may have defective. 5. Check pipe <liquid> temperature with remote controller in test run mode. If there is extreme difference with actual pipe <liquid> temperature, replace indoor controller board. Turn the power off, and on again to operate after check.
P4 (5701)	Contact failure of drain float switch (CN4F) 1. Extract when the connector of drain float switch is disconnected. (3 and 4 of connector CN4F is not short-circuited.) 2. Constantly detected during operation.	1. Contact failure of connector (Insert failure) 2. Defective indoor controller board	1. Check contact failure of float switch connector. Turn the power on again and check after inserting connector again. 2. Operate with connector (CN4F) short-circuited. Refer to 12-5. Replace indoor controller board if abnormality reappears.

Error Code	Abnormal point and detection method	Cause	Countermeasure
P6	Freezing/overheating protection is working - Freezing protection (Cooling mode) The unit is in six-minute resume prevention mode if pipe <liquid or condenser/evaporator> temperature stays under -15 °C [5 °F] for three minutes after the compressor started. Abnormal if it stays under -15 °C [5 °F] for three minutes again within 16 minutes after six-minute resume prevention mode. - Overheating protection (Heating mode) The units is in six-minute resume prevention mode if pipe <Liquid or condenser / evaporator>temperature is detected as over 70 °C [158 °F] after the compressor started. Abnormal if the temperature of over 70 °C [158 °F] is detected again within 30 minutes after six-minute resume prevention mode.	(Cooling or drying mode) - Clogged filter (reduced airflow) - Short cycle of air path - Low-load (low temperature) operation beyond the tolerance range 4 Defective indoor fan motor - Fan motor is defective. - Indoor controller board is defective. - Defective outdoor fan control - Overcharge of refrigerant - Defective refrigerant circuit (clogs) (Heating mode) - Clogged filter (reduced airflow) - Short cycle of air path - Over-load (high temperature) operation beyond the tolerance range - Defective indoor fan motor - Fan motor is defective. - Indoor controller board is defective. - Defective outdoor fan control - Overcharge of refrigerant 7 Defective refrigerant circuit (clogs) - Bypass circuit of outdoor unit is defective	(Cooling or drying mode) - Check clogging of the filter - Remove shields 4. Refer to 12-8. DC Fan motor (FAN MOTOR/ INDOOR CONTROLLER BOARD) - Check outdoor fan motor 6~7. Check operating condition of refrigerant circuit. (Heating mode) - Check clogs of the filter - Remove shields 4. Refer to 12-8. DC Fan motor (FAN MOTOR/ INDOOR CONTROLLER BOARD) - Check outdoor fan motor 6~8. Check operating condition of refrigerant circuit

Error Code	Abnormal point and detection method	Cause	Countermeasure
P8	Pipe temperature <Cooling mode> Detected as abnormal when the pipe temperature is not in the cooling range 3 minutes after compressor start and 6 minutes after the liquid or condenser/evaporator pipe is out of cooling range.  NOTE 1) It takes at least 9 minutes. to detect. 2) Abnormality P8 is not detected in drying mode. Cooling range : -3 °C (-5.4 °F)] (TH-TH1) TH: Lower temperature between: liquid pipe temperature (TH2) and condenser/evaporator temperature (TH5) TH1: Intake temperature <Heating mode> When 10 seconds have passed after the compressor starts operation and the hot adjustment mode has finished, the unit is detected as abnormal when condenser/evaporator pipe temperature is not in heating range within 20 minutes.  NOTE 3) It takes at least 27 minutes to detect abnormality. 4) It excludes the period of defrosting (Detection restarts when defrosting mode is over) Heating range : 3 °C (5.4 °F) [(TH5-TH1)	- Slight temperature difference between indoor room temperature and pipe <liquid or condenser / evaporator> temperature thermistor - Shortage of refrigerant - Disconnected holder of pipe <liquid or condenser / evaporator> thermistor - Defective refrigerant circuit - Converse connection of extension pipe (on plural units connection) - Converse wiring of indoor/outdoor unit connecting wire (on plural units connection) - Defective detection of indoor room temperature and pipe <condenser / evaporator> temperature thermistor - Stop valve is not opened completely	1~4. Check pipe <liquid or condenser / evaporator> temperature with room temperature display on remote controller and outdoor controller circuit board. Conduct temperature check with outdoor controller circuit board after connecting 'A-Control Service Tool (PAC-SK52ST)'. 2~3. Check converse connection of extension pipe or converse wiring of indoor/outdoor unit connecting wire.
P9	Abnormality of pipe temperature thermistor / Condenser-Evaporator (TH5) - The unit is in three-minute resume protection mode if short/open of thermistor is detected. Abnormal if the unit does not get back to normal within three minutes. (The unit returns to normal operation, if it has normally reset.) - Constantly detected during cooling, drying, and heating operation (except defrosting) Short: 90 °C [194 °F] or more Open: -40 °C [-40 °F] or less	- Defective thermistor characteristics - Contact failure of connector (CN44) on the indoor controller board (Insert failure) - Breaking of wire or contact failure of thermistor wiring - Temperature of thermistor is 90 °C [194 °F] or more or -40 °C [-40 °F] or less caused by defective refrigerant circuit - Defective indoor controller board	- Check resistance value of thermistor. For characteristics, refer to (P1) above. - Check contact failure of connector (CN44) on the indoor controller board. Refer to 12-5. Turn the power on and check restart after inserting connector again. - Operate in test run mode and check pipe <condenser / evaporator> temperature. If pipe <condenser / evaporator> temperature is extremely low (in cooling mode) or high (in heating mode), refrigerant circuit may have defect. - When no problems are found in 1~4 above, replace the indoor unit control board.

Error Code	Abnormal point and detection method	Cause	Countermeasure
E0 or E4	Remote controller transmission error(E0)/signal receiving error(E4) - Abnormal if main or sub remote controller can not receive normally any transmission from indoor unit of refrigerant address "0" for three minutes. (Error code : E0) - Abnormal if sub remote controller could not receive for any signal for two minutes. (Error code: E0) - Abnormal if indoor controller board can not receive normally any data from remote controller board or from other indoor controller board for three minutes. (Error code: E4) - Indoor controller board cannot receive any signal from remote controller for two minutes. (Error code: E4)	- Contact failure at transmission wire of remote controller - All remote controllers are set as "sub" remote controller. In this case, E0 is displayed on remote controller, and E4 is displayed at LED (LED 1, LED 2) on the outdoor controller circuit board. - Mis-wiring of remote controller - Defective transmitting receiving circuit of remote controller - Defective transmitting receiving circuit of indoor controller board of refrigerant address "0" - Noise has entered into the transmission wire of remote controller	- Check disconnection or looseness of indoor unit or transmission wire of remote controller. - Set one of the remote controllers "main". If there is no problem with the action above. - Check wiring of remote controller. - Total wiring length: max 500m (Do not use cable 5 3 or more) - The number of connecting indoor units: max 16 units - The number of connecting remote controller: max 2 units When it is not the above-mentioned problem of 1~3 - Diagnose remote controllers. - When "RC OK" is displayed, Remote controllers have no problem. Turn the power off, and on again to check. If abnormality generates again, replace indoor controller board. - When "RC NG" is displayed, Replace remote controller. - When "RC E3" is displayed, - When "ERC 00-06" is displayed, [c), d)] → Noise may be causing abnormality.] * If the unit is not normal after replacing indoor controller board in group control, indoor controller board of address "0" may be abnormal.
E3 or E5	Remote controller transmission error(E3)/signal receiving error(E5) - Abnormal if remote controller could not find blank of transmission path for six seconds and could not transmit. (Error code: E3) - Remote controller receives transmitted data at the same time, compares the data, and when detecting it, judges different data to be abnormal 30 continuous times. (Error code: E3) - Abnormal if indoor controller board could not find blank of transmission path. (Error code: E5) - Indoor controller board receives transmitted data at the same time, compares the data, and when detecting it, judges different data to be abnormal 30 continuous times. (Error code: E5)	- Two remote controller are set as "main." (In case of 2 remote controllers) - Remote controller is connected with two indoor units or more - Repetition of refrigerant address - Defective transmitting receiving circuit of remote controller - Defective transmitting receiving circuit of indoor controller board - Noise has entered into transmission wire of remote controller.	- Set a remote controller to main, and the other to sub - Remote controller is connected with only one indoor unit - The address changes to a separate setting 4~6. Diagnose remote controller - When "RC OK" is displayed, remote controllers have no problem. Turn the power off, and on again to check. When becoming abnormal again, replace indoor controller board. - When "RC NG" is displayed, replace remote controller. - When "RC E3" or "ERC 00-66" is displayed, noise may be causing abnormality.

Error Code	Abnormal point and detection method	Cause	Countermeasure
E6	Indoor/outdoor unit communication error (Signal receiving error) 1. Abnormal if indoor controller board cannot receive any signal normally for six minutes after turning the power on. 2. Abnormal if indoor controller board cannot receive any signal normally for three minutes. 3. Consider the unit as abnormal under the following condition: When two or more indoor units are connected to an outdoor unit, indoor controller board cannot receive a signal for three minutes from outdoor controller circuit board, a signal which allows outdoor controller circuit board to transmit signals.	1. Contact failure, short circuit or, mis-wiring (converse wiring) of indoor/outdoor unit connecting wire 2. Defective transmitting receiving circuit of indoor controller board 3. Defective transmitting receiving circuit of indoor controller board 4. Noise has entered into indoor/ outdoor unit connecting wire	* Check LED display on the outdoor control circuit board. (Connect A-control service tool, PAC-SK52ST.) Refer to EA-EC item if LED displays EA-EC. 1. Check disconnection or looseness of indoor/ outdoor unit connecting wire of indoor unit or outdoor unit. Check all the units in case of twin triple indoor unit system. 2~4. Turn the power off, and on again to check. If abnormality generates again, replace indoor controller board or outdoor controller circuit board. * Other indoor controller board may have defect in case of twin triple indoor unit system.
E7	Indoor/outdoor unit communication error (Transmitting error) Abnormal if "1" receiving is detected 30 times continuously though indoor controller board has transmitted "0".	1. Defective transmitting receiving circuit of indoor controller board 2. Noise has entered into power supply 3. Noise has entered into outdoor control wire	1~3. Turn the power off, and on again to check. If abnormality generates again, replace indoor controller board.
Fb	Indoor controller board Abnormal if data cannot be read normally from the nonvolatile memory of the indoor controller board.	1. Defective indoor controller board	1. Replace indoor controller board.
FH	Refrigerant leak sensor error Abnormal if refrigerant sensor cannot detect errors normally.	1. The refrigerant leak sensor mounted on the indoor unit does not work. 2. The refrigerant leak sensor is not connected properly or the wire is broken.	1. While the error is being displayed, the indoor unit fan continues operating. 2. Ventilate the room well, make sure that there is no ignition source and then turn off the power • Check the connection of parts such as connectors and turn the power on again. • If the error does not clear, replace the Refrigerant leak sensor.


Error Code	Abnormal point and detection method	Cause	Countermeasure
FL	Refrigerant leakage Abnormal if refrigerant leakage detected by a refrigerant leak sensor.	- The refrigerant leaks from the piping or the heat exchanger in the indoor unit. - The following items are used around the indoor unit. - Spray (LP gas including FREON, and whose main ingredient is propane and butane. - Aerosol insecticide (including ethanol). - Air spray painting (including dichloromethane). - Charcoal (charcoal fire). - Chemicals (such as ethanol). - Refrigerant leaks from piping or heat exchangers, or sensor errors in indoor units in other rooms.	- While the error is being displayed, the indoor unit fan continues operating. - Ventilate the room well, make sure that there is no ignition source and then turn off the power - Check the indoor unit to detect the part where the refrigerant is leaking from. - Repair the part where refrigerant leaks. - Turn on the power again. - If the error does not clear, replace the Refrigerant leak sensor.
E1 or E2	Remote controller control board - Abnormal if data cannot be read normally from the nonvolatile memory of the remote controller control board. (Error code: E1) - Abnormal if the clock function of remote controller cannot be operated normally. (Error code: E2)	Defective remote controller	Replace indoor controller board.
PB	Fan motor error Abnormal if a) or b) is detected during fan motor operation. a) When the number of rotations is detected to be below the lower limit for 30 seconds. b) When the number of rotations is detected to be above the upper limit for 30 seconds.	- Motor or fan cannot rotate because of foreign object, etc. - Motor wire disconnection or connector disconnection or looseness - Motor failure	- Remove the foreign object causing the problem. - Check disconnection of the motor wiring or connector disconnection. - Replace the failed motor.

13.4. Troubleshooting by inferior phenomena

Phenomena	Cause	Countermeasure
(1) LED 2 on indoor controller board is off.	When LED 1 on indoor controller board is also off. - Power supply of rated voltage is not supplied to outdoor unit - Defective outdoor controller circuit board - Power supply of 208~230V is not supplied to indoor unit - Defective indoor controller board	Check the voltage of outdoor power supply terminal block (L, N) or (L3, N). - When AC 208~230V is not detected. Check the power wiring to outdoor unit and the breaker. - When AC 208~230V is detected. - Check 2 (below) Check the voltage between outdoor terminal block S1 and S2. - When AC 208~230V is not detected. Check the fuse on outdoor controller circuit board. Check the wiring connection. - When AC 208~230V is detected. - Check 3 (below) Check the voltage between indoor terminal block S1 and S2. - When AC 208~230V is not detected. Check indoor/outdoor unit connecting wire for miswiring. - When AC 208~230V is detected. - Check 4 (below) Check the fuse on indoor controller board. - Check the wiring connection. - If no problem are found, indoor controller board is defective.
(2) LED 2 on indoor controller board is blinking.	When LED 1 on indoor controller board is also blinking. Connection failure of indoor/outdoor unit connecting wire. When LED 1 is lit. - Miswiring of remote controller wires Under twin triple indoor unit system, 2 or more indoor units are wired together. - Refrigerant address for outdoor unit is wrong or not set. Under grouping control system, there are some units whose refrigerant address is 0. - Short-cut of remote controller wires - Defective remote controller	Check indoor/outdoor unit connecting wire for connection failure. - Check the connection of remote controller wires in case of twin triple indoor unit system. When 2 or more indoor units are wired in one refrigerant system, connect remote controller wires to one of those units. - Check the setting of refrigerant address in case of grouping control system. If there are some units whose refrigerant addresses are 0 in one group, set one of the units to 0 using SW1 (3-6) on outdoor controller circuit board. 3~4. Remove remote controller wires and check LED 2 on indoor controller board. - When LED 2 is blinking, check the short-cut of remote controller wires. - When LED 2 is lit, connect remote controller wires again and: if LED 2 is blinking, remote controller is defective; if LED 2 is lit, connection failure of remote controller terminal block etc. has returned to normal.

13.5. Test point diagram

Model code 12, 18, 24, 30, 36, 42, & 48

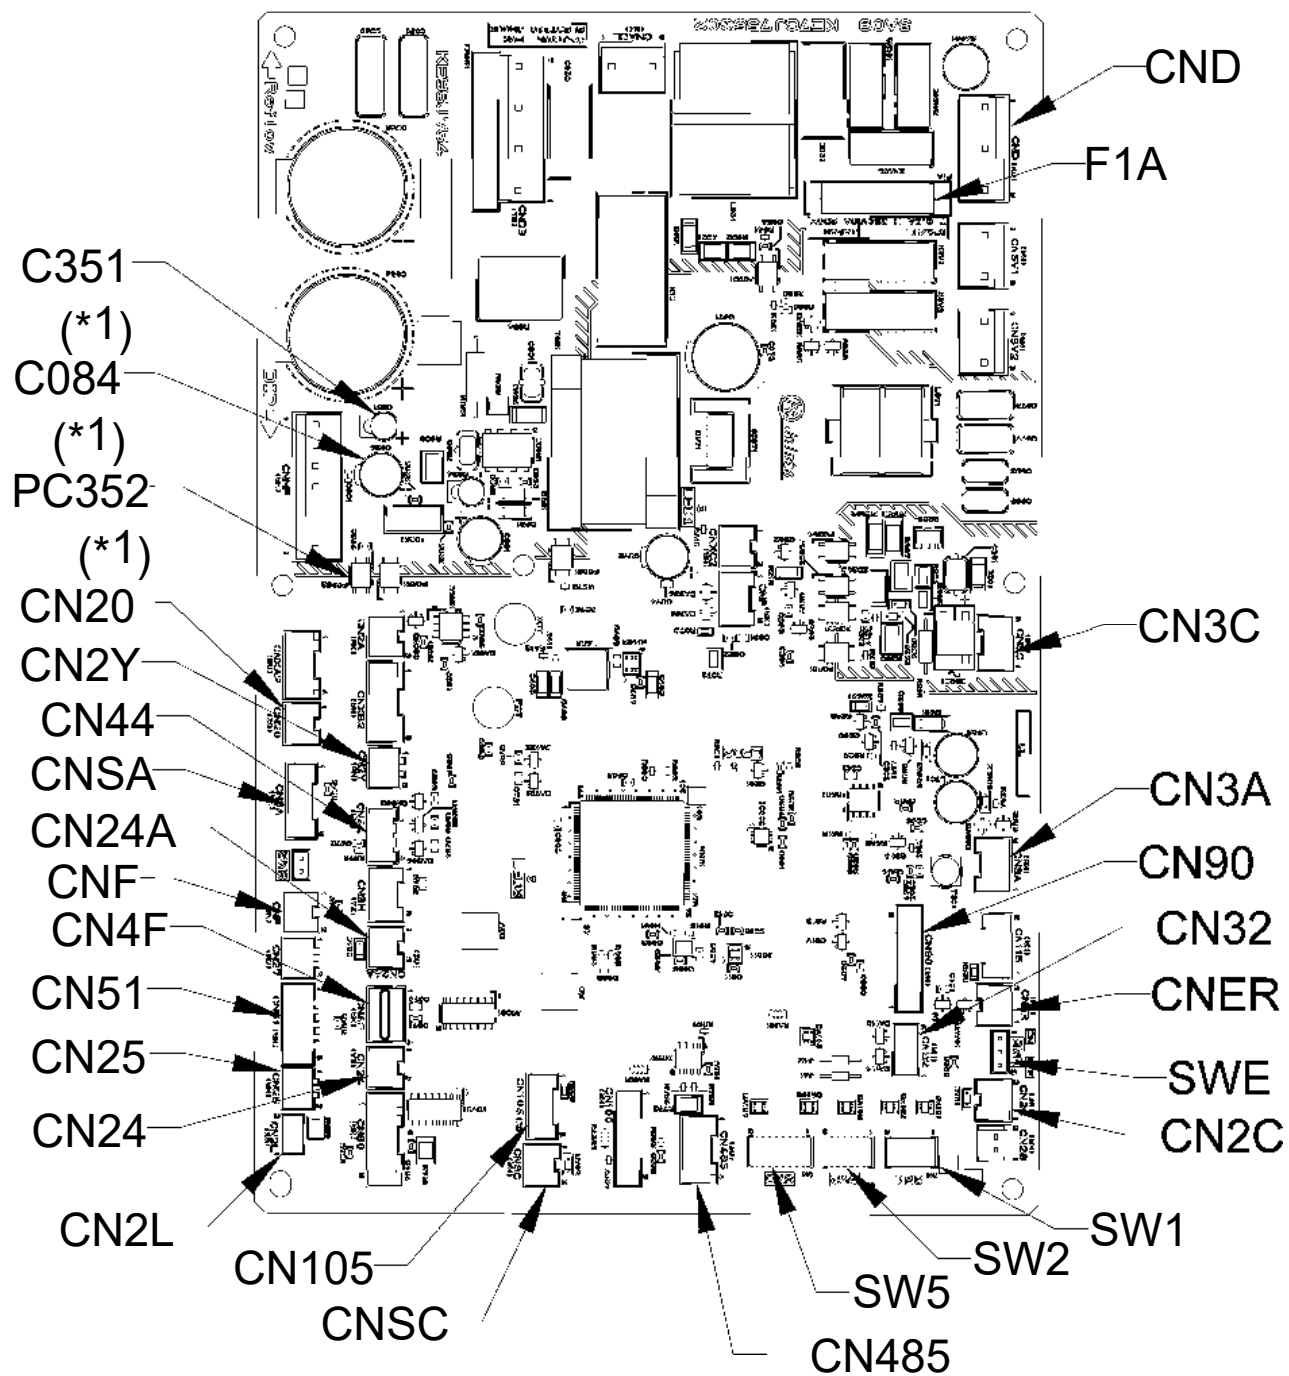

- (1*)
 - V_{FB} : Voltage on the (-) side of PC352 and C084
 - (same with the voltage between 7 (+) and 4 (-) of CNMF)
 - V_{OC} : Voltage between the C084 pins 15 VDC
 - (same with the voltage between 5 (+) and 4 (-) of CNMF)
 - V_{sp} : Voltage between the C351 pins
 - 0 VDC (with the fan stopped)
 - 1 - 6.5 VDC (with fan operating)
 - (same with the voltage between 6 (+) and 4 (-) of CNMF)
- CND: Power supply voltage (264 - 358 VAC)
- CNMF: Fan motor output
 - 1 - 4: 310 - 340 VDC
 - 5 - 4: 15 VDC
 - 6 - 4: 0 - 6.5 VDC
 - 7 - 4: Stop 0 to 15 VDC, Run 7.5 VDC (0 - 15 pulse)
- CN32: Remote start/stop adapter
- CN22: For MA remote controller cable connection (10 - 13 VDC)
- CN105: Radio frequency interface
- CN51: Centralized control
- CN41: JAMA standard HA terminal A
- CN44: Thermistor (liquid/condenser/evaporator temperature)
- CN4F: Float sensor
- CN20: Thermistor (inlet temperature)
- CN24: 1st heater control (12 VDC)
- CN24a: 2nd heater control
- CN2Y: For fan control
- CN3C: Indoor - outdoor transmission (0 - 24 VDC)
- CN90: Wireless remote controller
- CNSA: Refrigerant leak sensor
- CNER: ERV control
- CN2C: ERV input
- CN25: Humidity control
- CNF: Humidity input
- SWE: Emergency operation
- SW1: Model selection
- SW2: Capacity setting