6. Field settings

6-1 Press and hold the Cancel button for 4 seconds or longer. The Service Settings menu is displayed.


6-2 Select Field Settings and press the Menu/Enter button.

6-3 Highlight the "Mode No.", and select the desired "Mode No." by using the ▲▼ (Up/Down) buttons. For the most commonly used field settings, refer to page 17.

6-4 Highlight the SECOND CODE. of the FIRST CODE NO. to be changed and select the desired SECOND CODE NO. by using the ▲▼ (Up/Down) buttons. Multiple identical mode number settings are available.

6-5 Press the Menu/Enter button. The confirmation screen is displayed.

6-6 Select Yes and press the Menu/Enter button. The settings are saved and the Field settings screen returns.

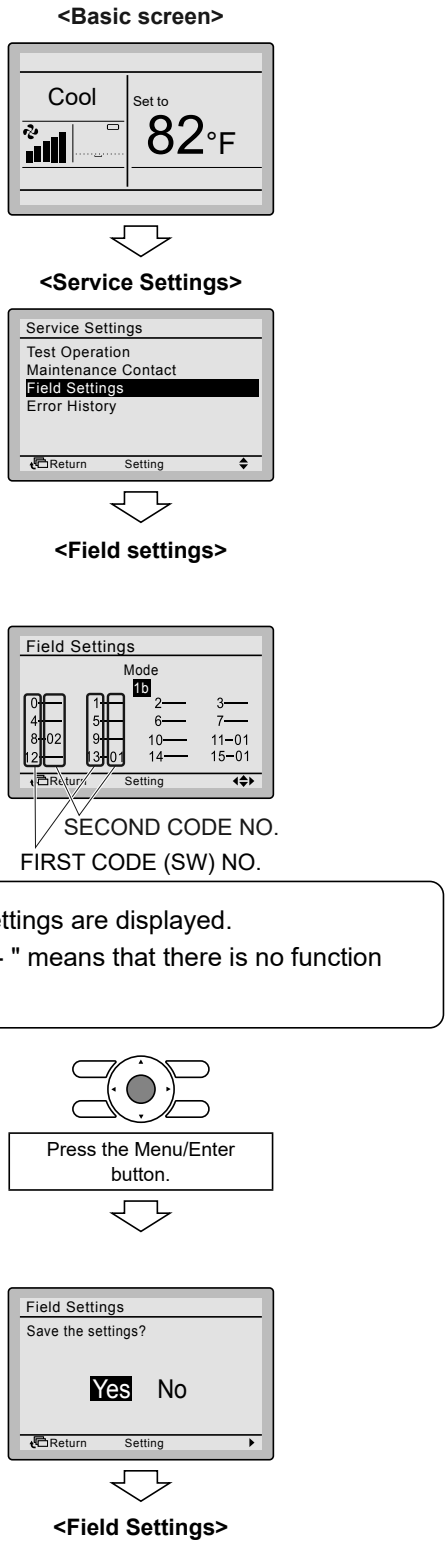

- The current settings are displayed.
- CODE NO. " -- " means that there is no function available.

Field settings

6-7 After all changes are completed, press the Cancel button twice.

6-8 The backlight goes out and "Checking the connection. Please stand by" is displayed during initialization. After the initialization, the Basic screen returns.

Mode No.	First Code No.	Description of the setting	Second code No.			
			01	02	03	04
1b	8	Daylight Saving Time	Disable	Enable*	—	—
	11	(Private use)	NA*	NA	—	—
	13	Basic screen display	Icon+Text*	Icon	—	—
	15	(Private use)	NA*	NA	—	—
1c	0	(Private use)	NA	NA*	—	—
	2	(Private use)	NA	NA*	—	—
	4	(Private use)	NA	NA*	—	—
	5	(Private use)	NA*	—	—	—
	6	(Private use)	NA*	—	—	—
	14	(Private use)	NA*	NA	—	—
1e	1	(Private use)	NA	NA*	—	—
	2	Setback function	Do not use	Heat only	Cool only	Cool and Heat*
	5	(Private use)	NA	NA*	—	—
	6	(Private use)	NA	NA*	—	—
	8	(Private use)	NA*	—	—	—
	9	(Private use)	NA	NA*	—	—
	a	(Private use)	NA*	—	—	—

* Factory default setting

7. Test operation method (pair split only)

* In case of multi-split models, see the manual attached to the outdoor unit.

NOTE

- In case of multi-split setup, test operation cannot be used.

Also see the installation manuals attached to the indoor unit and the outdoor unit.

- Check that the wiring of the indoor unit and the outdoor unit is completed.
- Check that the switchbox cover of the indoor unit and the outdoor unit is closed.
- Perform the test operation according to the following procedure.

NOTE

- The backlight will be lit for approximately 30 seconds when pressing one of the operation buttons.
- Operate the buttons only when the backlight is lit. However, the On/Off button can be operated when the backlight is not lit.

7-1 Make sure the electric work is properly completed and proper voltage is available before turn on the power.


⚠CAUTION

Make sure that the outer panel and piping cover are closed before operation (danger of electric shock).

7-2 Confirm that both the liquid and gas stop valves are opened.


7-3 Set the operation mode to cooling by using the Operation Mode Selector button.

7-4 Press and hold the Cancel button for 4 seconds or longer. The Service Settings menu is displayed.

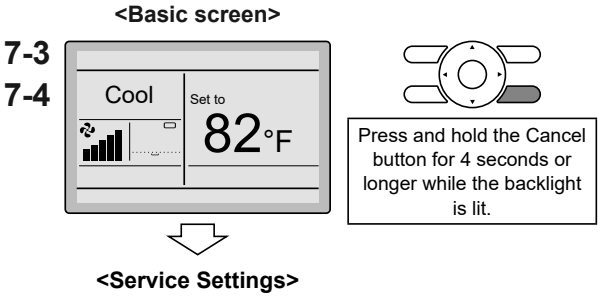

Test operation method (pair split only)


7-5 Select Test Operation and press the Menu/Enter button. The Basic screen returns and "Test operation" is displayed.

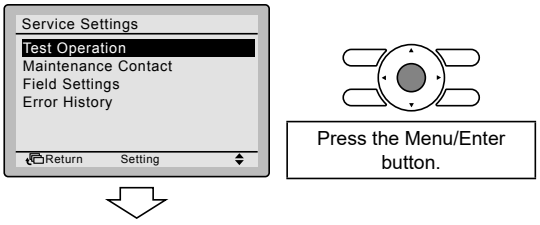

7-6 Press the On/Off button within about 10 seconds. Test operation starts. Check the operation condition for 3 minutes.


NOTE

Test operation can also be started by first performing 7-6, followed by 7-5.

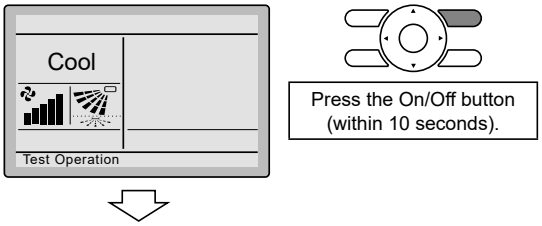


<Main menu>

7-7 Press the Menu/Enter button in the Basic screen. The Main menu is displayed.

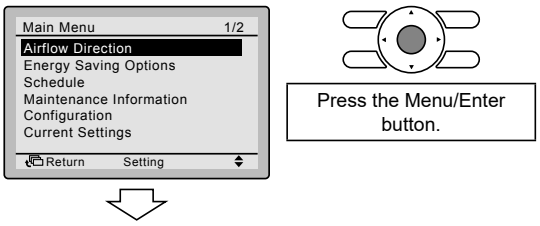


7-8 Select Airflow Direction and press the Menu/Enter button.

7-9 Press the ▲▼ buttons to select the desired airflow direction and press the Menu/Enter button. The Basic screen returns.

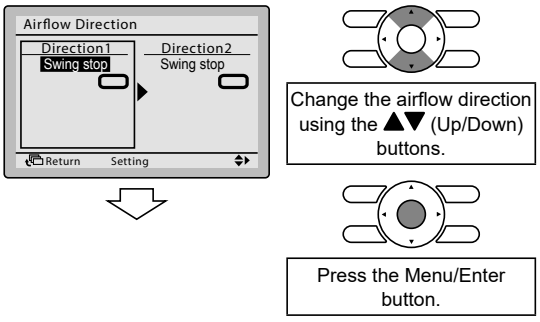


7-10 Press and hold the Cancel button for 4 seconds or longer in the Basic screen. The Service Settings menu is displayed.

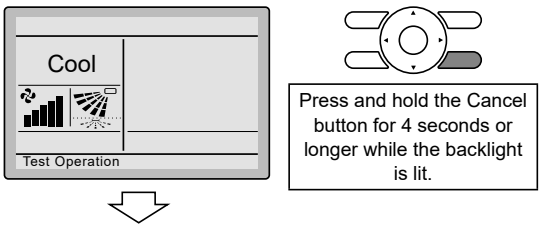


<Service Settings menu>

7-11 Select **Test Operation** in the Service Settings menu and press the Menu/Enter button. The Basic screen returns and normal operation is possible.

7-11

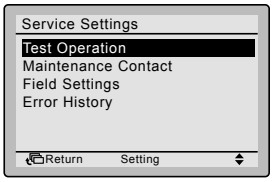



Press the Menu/Enter button.

<Basic screen>

7-12 Check the functions according to the User reference guide.

7-13 When the decoration panel is not installed, turn off the power after test operation finishes.

NOTE

Test operation will automatically finish after 30 minutes.

⚠CAUTION

- If the interior work is not completed when the test operation is finished, explain to the customer that he should not operate the unit until the interior work is completed in order to protect the indoor unit.
- (If the indoor unit is operated, the indoor unit may be contaminated with the materials which arise from paints or adhesives during the interior work and water splash or water leak may occur.)


⚠CAUTION


- If it is not possible to operate the unit due to any malfunction, refer to **Malfunction diagnosis method**.
- When the test operation finishes, check that the error code history is not displayed in the Maintenance Information screen according to the following procedure.

<Basic screen>

7-14 Press the Menu/Enter button in the Basic screen. The Main menu is displayed.

7-14

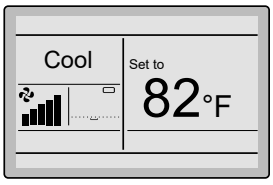





Press the Menu/Enter button.

<Main menu>

7-15 Select **Maintenance Information** and press the Menu/Enter button.

7-15

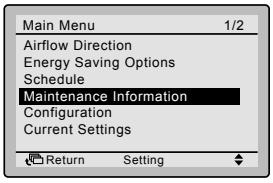




Press the Menu/Enter button.


Test operation method (pair split only)

7-16 The Maintenance Information screen is displayed. Check that the last error code is not displayed in the screen.

7-17 If the last error code is displayed, conduct the malfunction diagnosis referring to "Error code list" in the installation manual of the indoor unit. After the malfunction diagnosis finishes, press and hold the On/Off button for 4 seconds or longer in the "Maintenance Information" screen to erase the error code history.

7-16
7-17

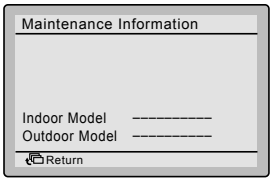




Press and hold the On/Off button for 4 seconds or longer.


NOTE

If no error code is displayed when this procedure is followed, the system has completed the test operation normally.

Malfunction diagnosis method

- When the user interface displays any item in the following table, inspect the details in the table.
- If an error occurs, "Error: Push Menu button" or "⚠" is displayed. Conduct the malfunction analysis referring to "Error code list" in the installation manual of the indoor unit. To see the RC Error History screen, refer to "8. Checking procedure of Error History".

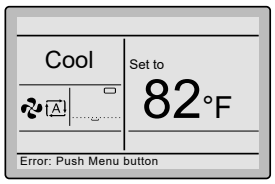

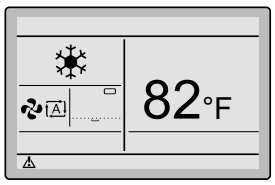

User interface display	Description
No display	• Power outage, power voltage failure or open-phase • Wrong wiring (between indoor and outdoor units) • Indoor PCB assembly failure • User interface wiring disconnection • User interface failure • Blown fuse (outdoor unit)
Display "Checking the connection Please stand by" is shown.*	• Indoor PCB assembly failure • Wrong wiring (between indoor and outdoor units)

* Though "Checking the connection Please stand by" is displayed for up to 180 seconds after powering on, this does not mean there is a failure. (Determine after 180 seconds if error code "U5" is displayed.)

8. Checking procedure of Error History


8-1 Press and hold the Cancel button for 4 seconds or longer in the Basic screen. The Service Settings menu is displayed.

8-2 Select Error History and press the Menu/Enter button. The Error History menu is displayed.

8-3 Select RC Error History and press the Menu/Enter button. The error codes can be confirmed in the RC Error History screen.

8-4 In the RC Error History screen the last 10 items are displayed in order.

8-5 Press the Cancel button in the RC Error History screen 3 times. The Basic screen returns.

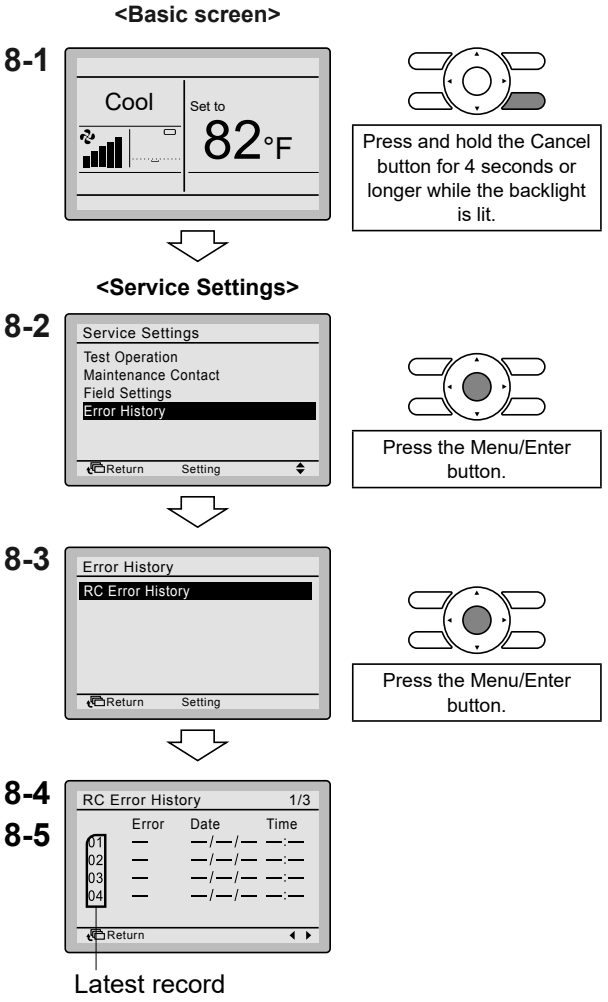

9. Registration method of the Maintenance Contact information

- Registration of the service contact information.

9-1 Press and hold the Cancel button for 4 seconds or longer in the Basic screen. The Service Settings menu is displayed.

9-2 Select Maintenance Contact and press the Menu/Enter button. The "Maintenance Contact" screen is displayed.


9-3 Select Maintenance Contact and press the Menu/Enter button.

9-4 Enter the telephone number by using the ▲▼ (Up/Down) buttons. Enter from the left to the right and blank digits should be left as " - ".

9-5 Press the Menu/Enter button. The setting confirmation screen is displayed.

9-6 Select Yes and press the Menu/Enter button. The settings are entered and the Service Settings menu returns.

9-7 Press the Cancel button once. The Basic screen returns.

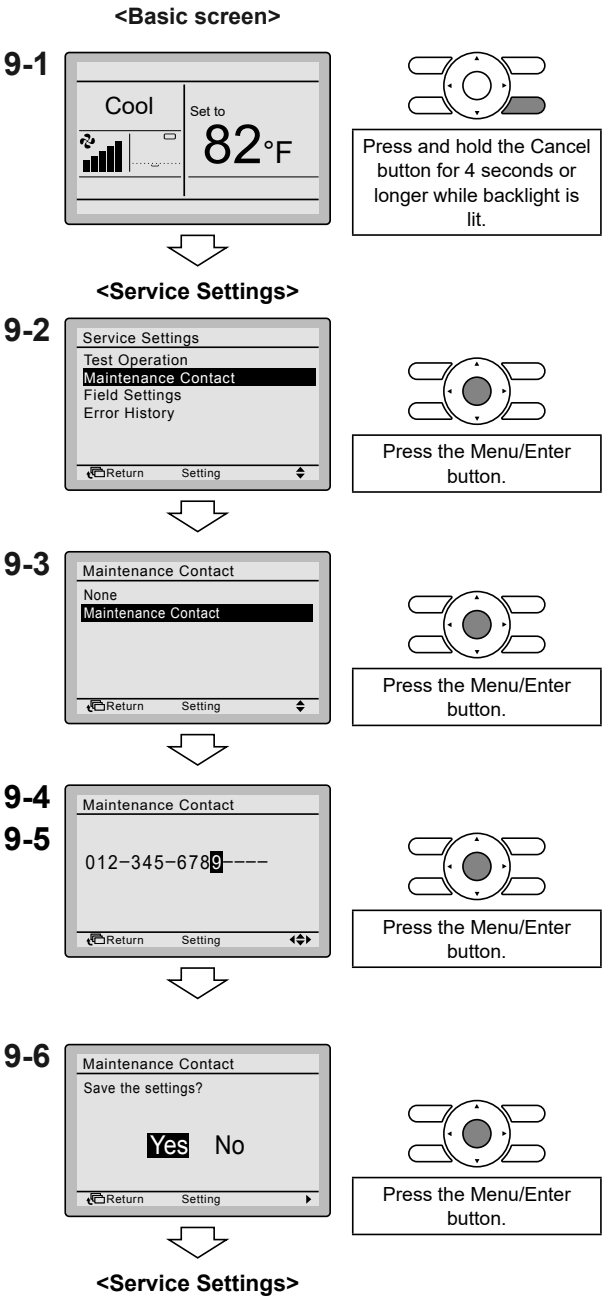


10. Confirmation of registered details

10-1 Press the Menu/Enter button in the Basic screen. The Main menu is displayed.

10-2 Select Maintenance Information and press the Menu/Enter button. The "Maintenance Information" screen is displayed.

10-3 Confirm that the contact information is entered correctly.

10-4 Press the Cancel button twice. The Basic screen returns.

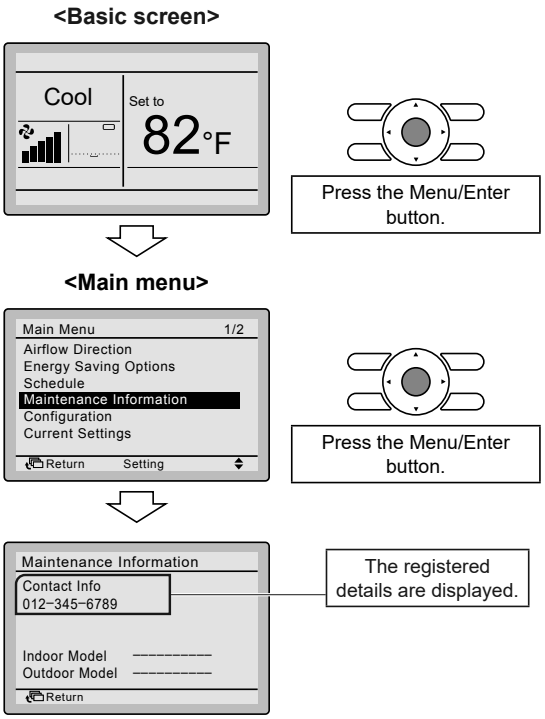

11. Clock & Calendar

11-1 Press the Menu/Enter button in the Basic screen. The Main menu is displayed.

11-2 Select Clock & Calendar and press the Menu/Enter button. The "Clock & Calendar" menu is displayed.

11-3 Select Date & Time and press the Menu/Enter button. The "Date & Time" screen is displayed.


11-4 Select the "Year", "Month", "Day" and time by using the ◀▶ (Left/Right) buttons and change the value by using the ▲▼ (Up/Down) buttons. When the buttons are pressed and held, the values change continuously.


11-5 Press the Menu/Enter button. The confirmation screen is displayed.

11-6 Select Yes and press the Menu/Enter button. The settings are confirmed and the Basic screen returns.

<Basic screen>

11-1

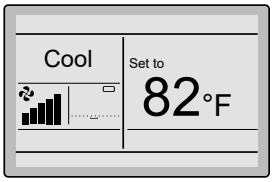





Press the Menu/Enter button.

<Main menu>


11-2

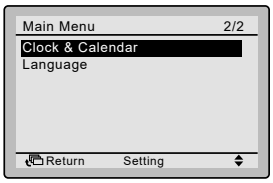




Press the Menu/Enter button.


11-3

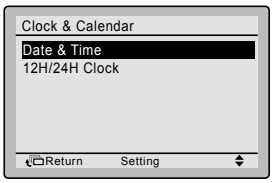




Press the Menu/Enter button.

11-4
11-5

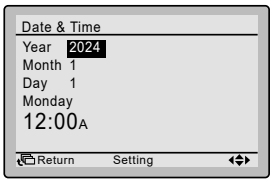





Press the Menu/Enter button.

NOTE

The day of the week is set automatically.

11-6

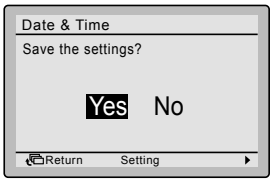



Press the Menu/Enter button.

<Basic screen>

NOTE


If a power outage lasts longer than 48 hours, the time is reset and needs to be set again.

12. Language

12-1 Press the Menu/Enter button in the Basic screen. The Main menu is displayed.

12-2 Select Language and press the Menu/Enter button. The "Language" screen is displayed.

12-3 Press the ▲▼ (Up/Down) buttons to select the preferred language (English, French or Spanish) and press the Menu/Enter button. The settings are confirmed and the Basic screen returns.

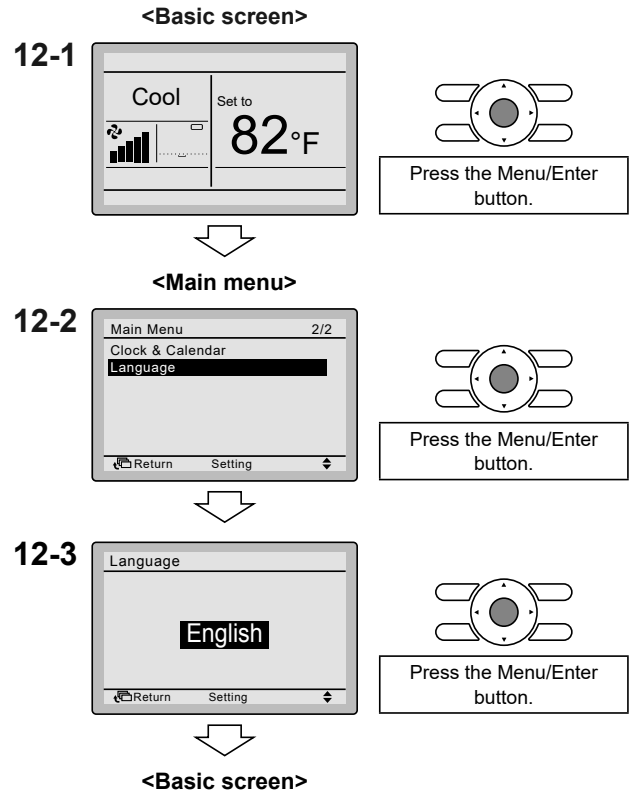

13. Prohibit Buttons

- Restriction of the number of operable buttons.

13-1 Press the Menu/Enter button in the Basic screen. The Main menu is displayed.

13-2 Lock Function can be made visible by pressing the Menu/Enter button for 4 seconds.


13-3 Select Lock Function and press the Menu/Enter button. The "Lock Function" menu is displayed.

13-4 Select Prohibit Buttons and press the Menu/Enter button. The "Prohibit Buttons" screen is displayed.

13-5 Select "Up/Dwn/L/R", "On/Off", "Mode" or "Fan Speed" by using the ◀▶ (Left/Right) buttons and "Lock/Unlock" by using the ▲▼ (Up/Down) buttons.

13-6 Press the Menu/Enter button. The confirmation screen is displayed.

13-7 Select Yes and press the Menu/Enter button. The settings are entered and the Basic screen returns.

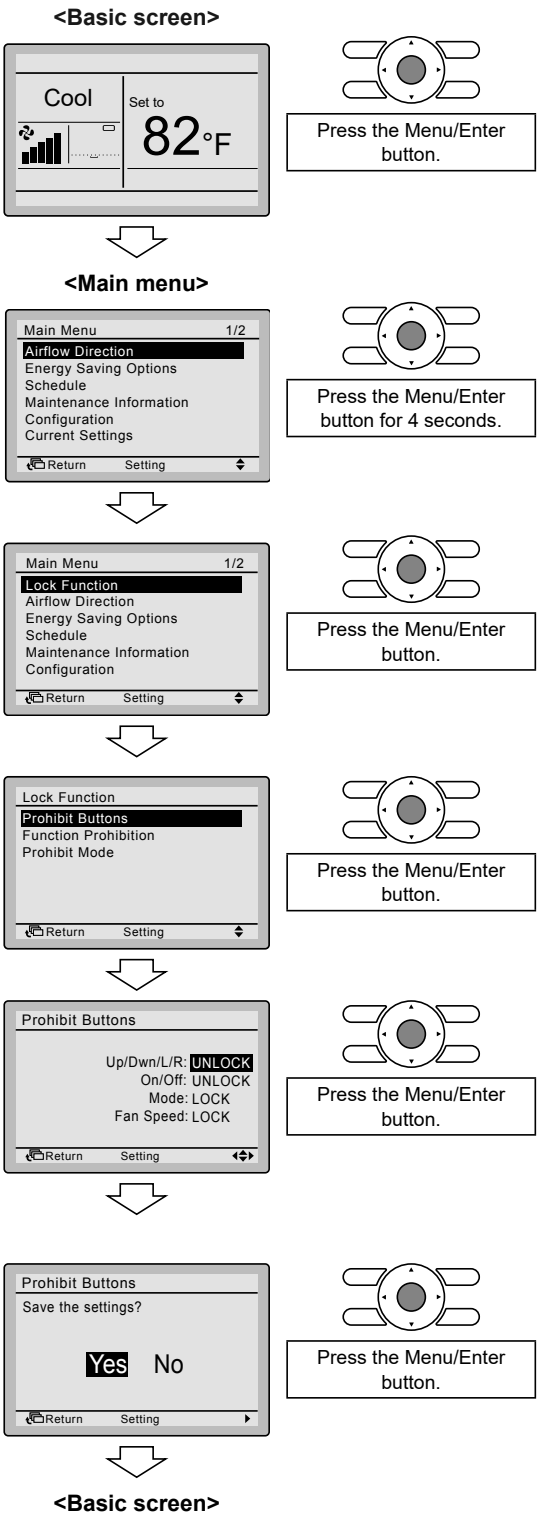

14. Function Prohibition

- Restriction of the number of operable functions.

14-1 Press the Menu/Enter button in the Basic screen. The Main menu is displayed.


14-2 Lock Function can be made visible by pressing the Menu/Enter button for 4 seconds.

14-3 Select Lock Function and press the Menu/Enter button. The "Lock Function" menu is displayed.

14-4 Select Function Prohibition and press the Menu/Enter button. The "Function Prohibition" screen is displayed.


14-5 Select the desired function by using the ◀▶ (Left/Right) buttons and "Lock/Unlock" by using the ▲▼ (Up/Down) buttons.


14-6 Press the Menu/Enter button. The confirmation screen is displayed.

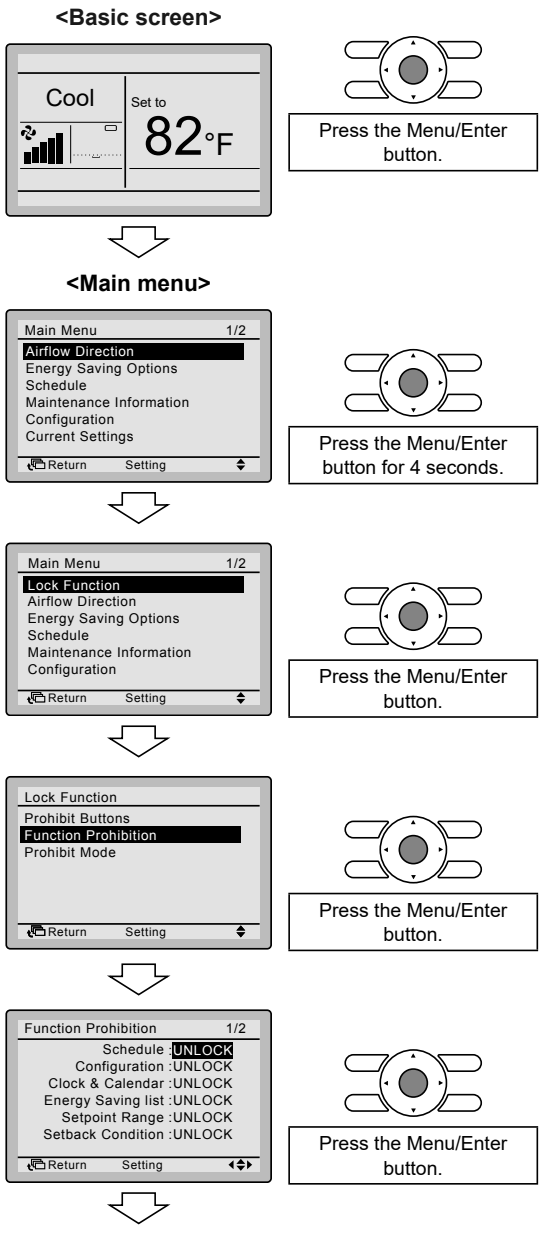

14-7 Select Yes and press the Menu/Enter button. The settings are entered and the Basic screen returns.

14-7

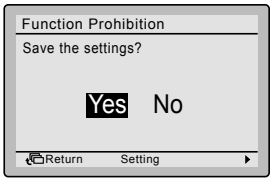



Press the Menu/Enter button.

<Basic screen>

NOTE

- When a function is prohibited, the icon will be displayed next to the function.


15. Prohibit Mode


- Restriction of the number of operable modes.

<Basic screen>

15-1 Press the Menu/Enter button in the Basic screen. The Main menu is displayed.

15-1

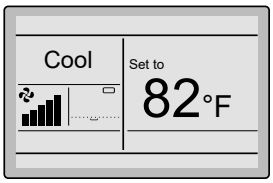





Press the Menu/Enter button.

<Main menu>

15-2 Lock Function can be made visible by pressing the Menu/Enter button for 4 seconds.

15-2

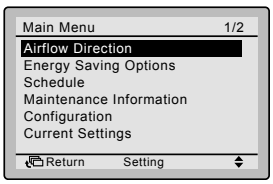





Press the Menu/Enter button for 4 seconds.

15-3 Select Lock Function and press the Menu/Enter button. The "Lock Function" menu is displayed.

15-3

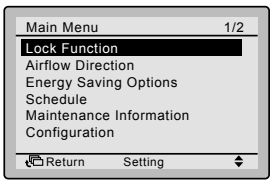




Press the Menu/Enter button.

15-4 Select Prohibit Mode and press the Menu/Enter button. The "Prohibit Mode" screen is displayed.

15-5 Select “Fan”, “Cool”, “Heat”, “Auto” or “Dry” using the ◀▶ (Left/Right) buttons and “Enable/Disable” the selected mode by using the ▲▼ (Up/ Down) buttons.

15-6 Press the Menu/Enter button. The confirmation screen is displayed.

15-7 Select Yes and press the Menu/Enter button. The settings are confirmed and the Basic screen returns.

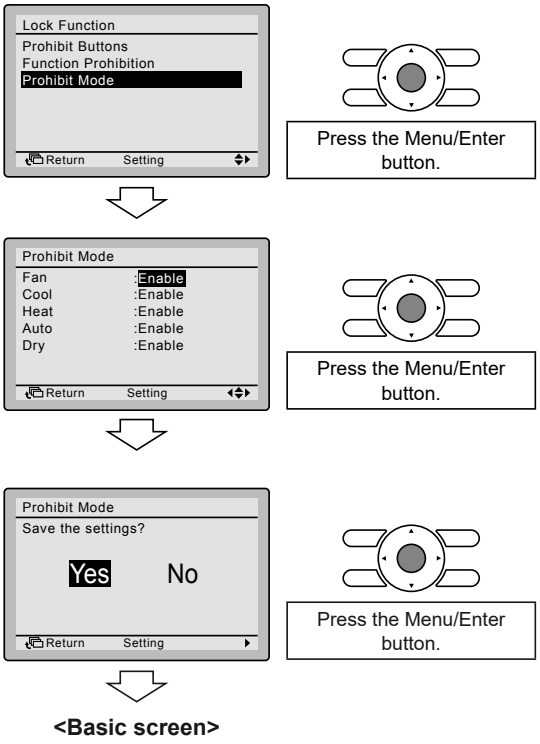

<Basic screen>

NOTE

- When the currently active mode is locked, this mode will still be active upon returning to the Basic screen. Only when the mode is changed, the disabled mode will not be available anymore. When all modes are locked, it is not possible to change to another mode other than the currently active mode.

2.2 <BRC073A6> Wired Remote Controller (Operation)

Safety Considerations

The original instructions are written in English. All other languages are translations of the original instructions.
This appliance is not intended to be used by persons, including children, with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they are supervised or have been given instructions on how to use the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

Please read these Safety Considerations carefully before installing the remote controller.

- This manual classifies the precautions into WARNING and CAUTION.
  They both contain important information regarding safety. Be sure to follow all the precautions below.

⚠ **WARNING**	Failure to follow these instructions properly may result in personal injury or loss of life.
⚠ **CAUTION**	Failure to observe these instructions properly may result in property damage or personal injury, which may be serious depending on the circumstances.

- The following pictograms are used in this manual.

	Never do.		Always follow the instructions given.
	Be sure to ground the unit.		Absolutely keep wet hands away.
	Absolutely keep water and moisture away.		

■ About Remote Controller

⚠ **WARNING**	
	• **Do not install the remote controller by yourself.** Improper installation may result in electric shocks or fire. Consult your Daikin dealer.
	• **Do not modify or repair the remote controller.** This may result in electric shocks or fire. Consult your Daikin dealer.
	• **Do not relocate or reinstall the remote controller by yourself.** Improper installation may result in electric shocks or fire. Consult your Daikin dealer.
	• **Do not use flammable materials (e.g., hair spray or insecticide) near the product.** Do not clean the product with organic solvents such as paint thinner. The use of organic solvents may cause crack damage to the product, electric shocks or fire.

Items to be Strictly Observed

⚠ CAUTION	
	• **Do not play with the unit or its remote controller.** Accidental operation by a child may result in impairment of bodily functions and harm health.
	• **Never disassemble the remote controller.** Touching the interior parts may result in electric shocks or fire. Consult your Daikin dealer or authorized contractor for internal inspections and adjustments.
	• **To avoid electric shocks, do not operate with wet hands.**
	• **Do not wash the remote controller.** Doing so may cause electric leakage and result in electric shocks or fire.
	• **Do not leave the remote controller wherever there is a risk of wetting.** If water gets into the remote controller there is a risk of electrical leakage and damage to electronic components.

■ Indoor Unit and Outdoor Unit

⚠ WARNING	
	• **Be aware that prolonged, direct exposure to cool or warm air from the air conditioner or to air that is too cold or too warm can be harmful to your physical condition and health.**
	• **Do not place objects, including rods, your fingers, etc. in the air inlet or outlet.** Injury may result due to contact with the air conditioner's high-speed fan blades.
	• **Contact professional personnel about attachment of accessories and be sure to use only accessories specified by the manufacturer.** If a defect results from your own workmanship, it may result in water leaks, electric shock or fire.
	• **Do not use the product in atmospheres contaminated with oil vapor, such as cooking oil or machine oil vapor.** Oil vapor may cause crack damage, electric shocks or fire.
	• **Do not use the product in places with excessive oily smoke, such as cooking rooms or in places with flammable gas, corrosive gas or metal dust.** Using the product in such places may cause fire or product failures.


WARNING	
	• **Beware of fire in case of refrigerant leakage.** If the air conditioner is not operating correctly, i.e. not generating cool or warm air, refrigerant leakage could be the cause. Consult your dealer for assistance. The refrigerant within the air conditioner is safe and normally does not leak. However, in the event of a leakage, contact with a naked burner, heater or cooker may result in generation of noxious gas. Do not longer use the air conditioner until a qualified service person confirms that the leakage has been repaired.
	• **In the case of using a load breaker provided with a fuse, make sure that the capacity of the fuse is correct.** Use of an ordinary conductive wire may cause malfunctions or fire.
	• **Do not use the power supply breaker to start or stop the air conditioner.** Otherwise, fire or water leakage may result. Furthermore, the fan will rotate abruptly if power failure compensation is enabled, which may result in injury.
	• **Be sure to ground the unit.** Do not ground the unit to a utility pipe, lightning conductor or telephone ground lead. Imperfect grounding may result in electric shocks or fire. A high surge current from lightning or other sources may cause damage to the air conditioner.
	• **When the air conditioner is malfunctioning (giving off a burning odor, etc). turn off the power and contact your local dealer.** Continued operation under such circumstances may result in a failure, electric shocks or fire hazards.
	• **Consult your local dealer regarding what to do in case of refrigerant leakage.** When the air conditioner is to be installed in a small room, it is necessary to take proper measures so that the amount of any leaked refrigerant does not exceed the concentration limit in the event of a leakage. Otherwise, this may lead to an accident due to oxygen depletion.
	• **Be sure to install a ground leakage breaker.** Failure to install a ground leakage breaker may result in electric shocks or fire.
	• **Consult the dealer if the air conditioner submerges owing to a natural disaster such as a flood or typhoon.** Do not operate the air conditioner in that case or otherwise a malfunction, electric shock or fire may result.
	• **Be sure to use a dedicated power supply for the air conditioner.** The use of any other power supply may cause heat generation, fire or product failures.

Items to be Strictly Observed

⚠ CAUTION	
	• **After prolonged use, check the unit stand and its mounts for damage.** If left in a damaged condition, the unit may fall and cause injury.
	• **Do not allow a child to mount on the outdoor unit or avoid placing any object on it.** Falling or tumbling may result in injury.
	• **Do not block air inlets nor outlets.** Impaired airflow may result in insufficient performance or trouble.
	• **To avoid injury, do not touch the air inlet or aluminium fins of the unit.**
	• **Do not remove the outdoor unit's fan guard.** The guard protects against the unit's high speed fan, which may cause injury.
	• **Do not place objects that are susceptible to moisture directly beneath the indoor or outdoor units.** Under certain conditions, condensation on the main unit or refrigerant pipes, air filter dirt or drain blockage may cause dripping, resulting in fouling or failure of the object concerned.
	• **Do not place water containers (flower vases, etc). on the unit, as this may result in electric shocks or fire.**
	• **Do not use the air conditioner for purposes other than those for which it is intended.** Do not use the air conditioner for cooling precision instruments, food, plants, animals or works of art as this may adversely affect the performance, quality and/or longevity of the object concerned.
	• **Do not place appliances that produce naked flames in places exposed to the airflow from the unit as this may impair combustion of the burner.**
	• **Do not place heaters directly below the unit as resulting heat can cause deformation.**
	• **Be sure that children, plants or animals are not exposed directly to airflow from the unit as adverse effects may ensue.**
	• **Do not put flammable containers, such as spray cans, within 1 m from the blow-off mouth.** The containers may explode because the warm air output of the indoor or outdoor unit will affect them.
	• **Do not install the air conditioner at any place where there is a danger of flammable gas leakage.** In the event of a gas leakage, build-up of gas near the air conditioner may result in fire hazards.

⚠ CAUTION	
	• **Do not sit or stand on any unstable base at the time of operating or maintaining the air conditioner.** The base may topple down and injury may occur.
	• **Do not touch the motor when replacing the filter.** The motor can be very hot which may result in burns.
	• **Do not wash the air conditioner with water as this may result in electric shocks or fire.**
	• **Perform ventilation from time to time.** Be careful when using the air conditioner with other heating equipment. Insufficient ventilation may result in oxygen deficiency.
	• **Always stop the operation of the air conditioner and turn OFF the power supply breaker when cleaning.** Failure to do so may result in an electric shock or injury.
	• **Do not wash the interior of the indoor and outdoor units by yourself. Always consult your Daikin dealer.** The use of an incorrect washing method or incorrect detergent may damage the resin parts of the indoor unit or cause water leakage. Moreover, malfunctions, smoke generation or ignition may result if the electric parts or the motor in the indoor unit come in contact with a detergent or water.
	• **Do not place objects in direct proximity of the outdoor unit and do not let leaves and other debris accumulate around the unit.** Leaves are a hotbed for small animals which can enter the unit. Once in the unit, such animals can cause malfunctions, smoke or fire when making contact with electrical parts.
	• **Fix the units securely.** If the units are not mounted securely, the units may fall or topple and result in personal injury.
	• **Arrange the drain to ensure complete drainage.** If proper drainage from the outdoor drain pipe does not occur during air conditioner operation, there could be a blockage due to dirt and debris build-up in the pipe. This may result in water leakage from the indoor unit. Under these circumstances, stop the air conditioner operation and consult your dealer for assistance.

Names and Functions

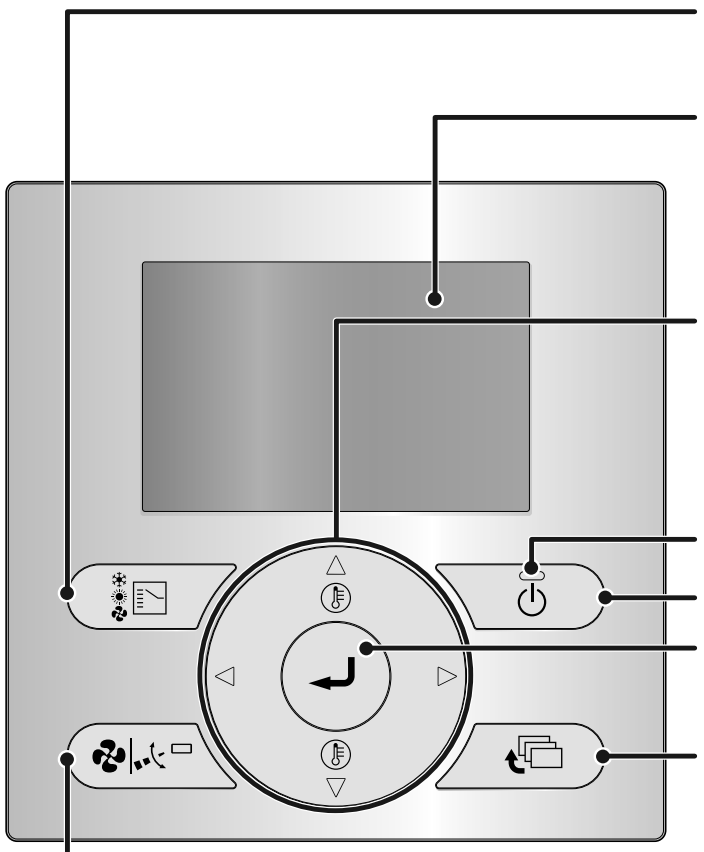

Functions other than the basic operation items (i.e., ON/OFF, operation mode selection, fan speed, up/down direction, and temperature setting) are set from the menu screen.

NOTE

- **Do not install the remote controller in places exposed to direct sunlight. Otherwise, the LCD may become discolored and nothing may be displayed.**
- **Do not pull or twist the remote controller cord. Otherwise, the remote controller may malfunction.**
- **Do not press the buttons on the remote controller with objects with sharp ends. Otherwise, the remote controller may be damaged or malfunction.**

1. Operation Mode Selector button

- Press this button to select the operation mode of your preference. (See "Cool/Heat/Fan/Dry/Auto Operation" on page 12)
- Available modes may vary with the connected model.

2. Fan Speed/Airflow Direction button

- Used to change the fan speed and airflow direction. (See "Cool/Heat/Fan/Dry/Auto Operation" on page 12)
- Available fan speeds and airflow directions may vary with the connected model.

3. Menu/Enter button

- This button is enabled by default. To disable, refer to "Enable/disable the Menu/Enter and Cancel button" on page 11.
- Used to display the Main Menu or enter the selected item (See "Main Menu Items Overview" on page 19).

4. Up button ▲

- Used to raise the set temperature.
- The next item on the upper side will be highlighted. (Keep pressing the button to cycle through the values or items).
- Used to change the selected item.

5. Down button ▼

- Used to lower the set temperature.
- The next item on the lower side will be highlighted. (Keep pressing the button to cycle through the values or items).
- Used to change the selected item.

6. Right button ▶

- Used to highlight the next items on the right-hand side.
- The display contents are changed to the next screen.

7. Left button ◀

- Used to highlight the next items on the left-hand side.
- The display contents are changed to the previous screen.

8. ON/OFF button

- Press to start or stop the air conditioner.

9. Operation lamp (Green)

- This lamp lights up during operation.
- This lamp is not lit when the unit operation is OFF.
- This lamp blinks if an error or mode conflict occurs.

10. Cancel button

- This button is enabled by default. To disable, refer to "Enable/disable the Menu/Enter and Cancel button" on page 11.
- Used to return to the previous screen.



11. LCD (with backlight)

- The backlight will be lit for approximately 30 seconds when one of the buttons is pressed.
- The actions linked to the buttons , except for the ON/OFF button, are not carried out when the backlight is not lit.

Liquid Crystal Display



- There are four display methods for the liquid crystal display (LCD) available. The Standard display, which is used by default, and the Detailed display. There is also the possibility to use only Icon or Icon and Text mode (see the Installation manual).
- To change the active display method, select the desired display method in the Display Method screen (See "Display" on page 34).
- The displayed contents on the screen may vary with the operation mode of the connected models. (E.g.: The following display will appear when the air conditioner is in heating operation).

Standard display

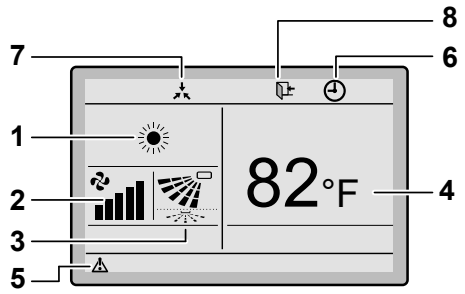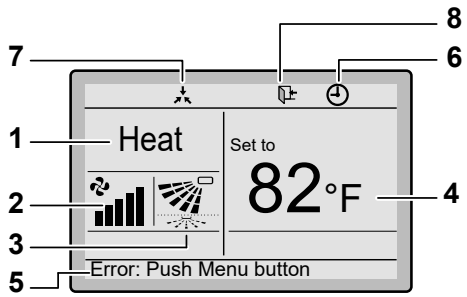With icons	With icons and text (default)
	


Detailed display

■ The clock and Detailed selection items appear on the Detailed display in addition to the items appearing on the Standard display.

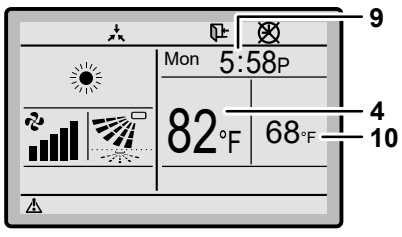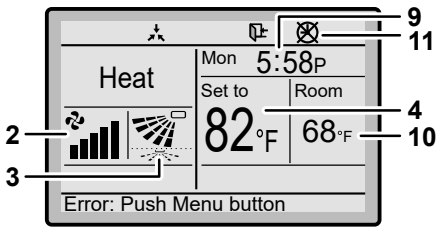With icons	With icons and text
	

1. Operation mode

- Indicates the current operation mode.

Operation Mode		
Cool	Heat	Auto (Heat)
		
Fan	Dry	Auto (Cool)
		

2. Fan speed

(See "Cool/Heat/Fan/Dry/Auto Operation" on page 12)

- Indicates the fan speed that is set for the air conditioner.
- The fan speed will not be displayed if the air conditioner does not have the fan speed control function.

3. Airflow direction

- Displayed only when the air conditioner is in operation.
- Indicates the airflow direction that is set for the air conditioner.
- The possible directions depend on the indoor unit.

4. Set/Setback temperature display

(See "Setback" on page 17)

- When the unit is turned ON, the temperature that is set for the air conditioner is displayed.
- When the unit is turned OFF and Setback is disabled, the temperature that is set for the air conditioner is displayed.
- When the unit is turned OFF and Setback is enabled, the temperature that is set for the setback function is displayed in smaller digits.

5. Error "⚠"

(See "Error Code Display" on page 42)

- Indicates a unit error.

6. Timer enabled "🕘"

(See "OFF Timer" on page 27 and "Schedule" on page 28)

- Indicates that the schedule timer or the OFF timer is enabled.

7. Under Centralised control "⛓"

- Indicates that the air conditioner is under the management of central control equipment (optional accessories) and the operation of the system through the remote controller is prohibited.

8. Setback "⏏"

(See "Setback" on page 17)

- The setback icon flashes when the unit is turned on under the setback control.

9. Clock (12/24 hours real time clock)

(See "Clock & Calendar" on page 38)

- Indicates that the clock is set.
- If the clock is not set, " -- : -- " will be displayed.

10. Detailed selection

(See "Display Mode" on page 34)

- Displayed when the detailed display mode is selected.
- No detailed items are selected by default.

11. Timer problem "⊠"

- Indicates that the clock needs to be set again.
- The schedule timer function will not work unless the clock is set again.

Basic Operation Method

Remote Controller Functions

Operation procedure

Operate the buttons according to the procedure.

Button display


Displays the positions of the buttons to be operated.

Operation Method


Screen display

Screens that will be displayed on the remote controller.


1

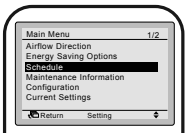

- Display the Main Menu. (See "Manipulating the Main Menu" on page 21).
- Press the ▼▲ (Up/Down) buttons to select Schedule and press the Menu/Enter button.

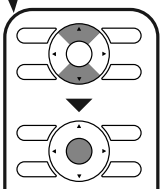


2

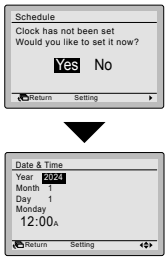

- Press the ◀▶ (Left/Right) buttons to select Yes and press the Menu/Enter button.
- The Date & Time screen will appear.
- Set the current year, month, day, and time. (See "Clock & Calendar" on page 38).

Note


- Before setting the schedule, the clock must be set.
- If the clock has not been set, a screen like the one on the left will appear.

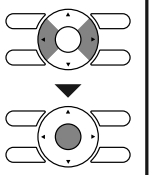

Enable/disable the Menu/Enter and Cancel button


Operation Method By default, the Menu/Enter and Cancel button are enabled.

1

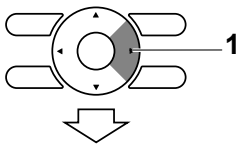

- To enable/disable the Menu/Enter and Cancel button, keep the ▶ (Right) button pressed in the Basic Screen.

2




- Press the 3 keys simultaneously while keeping the ▶ (Right) button pressed.


Cool/Heat/Fan/Dry/Auto Operation

Operation Method

1

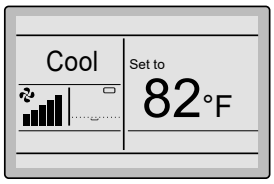


- Press the Operation Mode Selector button several times until the desired mode (Cooling, Heating, Fan Only, Dry or Auto) is selected.




Note
- Unavailable operation modes are not displayed.
- Only Cooling, Dry or Fan Only mode can be selected if the air conditioner is a cooling-only model.


2

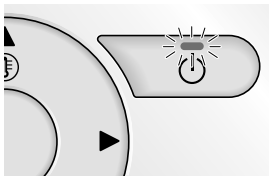


- Press the ON/OFF button.
  The Operation lamp (green) will be lit and the air conditioner will start operating.



3

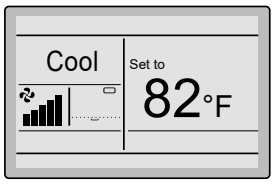


- The set temperature will increase by 1°F when the ▲ (Up) button is pressed and decrease by 1°F when the ▼ (Down) button is pressed.





Note
Temperature settings are not possible while in Dry or Fan Only mode.

4

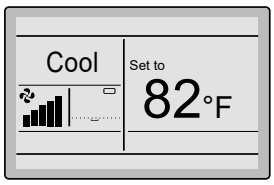


- To change the fan speed or airflow direction, press the Fan Speed/Airflow Direction button.




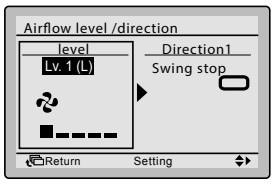

- To select air volume or airflow direction setting, press the ◀ ▶ buttons.
- Press the ▲▼ (Up/Down) buttons to select the desired level or position.

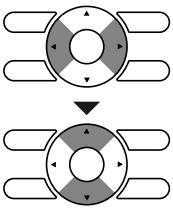


Basic Operation Method

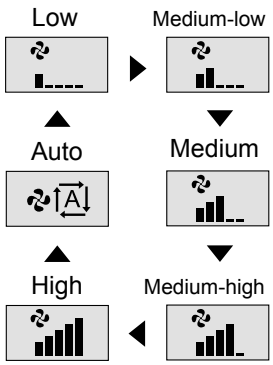


Note

- The air conditioner may be in automatic fan speed control for mechanical protection purposes.
- The air conditioner may be in automatic fan speed control according to the room temperature.
- The fan may stop operating, which is not a failure.
- It may take time until fan speed changes are actually carried out.
- In Auto fan speed, the fan speed is adjusted automatically according to the setpoint and indoor temperature.

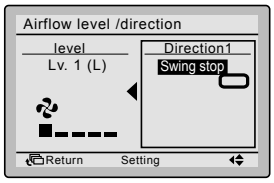

- With airflow direction selected, select the desired airflow direction from Swing or Swing stop using the ▲▼ (Up/Down) buttons.

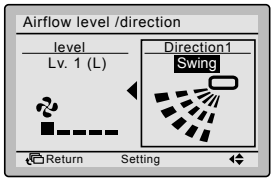

Airflow direction setting (up/down)

Note

- The airflow directions appear on the screen as follows:



Up/down direction




Left/right direction

- Selecting Swing will cause the airflow direction blades to swing back and forth.
- When you select Swing stop, the airflow direction blades stay in the position of when you press the Menu/Enter button.


Note

- To change the left/right airflow direction, refer to "Change the Airflow direction" on page 22.

5

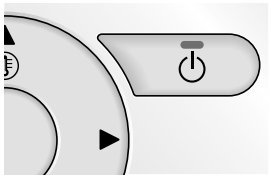

- When the ON/OFF button is pressed again, the air conditioner will stop operating and the Operation lamp will turn OFF.



Note

- When the system is stopped while in heating operation, the fan will continue to operate for approximately 1 minute in order to eliminate the residual heat in the indoor unit.

Characteristics of Cooling Operation

- When the outdoor air temperature is high, it takes some time until the room temperature reaches the set temperature.

Characteristics of Heating Operation

Starting operation

- Heating operation generally requires a longer time to attain the set temperature compared with cooling operation.
  It is recommended to start operating the air conditioner in advance by using the timer.

Perform the following operation in order to prevent the degradation of the heating capability or cold drafts.

Defrost operation

- The air conditioner will automatically go into defrost operation to prevent frost accumulation at the outdoor unit which results in loss of the heating capacity.
- The air conditioner will return to normal operation after approximately 4 to 12 minutes.
- During defrost mode the temperature near the indoor room temp is displayed. This may be affected by the location of the unit.

Outdoor temperature and heating capability

- The heating capacity of the air conditioner will drop when the outdoor temperature decreases.
  If the heating effect is insufficient, it is recommended to use another heating appliance in combination with the air conditioner. (When a combustion appliance is used, ventilate the room regularly).
  Do not use the heating appliance in places where the heating appliance is exposed to the airflow of the air conditioner.
- The air conditioner is a hot air circulation type. Therefore, it takes some time to warm up the room after the air conditioner starts operating.
  The indoor fan will automatically operate until the indoor temperature of the system rises to a certain level.
- If hot air stays around the ceiling and your feet feel cold, a circulator is recommended.
  For details, consult your Daikin dealer.


Program Dry Operation

Preparation


- The dry mode may not be selected if the remote controller has no eligibility to select cooling/heating mode.

Operation Method

1

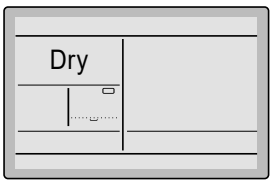


- Press the Operation Mode Selector button several times until Dry mode is selected.




Note
Dry mode may not be available depending on the type of indoor unit.

2

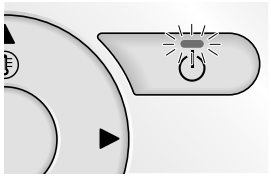

- Press the ON/OFF button.
  The Operation lamp will be lit and the air conditioner will start operating.




Note
The air conditioner is in automatic temperature and fan speed control. Therefore, the temperature or fan speed cannot be changed while the air conditioner is in operation.


3

- To set the airflow direction, see "Airflow Direction" on page 22.

4

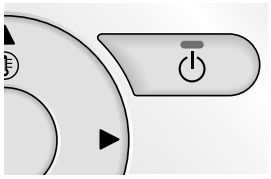

- When the ON/OFF button is pressed again, the air conditioner will stop operating and the Operation lamp will turn OFF.




Note
To prevent water leakage or system failure, do not turn OFF the power soon after the air conditioner stops operating. Be sure to wait at least 5 minutes so that the drain pump finishes discharging the residual water from the indoor unit.

Basic Operation Method

Characteristics of Dry Operation


In Dry operation, the air humidity will be lowered by intermittently turning the air conditioner ON in cooling and OFF again to minimize the temperature decrease.

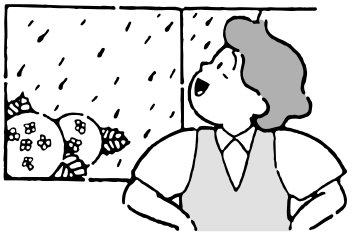

Note
- The temperature and fan speed are controlled automatically and cannot be controlled by the remote controller.
- Dry operation will not function if the room temperature is too low.

Setback

The Setback function will maintain the room temperature in a specific range when the remote controller is turned OFF. This is done by temporarily starting the air conditioner that was previously turned OFF by the user, the schedule function or the OFF timer.

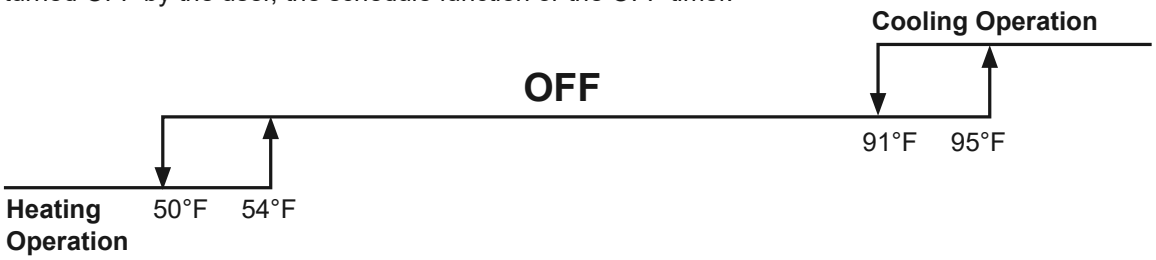

For example:

[Setback setpoint temperature: cool 95°F, heat 50°F]


[Recovery differential: cool -4°F, heat +4°F]

- If the room temperature drops below 50°F, heating is started automatically. If after half an hour the temperature increases to 54°F or above, the controller returns to its original state.
- If the room temperature goes above 95°F, cooling is started automatically. If after half an hour the temperature drops to 91°F or below, the controller returns to its original state.

Note
- This function is disabled by default. This function can only be enabled/disabled in the Energy Saving List (See "Energy Saving Options" on page 23).
- The differential can be adjusted in the Setback Condition menu (See "Setback Condition" on page 25).
- The setback temperature can be set while the unit is turned off on the Basic Screen or set in the schedule.
- Setback will turn the unit ON for at least 30 minutes unless the setback temperature setpoint is changed or the unit is turned ON with the ON/OFF button.
- When setback turns the air conditioner ON while in Auto mode, the remote controller switches to Cooling or Heating only, depending on what is appropriate, and only the respective setback temperature setpoint is shown.
- The temperature is measured inside the air conditioner unit (when the unit is switched OFF). As there is no actual air flow, the measured temperature inside the air conditioner unit can deviate (up to 6°F) from the actual room temperature.

Operation Method Setback should not be enabled when a centralised controller is connected via the KRP928 Interface adapter for Room Air Conditioner.

1

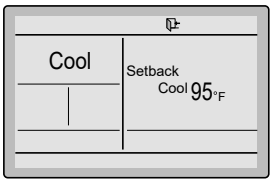

The setback icon "" flashes when the unit is turned ON under the setback control.


The fan speed cannot be changed when setback is active and, as a result, the fan speed is not visible.

The airflow direction can only be changed through the menu when setback is active.


Key Lock

Operation Method Disable the use of all buttons.


1

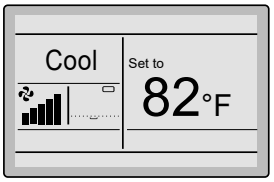

- Press the Menu/Enter button for at least 4 seconds. (During backlight lit)




2

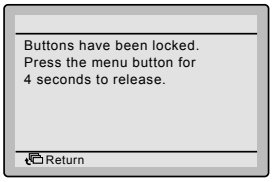

- All buttons are disabled when the keys are locked.
- When one of the buttons is pressed, the message on the left is displayed.

3

- To cancel the key lock, continue pressing the Menu/Enter button for at least 4 seconds. (During backlight lit)



Quick Reference of Main Menu Items

■Main Menu Items Overview

Note
- The available items may vary with the connected model.
- Only the available items will appear in the menu.

Setting and display items		Description	Reference page
Airflow Direction		Change the airflow direction. • The airflow direction blades can be automatically operated up and down and left and right. • There are swing or swing stop directions. • This function is not available on all models.	22
Energy Saving Options(1)	**Energy Saving List**	**Enable** or **disable** the "Energy Saving Options".	23
	Setpoint Range Setting	The setpoint temperature range can be restricted for the Cooling, Heating and Auto Mode.	24
	Setback Condition	Set the setback differential temperature after which the unit will turn back OFF.	25
	Setpoint Auto Reset	Change the temperature setpoint to a preset temperature setpoint after running for a set period of time, even if the temperature setpoint has been changed. • Possible to set from 30 to 120 minutes in 30 minute increments.	26
	Off Timer	The system is turned off automatically after the selected time each time the system is activated. • Possible to set in 10 minute increments from 30 to 180 minutes.	27
Schedule(2)	**Enable/Disable**	**Enable or disable** schedule function.	28
	Select Schedule	Select the active schedule number (schedule nr 1, 2 or 3).	29
	Holidays	Select the days of the week for which the schedule will be disabled. This function is used for when the schedule doesn't need to be active, e.g. like when you are on holiday.	30
	Schedule Settings	Select when the operation modes start and/or stop for each day of the week. Up to 5 actions can be set for each day.	31

1) Setback, Setpoint Range, Setback Condition and Setpoint Auto Reset should not be used when a centralised controller is connected via the KRP928 Interface adapter for Room Air Conditioner.
2) The schedule can be restricted when a centralised controller is connected via the KRP928 Interface adapter for Room Air Conditioner.

Setting and display items		Description	Reference page
Maintenance Information		Display the service contact.	33
Configuration	**Display**	• Display: Switch between Standard or Detailed display. • Detailed display settings: Select if room temperature (near the indoor unit), outdoor temperature, or nothing is displayed.	34
	Celsius / Fahrenheit	Choose the temperature values from Celsius or Fahrenheit.	36
	Contrast Adjustment	Adjust the LCD contrast.	36
Current Settings		Display a list of the current settings of the available items.	37
Clock & Calendar	**Date & Time**	Configure the date and time settings. • The default time display is 12H. • The clock will maintain accurate within ±30 seconds per month. • If there is a power failure for a period not exceeding 48 hours, the clock will continue working with the built-in backup power supply.	38
	12H/24H Clock	The time can be displayed in either a 12 hour or 24 hour time format.	39
	Daylight Saving Time	Enable or Disable the Daylight Saving Time.	39
Language		Choose the language from English, French or Spanish.	40


Menu Manipulation

Main Menu

■Manipulating the Main Menu


Operation Method

1

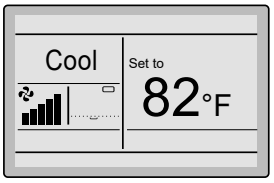


Basic Screen

- Press the Menu/Enter button.



2

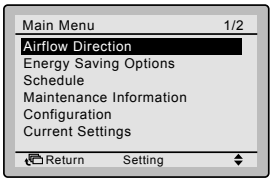


Main Menu

- The Main Menu will appear.

⇦ Instructions for operating the buttons will appear.


3

- Selecting items from the Main Menu.
  1. Press the ▼▲ (Up/Down) buttons to select the desired item.
  2. Press the Menu/Enter button to display the selected settings screen.

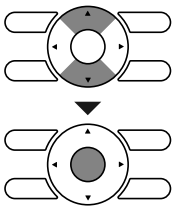

4

- To go back to the Basic Screen from the Main Menu, press the Cancel button.



⚠ Caution


- When the Main Menu is visible and a button is not pressed for 5 minutes, the screen will automatically go back to the Basic Screen.

Airflow Direction


■Change the Airflow direction

Operation Method


1

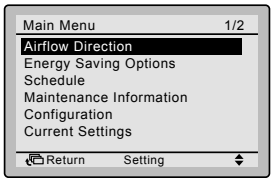


- Display the Main Menu (See "Manipulating the Main Menu" on page 21)
- Press the ▲▼ (Up/Down) buttons to select Airflow Direction and press the Menu/Enter button.

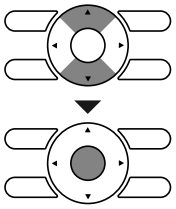


2

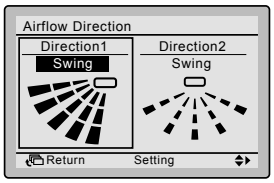


- Select the desired airflow direction from Swing or Swing stop using the ▲▼ (Up/Down) buttons.
- Select Up/down direction or Left/right direction using the ◀▶ (Left/Right) buttons.
- Press the Menu/Enter button to confirm the settings and to return to the Basic Screen.

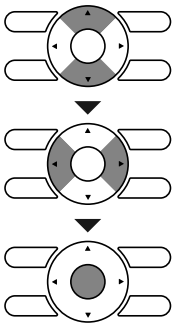

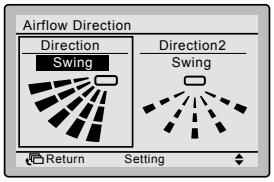

Airflow direction setting (up/down)

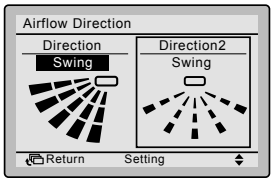

Airflow direction setting (left/right)

Remark: Only visible if available.

Note

- The airflow directions appear on the screen as follows:



Up/down direction



Left/right direction

- Selecting Swing will cause the airflow direction blades to swing back and forth. When Swing is selected, all airflow directions will be visible at the same time.
- When you select Swing stop, the airflow direction blades stay in the position that you press the Menu/Enter button.

Menu Manipulation


Energy Saving Options

■Energy Saving List


Operation Method

Some functions should not be enabled when a centralised controller is connected via the KRP928 Interface adapter for Room Air Conditioner.


1

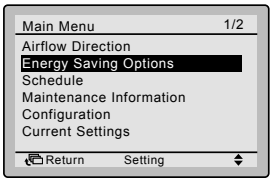


- Display the Main Menu. (See "Manipulating the Main Menu" on page 21).
- Press the ▼▲ (Up/Down) buttons to select Energy Saving Options and press the Menu/Enter button.

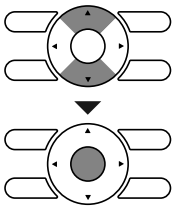


2

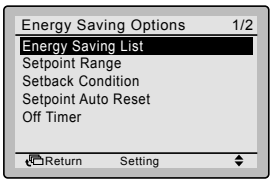


- Press the ▼▲ (Up/Down) buttons to select Energy Saving List and press the Menu/Enter button.

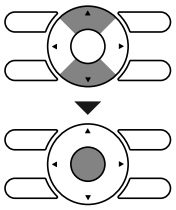


3

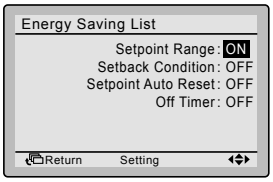


- Press the ▼▲ (Up/Down) buttons to change the setting to ON or OFF.
- Move the cursor using the ◀▶ (Left/Right) buttons.
- Press the Menu/Enter button when all changes are made. The confirmation screen will appear.

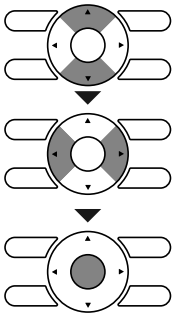

4

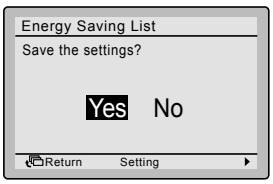

- Press the ◀▶ (Left/Right) buttons to select Yes.
- Press the Menu/Enter button to confirm the settings and to return to the Basic Screen.

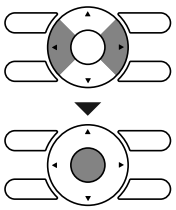


■Setpoint Range Setting


Operation Method

This function should not be used when a centralised controller is connected via the KRP928 Interface adapter for Room Air Conditioner.


1

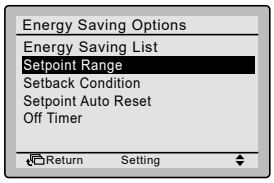


- Display the Energy Saving Options (See "Energy Saving List" on page 23).
- Press the ▼▲ (Up/Down) buttons to select Setpoint Range and press the Menu/Enter button.

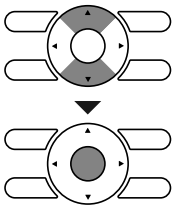

2

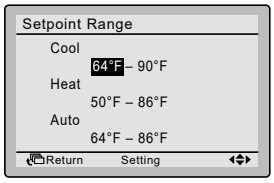


- Press the ▼▲ (Up/Down) buttons to change the cooling or heating temperature setpoint range.
- Move the cursor using the ◀▶ (Left/Right) buttons.
- Press the Menu/Enter button when all changes are made. The confirmation screen will appear.

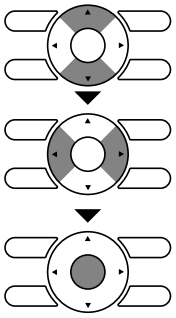


Note

- The default setpoint range restriction is [64°F→90°F] for cooling, [50°F→86°F] for heating, and [64°F→86°F] for auto. This setpoint range is the general setpoint range and is as a result always active regardless of whether Setpoint Range is enabled or disabled.
- The default setpoint range for setback operation is [92°F→99°F] for cooling and [50°F→59°F] for heating. This setpoint range cannot be changed.

3

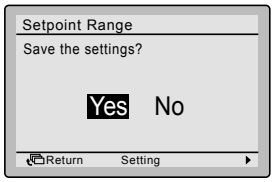

- Press the ◀▶ (Left/Right) buttons to select Yes.
- Press the Menu/Enter button to confirm the settings and to return to the Basic Screen.

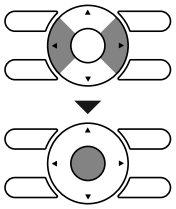


Menu Manipulation

■Setback Condition


Operation Method

This function should not be used when a centralised controller is connected via the KRP928 Interface adapter for Room Air Conditioner.


1

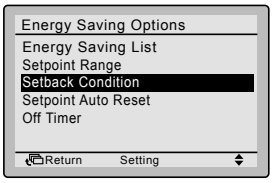


- Display the Energy Saving Options (See "Energy Saving List" on page 23).
- Press the ▼▲ (Up/Down) buttons to select Setback Condition and press the Menu/Enter button.

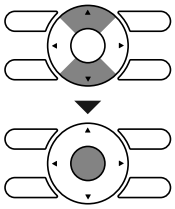


2

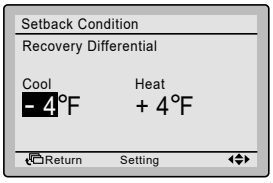


- Press the ▼▲ (Up/Down) buttons to change the differential for setback operation.
- Move the cursor using the ◀▶ (Left/Right) buttons.
- Press the Menu/Enter button when all changes are made. The confirmation screen will appear.

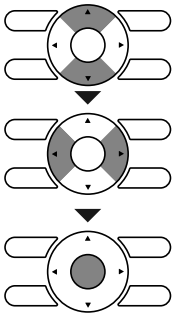

3

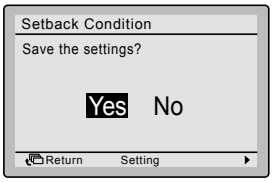

- Press the ◀▶ (Left/Right) buttons to select Yes.
- Press the Menu/Enter button to confirm the settings and to return to the Basic Screen.

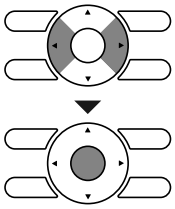


■Setpoint Auto Reset


Operation Method

This function should not be used when a centralised controller is connected via the KRP928 Interface adapter for Room Air Conditioner.


1

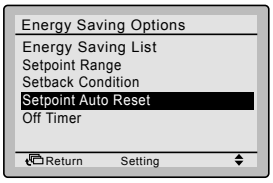


- Display the Energy Saving Options (See "Energy Saving List" on page 23).
- Press the ▼▲ (Up/Down) buttons to select **Setpoint Auto Reset** and press the Menu/Enter button.

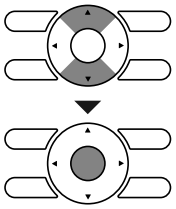


2

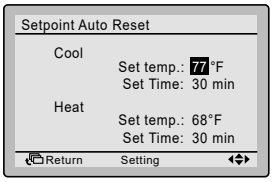


- Press the ▼▲ (Up/Down) buttons to set the preset temperature and timing for the auto reset of the setpoint.
- Move the cursor using the ◀▶ (Left/Right) buttons.
- Press the Menu/Enter button when all the changes are made. The confirmation screen will appear.

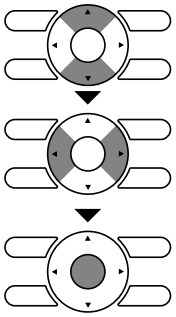

3

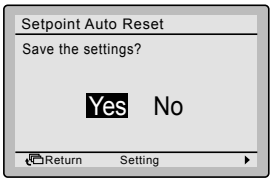

- Press the ◀▶ (Left/Right) buttons to select **Yes**.
- Press the Menu/Enter button to confirm the settings and to return to the Basic Screen.

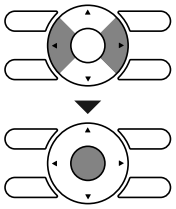


Menu Manipulation


■OFF Timer

Operation Method


1

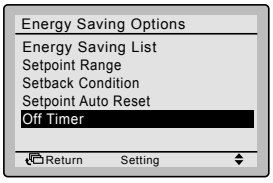


- Display the Energy Saving Options (See "Energy Saving List" on page 23).
- Press the ▼▲ (Up/Down) buttons to select **Off Timer** and press the Menu/Enter button.

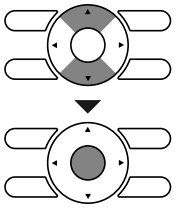


2

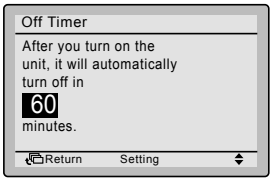


- Use the ▼▲ (Up/Down) buttons to set the time after which the unit automatically turns off again. Selections can be made in increments of 10 minutes from 30 to 180 minutes. Holding down the button causes the number to change continuously. The settings confirmation screen will appear when the Menu/Enter button is pressed.

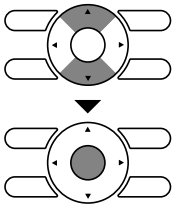

3

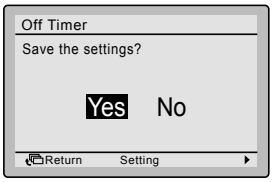

- Press the ◀▶ (Left/Right) button to select **Yes**.
- Press the Menu/Enter button to confirm the settings and to return to the Basic Screen.

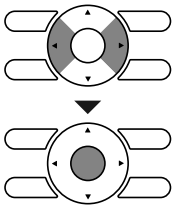


Schedule

■Enable/Disable


Operation Method

The schedule can be restricted when a centralised controller is connected via the KRP928 Interface adapter for Room Air Conditioner.


1

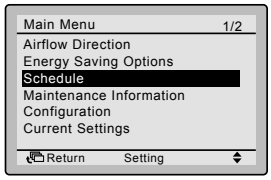


- Display the Main Menu. (See "Manipulating the Main Menu" on page 21).
- Press the ▼▲ (Up/Down) buttons to select Schedule and press the Menu/Enter button.

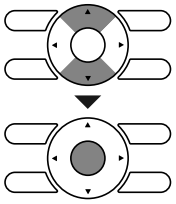


2

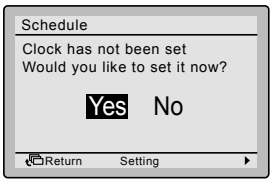


Note
- Before setting the schedule, the clock must be set.
- If the clock has not been set, a screen like the one on the left will appear.

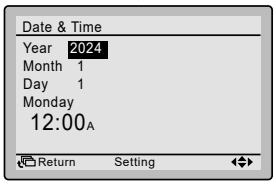


- Press the ◀▶ (Left/Right) buttons to select Yes and press the Menu/Enter button.
- The Date & Time screen will appear.
- Set the current year, month, day and time. (See "Clock & Calendar" on page 38).

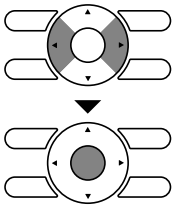


3

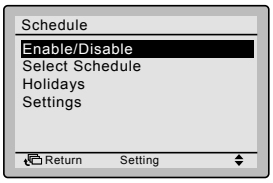


- Press the ▼▲ (Up/Down) buttons to select Enable/Disable and press the Menu/Enter button.

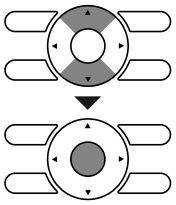

4

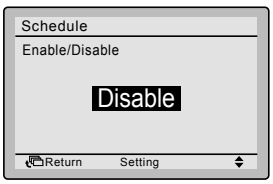


- Press the ▼▲ (Up/Down) buttons to select Enable or Disable.
- The confirmation screen will appear when the Menu/Enter button is pressed.

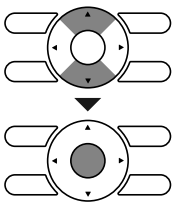


Note
The Schedule is enabled. To modify the Selected schedule number see "Select Schedule" on page 29.

Menu Manipulation

5

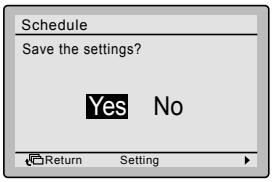


- Press the ◀▶ (Left/Right) buttons to select **Yes**.
- Press the Menu/Enter button to confirm the settings and to return to the Basic Screen.




■Select Schedule

Operation Method It is possible to program up to three different schedules.


1

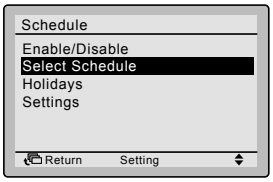


- Display the Schedule menu. (See "Enable/Disable" on page 28).
- Press the ▼▲ (Up/Down) buttons to select **Select Schedule** and press the Menu/Enter button.

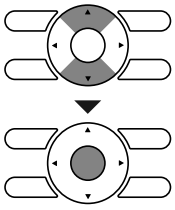


2

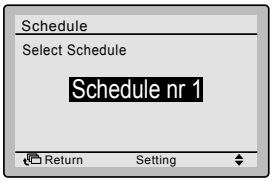


- Press the ▼▲ (Up/Down) buttons to select **Schedule nr 1**, **Schedule nr 2** or **Schedule nr 3**.
- The confirmation screen will appear when the Menu/Enter button is pressed.

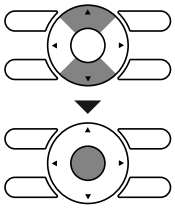

3

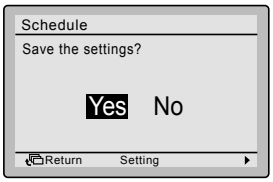


- Press the ◀▶ (Left/Right) buttons to select **Yes**.
- Press the Menu/Enter button to confirm the settings and to return to the Basic Screen.

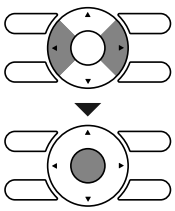


■Holidays

Operation Method The schedule timer will be disabled for days that have been set as a holiday.


1

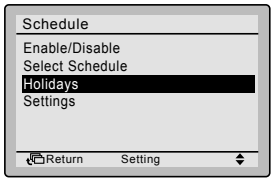


- Display the Schedule menu. (See "Enable/Disable" on page 28).
- Press the ▼▲ (Up/Down) buttons to select **Holidays** and press the Menu/Enter button.

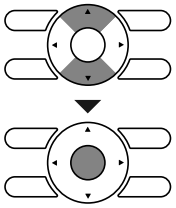

2

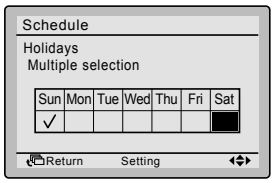


- Press the ◀▶ (Left/Right) buttons to select the desired day.
- Press the ▼▲ (Up/Down) buttons to display "✓" to set this day as a holiday.

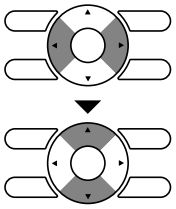


Note
- Multiple days can be selected as holidays.
- To re-enable the schedule timer for the day selected as a holiday, the holiday setting must be released.


3

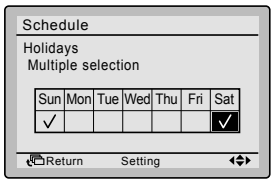


- Press the Menu/Enter button when all changes are made. The settings confirmation screen will appear.




4

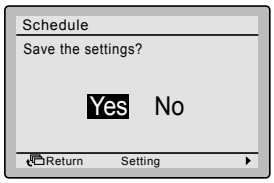

- Press the ◀▶ (Left/Right) button to select **Yes**.
- Press the Menu/Enter button to confirm the settings and to return to the Basic Screen.

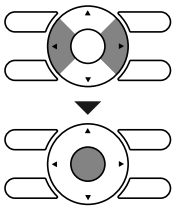

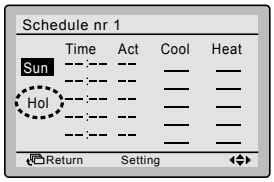


Note
"Hol" will be displayed on the schedule settings screen for days that have been set as a holiday.

Menu Manipulation


■Schedule Settings

Operation Method After saving a schedule, the schedule is automatically enabled.

1

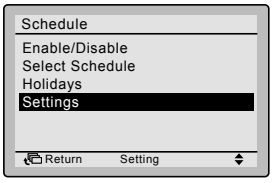


- Display the Schedule menu. (See "Enable/Disable" on page 28).
- Press the ▼▲ (Up/Down) buttons to select Settings and press the Menu/Enter button.

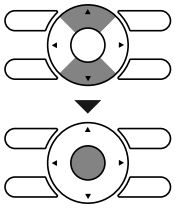


Note
The Schedule Settings of the selected schedule can be modified. To modify the selected schedule see "Select Schedule" on page 29.


2

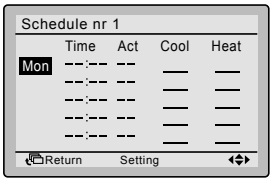


- Press the ▼▲ (Up/Down) buttons to select the day to be set.




3

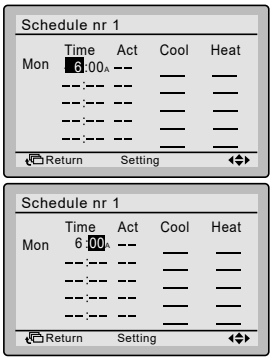


- Set the time for the selected day.
- Press the ◀▶ (Left/Right) buttons to move the highlighted item and press the ▼▲ (Up/Down) buttons to input the desired operation start time. Each press of the ▼▲ (Up/Down) buttons moves the numbers by 1 hour or 1 minute.

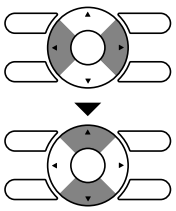

4

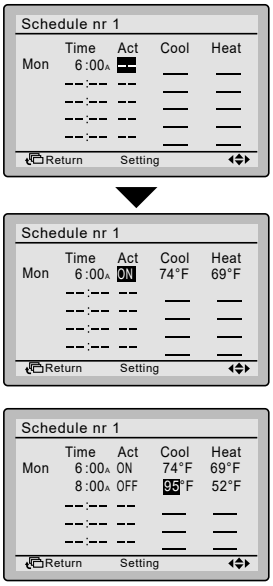

- Press the ◀▶ (Left/Right) buttons to move the highlighted item and press the ▼▲ (Up/Down) buttons to configure ON/OFF/-- settings.

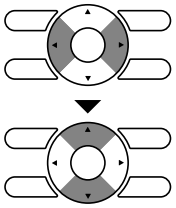


"Act"-column:

ON : The temperature setpoints can be configured.

OFF : The setback temperature setpoints can be configured.

– – : The temperature and setback temperature setpoints will be disabled.

- Press the ◀▶ (Left/Right) buttons to move the highlighted item and press the ▼▲ (Up/Down) buttons to input the cooling and heating temperature setpoints for ON or OFF (Setback) operation.

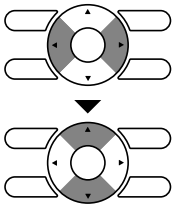


"Cool" and "Heat" column:


"__": Indicates that the temperature and setback temperature setpoint for this time period is not specified. The last active setpoint will be utilized.

"– –": Indicates that the setback function is disabled for this time period.

5

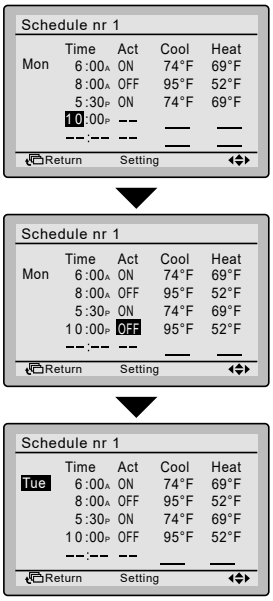


Note
A maximum of 5 actions per day can be set.

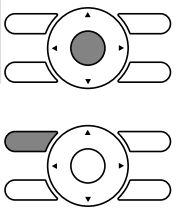


- Press the Menu/Enter button when all changes are made. The confirmation screen will appear.

Note
To copy the settings from the previous day, press the Operation Mode Selector button.
Example: To copy the contents of Monday to Tuesday, select Tuesday and press the Operation Mode Selector button.

6

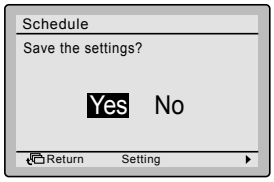

- Press the ◀▶ (Left/Right) buttons to select Yes.
- Press the Menu/Enter button to confirm the settings and to return to the Basic Screen.

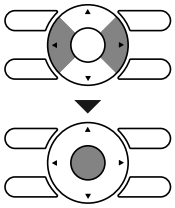


Maintenance Information


■Display the Maintenance Information

Operation Method


1

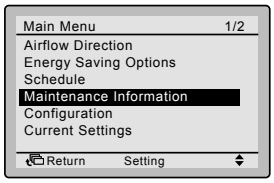


- Display the Main Menu. (See "Manipulating the Main Menu" on page 21).
- Press the ▼▲ (Up/Down) buttons to select Maintenance Information and press the Menu/Enter button.

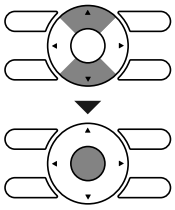

2

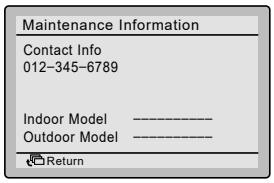


- The phone number for the contact address will appear at the top of the screen.
  (If you have not yet registered your product, it will not appear).
- The model information of the indoor and outdoor units of your product will always show ----------.
- Press the Cancel button to return to the previous screen.



Note

- The error code may also appear.
  If the operation lamp is not blinking, the unit is working properly.
- The error code record will disappear if you press the ON/OFF button for more than 4 seconds.




Configuration

■Display


Display Mode

Operation Method


1

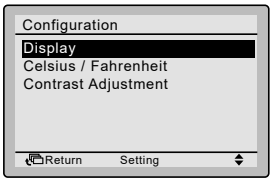


- Display the Configuration menu.
- Press the ▼▲ (Up/Down) buttons to select Display and press the Menu/Enter button.

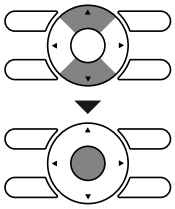


2

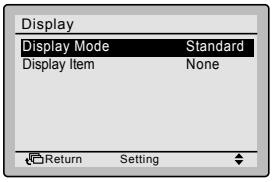


- Press the ▼▲ (Up/Down) buttons to select Display Mode and press the Menu/Enter button.

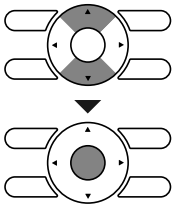

3

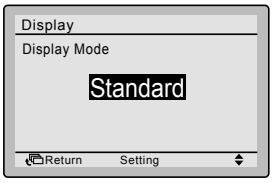

- Press the ▼▲ (Up/Down) buttons to select Standard or Detailed.
- Press the Menu/Enter button to confirm the settings and to return to the Basic Screen.

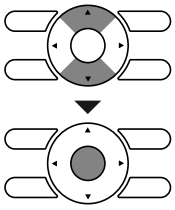


Note
To select which item is displayed in the detailed display selection area, refer to "Detailed Item" on page 35.

Menu Manipulation


Detailed Item

Operation Method


1

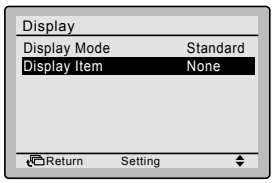


- Display the Display menu. (See "Display Mode" on page 34).
- Press the ▼▲ (Up/Down) buttons to select **Display Item** and press the Menu/Enter button.

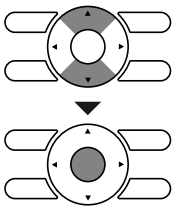

2

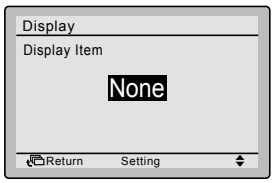

- Press the ▼▲ (Up/Down) buttons to display the following.



None ◂▸* **Outside Air Temp**

Room Temp

* Some models may not display these items even if they are selected.

- Be sure to read the following regarding the display of the room and outdoor temperature.


Room Temp

– The temperature near the indoor unit.
– The temperature that is detected may be affected by the location of the unit.

Outside Air Temp

– The temperature detected near the outdoor unit.
– The temperature that is detected may be affected by factors such as the location of the unit (e.g. if it is in direct sunlight) and unit operation during defrosting.
– "Outside Air Temp" will not display after stopping or immediately after starting.


- Press the Menu/Enter button to confirm the settings and to return to the Basic Screen.




■Celsius / Fahrenheit

Operation Method


1

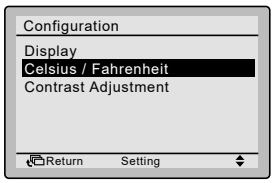


- Display the Configuration menu.
- Press the ▼▲ (Up/Down) buttons to select Celsius / Fahrenheit and press the Menu/Enter button.

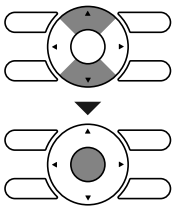

2

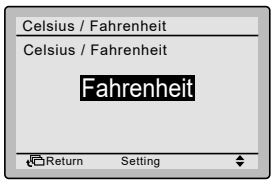


- Press the ▼▲ (Up/Down) buttons to select Fahrenheit or Celsius.
- Press the Menu/Enter button to confirm the settings and to return to the Basic Screen.

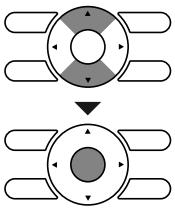


■Contrast Adjustment

Operation Method


1

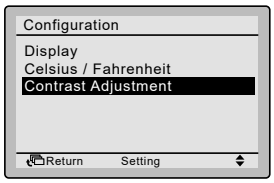


- Display the Configuration menu.
- Press the ▼▲ (Up/Down) buttons to select Contrast adjustment and press the Menu/Enter button.

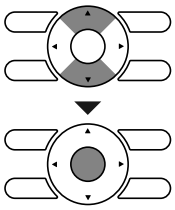

2

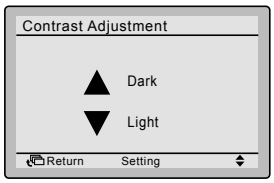

- Press the ▼▲ (Up/Down) buttons until you reach the desired contrast.
- Press the Menu/Enter button to confirm the setting and to return to the Basic Screen.

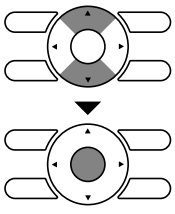


Menu Manipulation

Current Settings


■Overview of the Current Settings

Operation Method


1

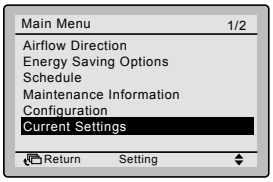


- Display the Main Menu. (See "Manipulating the Main Menu" on page 21).
- Press the ▼▲ (Up/Down) buttons to select Current Settings and press the Menu/Enter button.

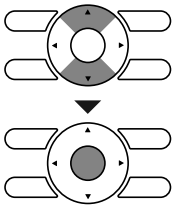

2

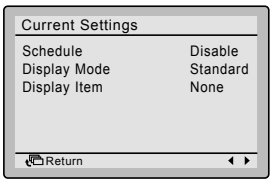

- A list showing the status of the current settings will appear.
- Press the Cancel button to return to the Main Menu.



Display items

Schedule	Display Mode	Display Item


* Display items may differ depending on the model. Only the items that can be set are displayed.

Clock & Calendar


■Date & Time

Operation Method


1

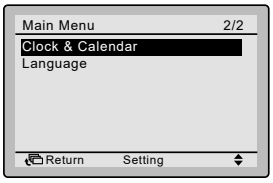


- Display the Main Menu. (See "Manipulating the Main Menu" on page 21).
- Press the ▼▲ (Up/Down) buttons to select Clock & Calendar and press the Menu/Enter button.

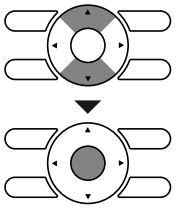


2

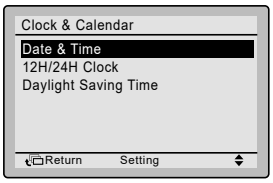


- Press the ▼▲ (Up/Down) buttons to select Date & Time and press the Menu/Enter button.

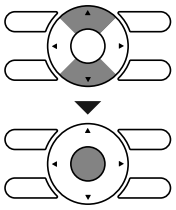

3

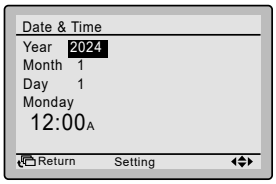

- Use the ▼▲ (Up/Down) buttons to change the date and time.
- Move the cursor using the ◀▶ (Left/Right) buttons.
- Press the Menu/Enter button when all changes are made. The confirmation screen will appear.

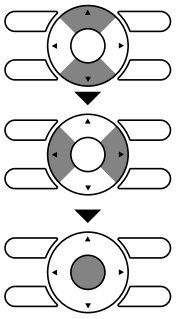


⚠ Caution


- By default, Daylight Saving Time (DST) is active. The following rules apply:
  - Start: Second Sunday of March 2:00 am
  - End: First Sunday of November 2:00 am
- Please consult your Daikin dealer if the DST settings need to be changed.

Note
The day of the week is set automatically.

4

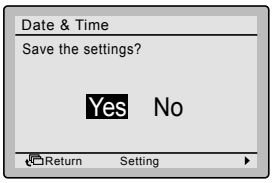

- Press the ◀▶ (Left/Right) button to select Yes.
- Press the Menu/Enter button to confirm the settings and to return to the Basic Screen.

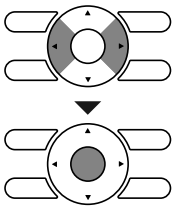


Menu Manipulation


■12H/24H CLOCK

Operation Method


1

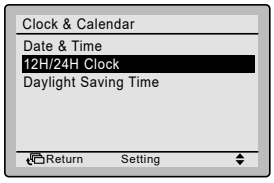

- Display the Clock & Calendar menu. (See "Date & Time" on page 38).
- Press the ▼▲ (Up/Down) buttons to select 12H/24H Clock and press the Menu/Enter button.

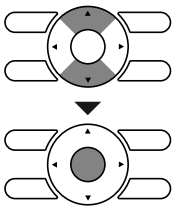


2

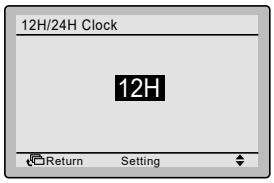


- Press the ▼▲ (Up/Down) buttons to select 12H or 24H.
- The confirmation screen will appear when the Menu/Enter button is pressed.


Note
By default, the time display is set to the 12H format.

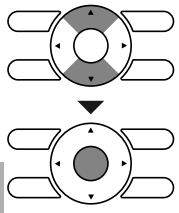

3

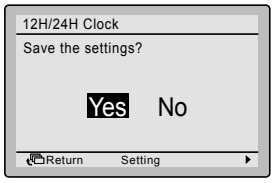


- Press the ◀▶ (Left/Right) buttons to select Yes.
- Press the Menu/Enter button to confirm the setting and to return to the Main Menu.

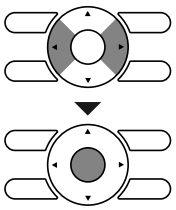


■Daylight Saving Time

Operation Method

1

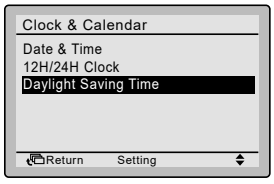


- Display the Clock & Calendar menu. (See "Date & Time" on page 38).
- Press the ▼▲ (Up/Down) buttons to select Daylight Saving Time and press the Menu/Enter button.

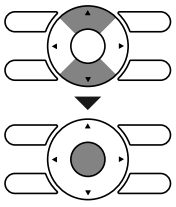


2




- Press ▼▲ (Up/Down) buttons to select Enable or Disable.
- Press Menu/Enter button to display the setting confirmation screen.

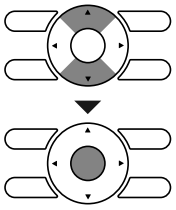

3

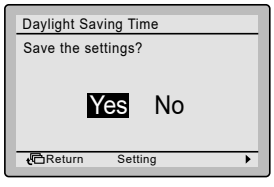

- Press the ◀▶ (Left/Right) buttons to select Yes.
- Press the Menu/Enter button to confirm the setting and to return to the Main Menu.

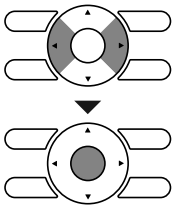


Language


■Select the Language

Operation Method

1

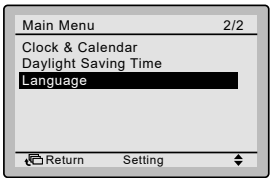


- Display the Main Menu. (See "Manipulating the Main Menu" on page 21).
- Press the ▼▲ (Up/Down) buttons to select **Language** and press the Menu/Enter button.

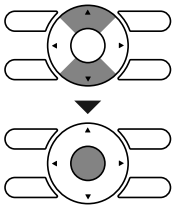

2



- Press the ▼▲ (Up/Down) buttons to select the preferred language (English, French or Spanish).
- Press the Menu/Enter button to confirm the settings and to return to the Basic Screen.

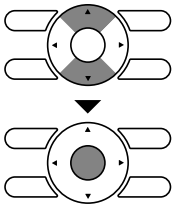

Maintenance

⚠ Caution

- **Do not wash the remote controller.**
  Doing so may cause electric leakage and result in electric shocks or fire.



- **Be sure to stop the operation of the air conditioner and turn off the power supply breaker when performing maintenance activities.**
  Failure to do so may result in electric shocks or injury.



Maintenance of Unit and the LCD display

Note:

- Wipe the LCD display and the rest of the surface of the remote controller with a dry cloth when they become dirty.
- If the dirt on the surface cannot be removed, soak the cloth in neutral detergent diluted with water, squeeze the cloth tightly, and clean the surface. Wipe the surface with a dry cloth afterwards.
- Do not use any paint thinner, organic solvent or strong acid.

⚠ Warning

Do not use flammable materials (e.g., hair spray or insecticide) near the air conditioner.
Do not clean the product with organic solvents such as benzine or paint thinner.
The use of organic solvents may cause crack damage to the product, electric shocks or fire.



Reference Information

Error Code Display


■Contact your Daikin dealer in the following cases


Warning

When the air conditioner is malfunctioning (e.g., giving off a burning odor), stop the air conditioner and turn off the power.
Continued operation under such circumstances may result in failure, electric shocks or fire. Contact your Daikin dealer.


Operation Method

1

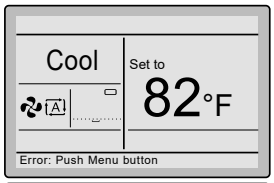


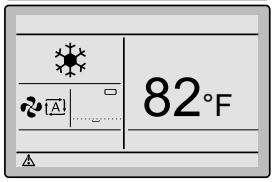

- If an error occurs, the error message or error icon and the operation lamp will blink.
- To display the error code and contact information, the Menu/Enter button needs to be enabled (See "Manipulating the Main Menu" on page 21).
- Press the Menu/Enter button.

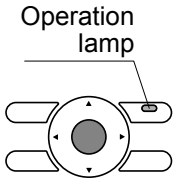

2

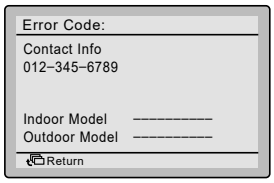

- The error code blinks and the contact address will appear.
- Notify your Daikin dealer of the Error code and Model name.